

NetSim[®]

Accelerate Network R & D

5G NR

A Network Simulation & Emulation Software

By



The information contained in this document represents the current view of TETCOS LLP on the issues discussed as of the date of publication. Because TETCOS LLP must respond to changing market conditions, it should not be interpreted to be a commitment on the part of TETCOS LLP, and TETCOS LLP cannot guarantee the accuracy of any information presented after the date of publication.

This manual is for informational purposes only.

The publisher has taken care of the preparation of this document but makes no expressed or implied warranty of any kind and assumes no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages in connection with or arising out of the use of the information contained herein.

Warning! DO NOT COPY

Copyright in the whole and every part of this manual belongs to TETCOS LLP and may not be used, sold, transferred, copied or reproduced in whole or in part in any manner or in any media to any person, without the prior written consent of TETCOS LLP. If you use this manual, you do so at your own risk and on the understanding that TETCOS LLP shall not be liable for any loss or damage of any kind.

TETCOS LLP may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from TETCOS LLP, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places, and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, email address, logo, person, place, or event is intended or should be inferred.

Rev 15.0 (V), Mar 2026, TETCOS LLP. All rights reserved.

All trademarks are the property of their respective owner.

Contact us at

TETCOS LLP

#214, 39th A Cross, 7th Main, 5th Block Jayanagar,

Bangalore – 560 041, Karnataka, INDIA.

Phone: +91 80 26630624

E-Mail: sales@tetcos.com

Visit: www.tetcos.com

Contents

1	Introduction to 5G simulation with NetSim	8
2	Simulation GUI	8
2.1	Create Scenario	8
2.2	NetSim 5G Network Setup	9
2.2.1	Deployment Architecture	9
2.2.2	Device Placement	10
2.2.3	NSA Deployment Device Connectivity	10
2.2.4	Grid Settings	11
2.3	Devices Specific to NetSim 5G NR Library	11
2.4	GUI Parameters in 5G NR	13
2.4.1	Devices: Click and drop into environment	28
3	Model Features	29
3.1	The 5G Frame Structure	29
3.2	Data Transmission Overview	30
3.3	5G NR Stack	32
3.4	SDAP (Specification: 37.324)	32
3.4.1	5G QoS characteristics	33
3.5	RLC (Based on specification 38.322)	34
3.6	RLC-AM (Based on specification 38.322)	36
3.6.1	Transmit Operations	38
3.6.2	Receive Operations	39
3.6.3	Actions when an RLC PDU is received from a lower layer	39
3.6.4	Reception of a STATUS report	39
3.7	PDCP (Based on specification 38.322)	40
3.8	MAC Layer	40
3.8.1	Overview	40
3.8.2	MAC Scheduler: Introduction	40
3.8.3	Round Robin Scheduler	41
3.8.4	Proportional Fair Scheduler	41
3.8.4.1	Implementation	42
3.8.4.2	Remarks	42
3.8.5	Max Throughput Scheduler	43
3.8.6	Special cases	43
3.8.7	Active Queue Management (AQM)	44
3.8.7.1	Overview	44
3.8.7.2	Supported Algorithms	44
3.8.7.3	Configuration	45
3.8.7.4	AQM Metrics and Log	45
3.8.8	Log File	45
3.9	PHY Layer	46
3.9.1	Overview of the PHY implementation	46
3.9.2	Transmit power, Total Radiated power and EIRP	47
3.9.3	MIMO and Beamforming	48
3.9.4	Type-1 Codebook (per TS 38.214)	49
3.9.5	MIMO (Digital) Beamforming Assumptions in NetSim	51
3.9.6	Analog beamforming in the SSB	52

3.9.6.1	Assumptions	54
3.9.6.2	Logging	54
3.9.7	Rank Estimation	55
3.9.7.1	Logging of the Channel Rank	55
3.9.8	Fast fading	56
3.9.8.1	Rician Fading for MIMO Systems	56
3.9.9	Antenna: Omni and Sector	56
3.9.10	NR Frequency Bands	57
3.9.10.1	NR Band – FR 1	57
3.9.10.2	NR Band – FR 2	59
3.9.11	UE channel bandwidth	60
3.9.11.1	General	61
3.9.12	Frame structure and physical resources	61
3.9.12.1	Numerologies	61
3.9.12.2	Frames and subframes	61
3.9.12.3	Slots	61
3.9.12.4	Slot structure in NetSim	62
3.9.13	Channel state information	64
3.9.13.1	Channel quality indicator (CQI)	64
3.9.14	Modulation order, code rate, and TBS determination	65
3.9.14.1	MCS tables	66
3.9.15	Transport block size (TBS) determination	71
3.9.16	HARQ	72
3.9.16.1	Introduction	72
3.9.16.2	Implementation in NetSim	73
3.9.16.3	Assumptions and limitations	74
3.9.16.4	Transmission flow	74
3.9.16.5	Special cases	75
3.9.16.6	Logging	75
3.9.16.7	HARQ turn off	76
3.9.17	Segmentation of transport block into code blocks	76
3.9.18	BLER and CQI/MCS selection	77
3.9.19	BLER-MCS-SINR Curves	78
3.9.20	Outer Loop Link Adaptation (OLLA)	78
3.9.21	Out of coverage	80
3.9.22	Carrier Aggregation	81
3.9.23	CA Configuration Table (based on TR 38 716 01-01 Rel 16 NR)	81
3.9.24	PHY: Omitted Features	87
3.10	Supported Max Data Rate	87
3.11	Propagation Models (Per 3GPP TR 38.900)	88
3.11.1	Overview	88
3.11.2	Pathloss Formulas	89
3.11.3	LOS Probability	91
3.11.4	O2I Penetration Loss	92
3.11.4.1	O2I Building Penetration Loss	92
3.11.4.2	O2I Model Usage	93
3.12	Additional Loss Model	93
3.12.1	Configuration	94
3.12.2	Running Simulation	97

3.13	Downlink Interference Model	99
3.13.1	Configuration	99
3.13.2	Graded Distance-Based Wyner Model	100
3.13.2.1	Technical Description	101
3.13.3	Exact Geometric Model	103
3.13.4	Interference Modeling in OFDM in NetSim	105
3.13.4.1	Interference in MIMO	105
3.13.4.2	Fast Fading Component of Interfering Signals	106
3.13.4.3	Limitations	106
3.14	Uplink Interference Model	106
3.15	5G Core	107
3.15.1	5G Interfaces	109
3.15.2	Cell Selection and UE Attach Procedure	111
3.15.3	5G Core Connection Management Process	113
3.16	5G Non-Stand Alone (NSA)	114
3.16.1	Overview	114
3.16.2	Option 4/4a	115
3.16.2.1	Option 4	115
3.16.2.2	Option-4a	116
3.16.3	Option 7/7a	117
3.16.3.1	Option-7	117
3.16.3.2	Option-7a	118
3.17	NSA Packet Flow	119
3.17.1	Option 4	119
3.17.2	Option 4a	121
3.17.3	Option 7	124
3.17.4	Option 7a	126
3.18	Handover	128
3.18.1	Use of SNR Instead of RSRP	128
3.18.2	Handover Algorithm	128
3.18.3	Ping Pong Handovers	129
3.18.4	Packet Flow During Handover	129
3.18.5	Handover Interruption Time	131
3.18.6	Time-to-Trigger	132
3.18.6.1	Assumptions and Limitations	134
3.18.6.2	Algorithm for Implementation in NetSim	134
3.18.6.3	Configuring Time-to-Trigger	135
3.18.6.4	Enabling the LTENR Handover Log	136
3.18.7	Buffer Transfer and Timers	137
3.19	Network Slicing	137
3.19.1	RAN Slicing	137
3.19.2	Slice Configuration	138
3.19.2.1	Slice Configurator GUI	140
3.19.3	Recording Slice-Based Resource Allocation	142
3.19.4	Plotting Slicing Parameters	145
3.19.5	Limitations	146
3.20	LTENR Results, Packet Trace and Plots	147
3.20.1	LTE NR Log	147
3.20.2	PDCP and RLC Headers Logged in Packet Trace	148

3.20.3	LTENR Event Trace	149
3.20.3.1	Sub Event Types	149
3.21	Radio Measurements Log File	151
3.22	Radio Resource Allocation Log File	154
3.23	Handover Log File	156
3.24	Code Block Log File	157
3.25	OLLA Log File	159
3.26	LTENR PRB Utilization Log File	161
3.27	Enable Detailed Logs in 5G NR	163
4	Featured Examples	165
4.1	Derive from 3GPP standards the theoretical data rate and throughput for a 1gNB - 2UE scenario, and compare with simulation	165
4.1.1	Introduction	165
4.1.2	Network Setup	166
4.1.3	Network Settings	167
4.1.4	Results	169
4.1.5	Results and discussion	172
4.1.6	Exercises	172
4.2	Effect of distance on pathloss, SINR and MCS (7-Cell Hexagonal Layout, Urban Macro Propagation, NLOS)	173
4.3	Effect of UE distance on throughput in FR1 and FR2	180
4.3.1	Frequency Range - FR1	181
4.3.2	Frequency Range - FR2	183
4.4	Impact of MAC Scheduling algorithms on throughput, in a multi-UE scenario	185
4.4.1	Multi UE throughput with UEs at different distances and channel is not time varying.	186
4.4.2	Multi UEs at different distances with a time varying channel	189
4.5	Max Throughput for different MCS and CQI	192
4.6	Load balancing in 5G using Cell Individual Offset (CIO)	195
4.6.1	Introduction	195
4.6.2	Network Setup	196
4.6.3	Network Settings	196
4.6.4	Results	197
4.6.5	Discussion	199
4.7	4G vs. 5G: Capacity analysis for video downloads	201
4.7.1	4G	202
4.7.2	5G	204
4.7.2.1	Theoretical PHY Rate Calculation	205
4.7.2.2	Results:	206
4.8	5G-Peak-Throughput	208
4.8.1	3.5 GHz n78 band	209
4.8.2	26 GHz n258 band	211
4.9	Impact of distance on throughput for n261 band in LOS and NLOS states	213
4.9.1	DL: UL Ratio 4:1	214
4.9.1.1	LOS and NLOS	214
4.9.2	DL: UL Ratio 3:2	218
4.9.2.1	LOS and NLOS	218
4.10	gNB cell radius for different data rates	221

4.10.1	3.5 GHz n78 urban gNB cell radius for different data rates	221
4.10.2	26 GHz n258 urban gNB cell radius for different data rates	223
4.11	Impact of numerology on a RAN with phones, sensors, and cameras	225
4.12	Impact of UE movement on Throughput	232
4.13	Simulate and study the 5G Handover procedure	235
4.13.1	Introduction	235
4.13.2	Network Setup	236
4.13.3	Handover Algorithm	236
4.13.4	Throughput and delay variation during handover	241
4.14	Impact of Handover margin and Time-To-Trigger on the performance of a 5G heterogeneous network	245
4.15	QoS in 5G using GBR	251
4.15.1	Introduction	251
4.15.2	Methodology	252
4.15.3	Case 1: Proportional Fair Scheduling (PFS). All UEs are static	252
4.15.4	Case 2: PFS with RG using Guaranteed Bit Rate (GBR). All UEs are static.	254
4.15.5	Case 3: PFS with RG using GBR. One of the UE's is mobile.	256
4.15.6	Obtaining the EWMA MAC Throughput and Resource share	258
4.15.7	Results and Discussion	259
5	Omitted Features	261
6	References	262

1 Introduction to 5G simulation with NetSim

NetSim 5G NR Library allows for end-to-end simulation of all layers of the protocol stack as well as applications running over the network¹. The 5G devices available in NetSim are the 5G core devices: (i) AMF, (ii) SMF, (iii) UPF, and RAN devices: (i) gNBs (ii) UEs. The Simulation is a discrete event and done at a packet level abstraction. This 5G library is designed to connect to the base component of NetSim (and in turn to other components), which provides functionalities such as the TCP/IP Network Stack, Routing algorithms, Mobility, Output Metrics, Traces etc. NetSim’s protocol source C code shipped along with (Standard / Pro versions) is modular and customizable to help researchers to design and test their own 5G protocols.

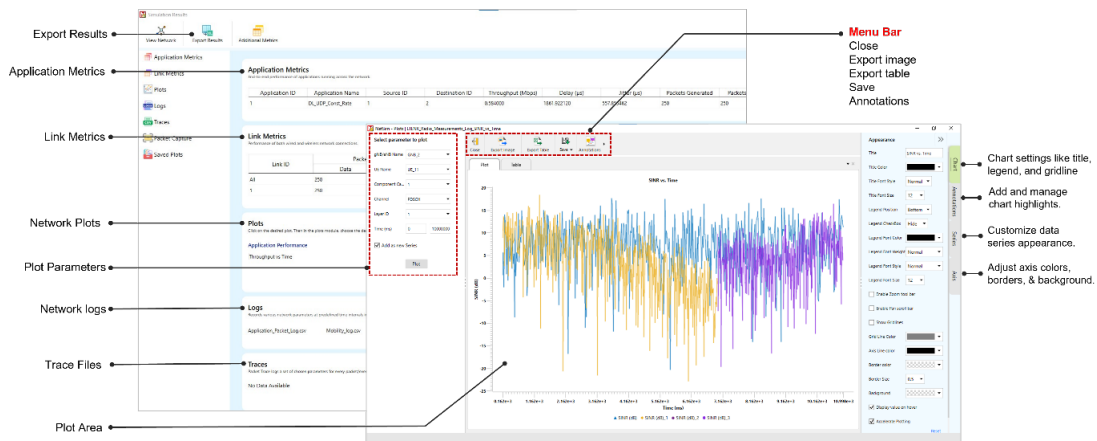
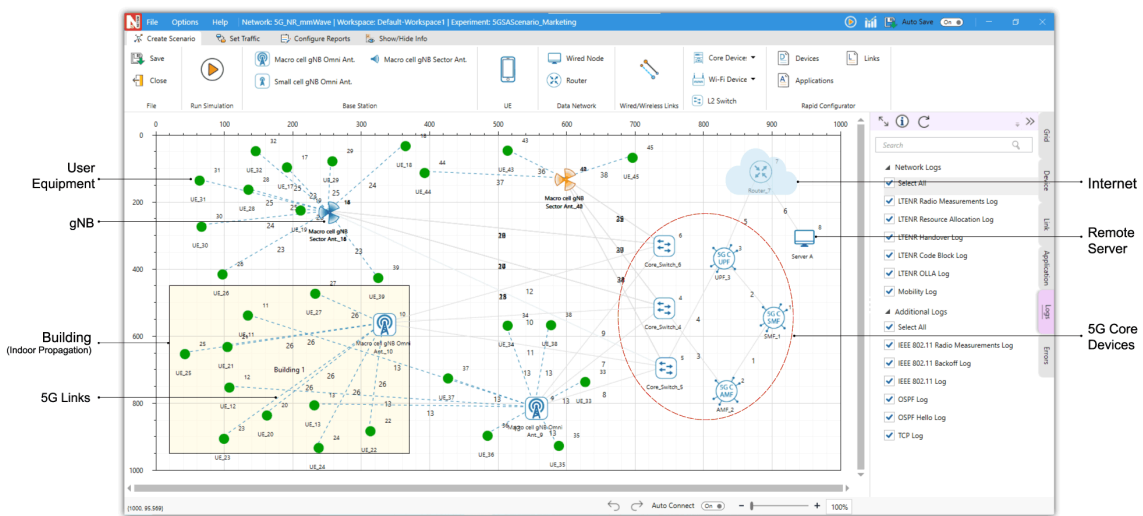


Figure 1-1: NetSim’s 5G NR design window, the results dashboard and the plots window.

2 Simulation GUI

2.1 Create Scenario

Open NetSim and click New Simulation → 5G NR as shown in Figure 2-1.

¹For an introduction to 5G see Chapter 3.

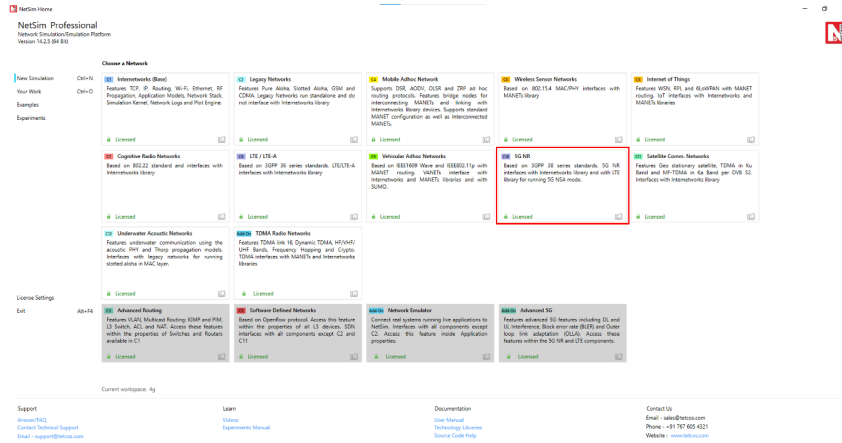


Figure 2-1: NetSim Home Screen

5G NR comes with a palette of various devices like Wired & Wireless Nodes, L2 Switch & Access Point, AMF (Access and Mobility Management Function), UPF (User Plane Function), SMF (Session Management Function) & Router, gNB (Equivalent of eNB in LTE), UE (User Equipment), and Building. Devices are connected using 3GPP defined interfaces; O-RAN defined interfaces are not available.

2.2 NetSim 5G Network Setup



Figure 2-2: NetSim 5G Network Setup window

2.2.1 Deployment Architecture

The deployment options have been grouped into 2 categories. Standalone (SA) option where there is only one independent access network (5G NR) that is connected to the 5G Core and the Non-Standalone (NSA) options where both LTE and 5G NR radio access technologies are present, where one of the access networks assist the other in connecting to either an EPC or a 5G Core.

Standalone: In 5G Standalone mode of operation in NetSim, the network can be created using the 5G Core devices which includes a single AMF, SMF and UPF to which the gNB can be connected via Layer 2 Switches. The RAN part consists of gNBs and UEs and the UEs can handle both Uplink and Downlink data transfer to and from the Data Network (DN) via the UPF.

Non-Standalone: In the Non-Standalone mode of operation in NetSim, the users can design the network scenario using different deployment options.

The NSA modes in NetSim's 5G module includes:

- Option 4 where only 5G Core devices are present, and EPC is not available. Option 4 is categorized into:
 - Option 4: Only gNB connects to all the 5G Core interfaces. eNB connects to the XN interface.
 - Option 4a: gNB connects to all 5G Core interfaces and eNB connects to AMF and UPF through respective interfaces.
- Option 7 where only 5G Core devices are present, and EPC is not available. Option 7 is categorized into:
 - Option 7: eNB connects to all 5G Core interfaces. gNB connects only to the XN interface.
 - Option 7a: gNB connects to AMF and UPF through the respective interfaces and eNB connects to all the 5G Core interfaces.

2.2.2 Device Placement

NetSim places the 5G core devices (AMF, SMF, UPF and Switches) / LTE EPC by default onto the grid.

- Only one 5G Core and/or LTE EPC is currently supported.
- Users cannot remove 5G Core devices and/or LTE EPC, or their interconnecting links.
- Users may move these devices in the grid.
- Users can drop gNBs/eNBs which get automatically connected to 5G Core. If a gNB/eNB is removed, the connected links to the core switches are automatically removed.
- Users can drop UEs and must connect them to gNBs/eNBs via links.
- IP addressing is automatically set by NetSim. It is recommended not to change the default IP addresses.

NOTE: In NSA Mode the UEs get automatically connected to its master node. Only for secondary node UEs must be connected manually.

2.2.3 NSA Deployment Device Connectivity

The device connectivity rules are explained below. Example screenshots are available in section 3.16.

Option 4 / 4a

- UE should mandatorily be connected to the master node (MN) first. In option 4, the MN is the gNB.

- UE should mandatorily be connected to the secondary node (SN) next. In option 4, the SN is the eNB.
- UE cannot be connected to any other device.
- The data (external) network connects to the 5G core through the UPF. This is achieved by first connecting a router (let's call it R1) to the UPF.
- Switches, nodes, APs and other routers can now be connected to R1
- Connectivity rules for the devices within the data network follow the guidelines specified in the Internetwork library document.

Option 7 / 7a

- UE should mandatorily be connected to the master node (MN) first. In option 7, the MN is the eNB.
- UE should mandatorily be connected to the secondary node (SN) next. In option 7, the SN is the gNB.
- UE cannot be connected to any other device.
- The data (external) network connects to the 5G core through the UPF. This is achieved by first connecting a router (let's call it R1) to the UPF.
- Switches, nodes, APs and other routers can now be connected to R1.
- Connectivity rules for the devices within the data network follow the guidelines specified in the Internetwork library document.

2.2.4 Grid Settings

- NetSim allows users to design the network on a rectangular grid. The major and minor grid lines are displayed; major grid line values along the X and Y coordinate are displayed. Each device's X, Y coordinate is determined by its location on the grid.
- Users can choose the grid size prior to placement of the first device.
- Users can change the grid size after placing devices on the grid, but only if the new grid size is larger than the current grid size and the grid origin does not prevent the change.
- The grid length can be in the range of 10 m to 10⁹ m.

2.3 Devices Specific to NetSim 5G NR Library

- UE: User Equipment.
 - Each UE has a single LTE NR interface with an infinite buffer. It can connect to a gNB (Base Station or BS) in both FR1 (μ -Wave) and FR2 (mm-Wave) bands.
 - A UE can be stationary or mobile.
 - The UE's location is determined by its (X, Y) co-ordinate on the grid or by its (Lat, Lon) when using a map background.

- gNB: This represents a base station (BS) with all the components i.e., antennas, radio, baseband, and the protocol stack. NetSim currently does not allow for the gNB to be split into RU, DU and CU.
 - NetSim supports 3 types of gNBs (i) Macro Cell gNB Omni Antenna (ii) Macro Cell gNB Sector Antenna and (iii) Small Cell gNB Omni Antenna. The macro cell gNBs by default have a transmit power setting of 40 dBm and operate in the FR1 3.5 GHz n78 band. The small cell gNBs have a transmit power setting of 30 dBm and operate in the FR2 28 GHz n261 band. Macro cell gNBs can be equipped with either omni-directional or sector antennas, and they are named based on their respective types.
 - It has a 5G RAN interface for wireless connectivity to UEs.
 - A gNB can be configured as a μ -Wave (FR1, sub 6GHz) or a mm-Wave (FR2) BS by appropriately selecting the frequency of operation.
 - It has a 5G N3 interface for wired connectivity to UPF through an L2 Switch,
 - It has a 5G N1 N2 interface for wired connectivity to AMF through an L2 Switch, and
 - It has a 5G XN interface for wired connectivity between the gNBs through an L2 Switch.
 - Every gNB has an infinite buffer.
- UPF (User Plane Function): User Plane Function has 5G N4 interface for wired connectivity to SMF, 5G_N3 interface for wired connectivity to gNB through L2 Switch, and 5G N6 interface for wired connectivity to router in NG core which in turn can connect to Switches, APs, Servers etc.
- SMF (Session Management Function): Session Management Function has 5G N11 interface for wired connectivity to AMF and 5G N4 interface for wired connectivity to UPF.
- AMF (Access and Mobility Management Function): Access and Mobility Management Function has 5G N11 interface for wired connectivity to SMF and 5G N1 N2 interface for wired connectivity to gNBs through L2 Switch.



Figure 2-3: 5G NR Device Palette in GUI

- Building: Users can place gNBs, UEs inside buildings to simulate indoor RF propagation effects.
- To add building on the grid, go to options → Configure Building.

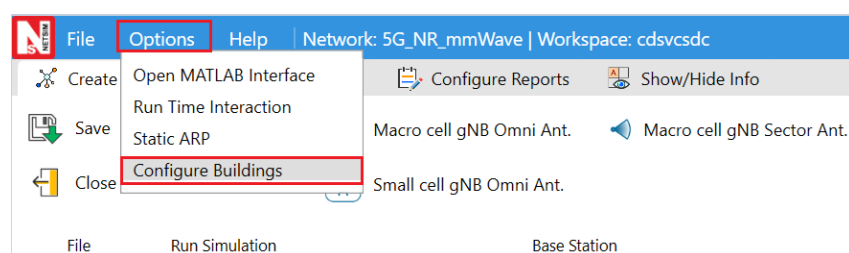


Figure 2-4: Configuring Building in GUI

Click on Add and set the building properties as required and click on configure. The building will be placed on a grid as per the settings.

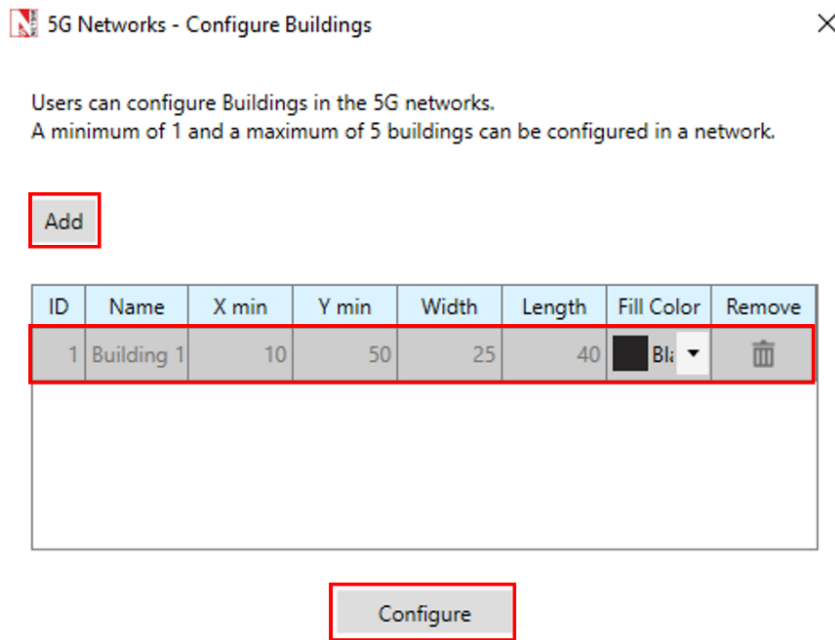


Figure 2-5: Properties settings for building

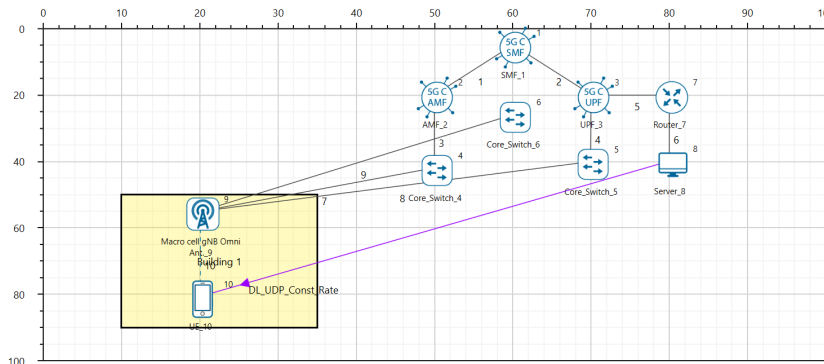


Figure 2-6: The screenshot displays the building as configured in the settings

2.4 GUI Parameters in 5G NR

The 5G NR parameters can be accessed by right clicking on a gNB or UE and selecting Interface Wireless (5G RAN) Properties → Datalink and Physical Layers.

NOTE: For detailed information on RLC, please refer to RLC (based on specification 38.322)

Table 2-1: 5G Config Properties — gNB Data Link Layer

Parameter	Type	Range	Description
gNB Properties — Interface (5G RAN) – Data Link Layer			
Scheduling Type	Global	Round Robin	This is usually done to load balance and share system in circular order, handling all processes without priority
	Global	Proportional Fair	It is based upon maintaining a balance by trying to maximize total throughput while at the same time allowing all users at least a minimal level of service.
	Global	Max Throughput	Maximum throughput scheduling is a procedure to maximize the total throughput of the network by giving scheduling priority to the least “expensive” data flows.
	Global	PFS with Rate Guarantee	NetSim uses a proportional fair scheduling (PFS) algorithm in the gNB to provide guaranteed bit rate (GBR) services for user equipment (UEs) in both downlink (DL) and uplink (UL). It enables users to configure GBR while dynamically allocating resources to maintain the minimum required bit rate.
	Local	Configuring GBR UEs	NetSim uses a proprietary PF based scheduling algorithm in the gNB to provide Guaranteed Bit Rate (GBR) services for User Equipment (UEs) in both downlink (DL) and uplink (UL). Users can configure GBR for UEs and the algorithm dynamically allocates resources to maintain the minimum required bit rate. This option allows you to configure the rate guarantee for GBR UEs.
	Local	GBR Bias Learning Rate	The GBR Bias Learning rate means the “penalty” for not meeting a user’s throughput guarantee and is continuously adjusted based on the difference between achieved and guaranteed throughput. If the EWMA MAC throughput is below the guaranteed throughput, the Index Bias (Lagrange multiplier) increases, raising the user’s priority and allocating more resources. If the EWMA MAC throughput exceeds the guaranteed throughput, the Index Bias decreases, lowering the user’s priority and freeing resources for others.
Local	GBR UE Index Bias Maximum	The maximum value the GBR Index Bias (Lagrange Multiplier) can range from 0 to 100.	

Continued on next page

Table 2-1 continued from previous page

Parameter	Type	Range	Description
Slicing	Global	TRUE, FALSE	Network slicing is a key technology in 5G networks that enables the efficient allocation of radio access network (RAN) resources to guarantee specific service level agreements (SLAs) for different service categories. This capability allows network operators to create multiple virtual networks, or “slices,” on top of a shared physical infrastructure, each tailored to meet the diverse requirements of various use cases and applications. This parameter allows users to enable/disable network slicing when simulating 5G.
Resource Sharing Technique	Global	Static, Dynamic	The two resource sharing options are defined as Static (or Hard Slicing) and Dynamic (or Soft Slicing). Static Resource Sharing: slices are allocated a fixed percentage of resources. It supports eMBB, URLLC, MIoT, V2x slice types. Dynamic Resource Sharing: the resource sharing is handled by the algorithm dynamically – it uses PFS (Proportional Fair Scheduling) with a rate guarantee, using stochastic online learning. This algorithm is derived from non-linear optimization theory.
EWMA Learning rate	Local	Default: 0.02 (Static), 0.0005 (Dynamic). Range: 0.00000001 (10^{-8}) to 0.1 (10^{-1})	EWMA Learning Rate (α) determines how important the current observation is in the calculation of the EWMA. The expression below shows how the current throughput is based on the previous throughput and the current rate. $\theta_t = (1 - \alpha)\theta_{t-1} + \alpha R_t$
Lagrange multiplier learning rate	Local	Default: 0.000005. Range: 0.00000001 (10^{-8}) to 0.1 (10^{-1})	The Lagrange multiplier measures the “penalty” for not meeting a user’s throughput guarantee and is continuously adjusted based on the difference between achieved and guaranteed throughput.
SSB Periodicity	Local	5, 10, 20, 40, 80, 160 ms	It is a time interval between UE Measurement Report.
RRC MIB Period (ms)	Local	80	The UE needs to first decode MIB for it to receive other system information. MIB is transmitted on the DL-SCH (logical channel: BCCH) with a periodicity of 80 ms and variable transmission repetition periodicity within 80 ms. MIB packets can be seen in the NetSim packet trace post simulation under Control Packet type.

Continued on next page

Table 2-1 continued from previous page

Parameter	Type	Range	Description
RRC SIB Period (ms)	Local	160	SIB1 also contains radio resource configuration information that is common for all UEs. SIB1 is transmitted on the DL-SCH (logical channel: BCCH) with a periodicity of 160 ms and variable transmission repetition periodicity within 160 ms. SIB1 is cell-specific. SIB1 packets can be seen in the NetSim packet trace post simulation under Control Packet type.
PDCP Header Compression	Local	True / False	Header compression of IP data flows using the ROHC protocol, compresses all the static and dynamic fields.
PDCP Discard Delay Timer	Local	50, 150, 300, 500, 750, 1500	The discard Timer expires for a PDCP SDU, or the successful delivery of a PDCP SDU is confirmed by PDCP status report, the transmitting PDCP entity shall discard the PDCP SDU along with the corresponding PDCP Data PDU.
PDCP Out of Order Delivery	Local	True / False	Complete PDCP PDUs can be delivered out-of-order from RLC to PDCP. It can be enabled or disabled by setting the value “TRUE” or “FALSE”.
PDCP T Reordering Timer	Local	0–500 ms	This timer is used by the receiving side of an AM RLC entity in order to detect loss of RLC PDUs at lower layer. PDCP reordering is always enabled if in sequence delivery to layers above PDCP is needed.
RLC T Status Prohibit	Local	0–2400 ms	This timer is used by the receiving side of an AM RLC entity in order to prohibit transmission of a STATUS PDU. Unit=ms.
RLC T Reassembly	Local	0–200 ms	This timer is used by the receiving side of an AM RLC entity and receiving UM RLC entity in order to detect loss of RLC PDUs at lower layer. Unit=ms.
RLC T Poll Retransmit	Local	5–4000 ms	This is used by the transmitting side of an AM RLC entity in order to retransmit a poll.
RLC Poll Byte	Local	1kB–40mB	This parameter is used by the transmitting side of each AM RLC entity to trigger a poll for every pollByte bytes.
RLC Poll PDU	Local	p4–p65536 (multiples of 8)	This parameter is used by the transmitting side of each AM RLC entity to trigger a poll for every pollPDU PDUs.
RLC Max Retx Threshold	Local	t1, t2, t3, t4, t6, t8, t16, t32	This parameter is used by the transmitting side of each AM RLC entity to limit the number of retransmissions of an AMD PDU.

Continued on next page

Table 2-1 continued from previous page

Parameter	Type	Range	Description
HARQ Mode	Local	TRUE, FALSE	Hybrid automatic repeat request (hybrid ARQ or HARQ) is a combination of retransmissions and error correction. The HARQ protocol runs in the MAC and PHY layers. In the 5G PHY, a code block group (CBG) is transmitted over the air by the transmitter to the receiver. If the CBG is successfully received the receiver sends back an ACK, else if the CBG is received in error the receiver sends back a NACK (negative ACK). If the transmitter receives an ACK, it sends the next CBG. However, if the transmitter receives a NACK, it retransmits the previously transmitted CBG. Large number packet errors can be observed in packet traces if HARQ is turned OFF.
Max HARQ process count	Local	2,4,6,10,12,16	A HARQ entity is defined for each gNB-UE pair, separately for Uplink and Downlink and for each component carrier. Max number of HARQ processes is 8 in 4G and 16 in 5G.
Max CBG per TB	Local	2,4,6,8	Each Transport block is split into Code blocks (CBs) and CBs are grouped into Code Block Groups (CBGs). A Code Block group can have up to 2/4/6/8 CBs.
HARQ Retry Limit	Local	0–4s	HARQ Retry Limit specifies the number of retransmission attempts that will be made whenever a Code Block fails due to error.
Handover Interruption time	Global	0–500ms	The handover process in NetSim is based on event A3 i.e., the target signal strength is offset (3 dB) higher than the source signal strength. Handover interruption time (HIT) is added at the time of handover command is delivered to the UE. During this time there is no data plane traffic flow to the UE from the source/target. Handover interruption time can be varied from 0 to 500ms.
Handover Margin	Global	0–10dB	The handover margin is the offset in dB that is used as part of the event A3 handover process in NetSim. Handover is triggered when the target signal strength is offset higher than the source signal strength. Range for Handover margin is from 0.0 to 10.0 with 3.0 as default.

Continued on next page

Table 2-1 continued from previous page

Parameter	Type	Range	Description
Time to Trigger	Global	0–5120ms	With Time-to-Trigger, the handover is initiated only if the triggering requirement is fulfilled for a time interval specified by Time-to-Trigger (ms). This parameter can decrease the number of unnecessary handovers and effectively avoid Ping-Pong effects. 3GPP defines 16 valid values for time-to-trigger (all in milliseconds): 0, 40, 64, 80, 100, 128, 160, 256, 320, 480, 512, 640, 1024, 1280, 2560, and 5120. Users can enter any value between 0 to 5120 in milliseconds.
Cell Individual Offset (CIO)	Local	–10 to +10 dB	CIO is added to the measured SINR of the target cell during handover evaluation. A positive CIO increases the signal value and a negative CIO decreases the signal value. CIO is used to control handovers and distribute load across cells.

Table 2-2: *5G Config Properties — gNB Physical Layer*

Parameter	Type	Range	Description
Interface (5G RAN) – Physical Layer			
Protocol	Fixed		LTE NR (New Radio) is the 5G radio access technology. LTE-NR has the RLC and PDCP layers similar to LTE and has introduced a new layer named as SDAP (Service Data Adaptation Protocol). The frequency band for LTE NR is separated into two different frequency ranges: Frequency Range 1 (FR1) which includes sub-6 GHz bands and Frequency Range 2 (FR2) which includes mmWave bands.
3GPP series	Fixed		NetSim 5G library is based on the 3GPP 38.xxx series. Some features in NetSim are per Rel 16 and some others are per Rel 17.
Frame Duration (ms)	Fixed	10ms	The length of the frame in milliseconds. The FRAME DURATION is a non-editable parameter whose value is fixed at 10 ms.
Sub Frame Duration (ms)	Fixed	1ms	The length of the frame in milliseconds. The SUBFRAME DURATION is a non-editable parameter whose value is fixed at 1 ms.
Subcarrier Number Per PRB	Fixed	12	The number of Subcarriers per PRB is a non-editable parameter whose value is fixed at 12.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
gNB Height (m)	Local	1–150m	Height of the base station (gNB) in meters. NetSim implements the 3GPP propagation models in which the Indoor gNB (placed within a building) range is 1 to 10 meters, while the Outdoor gNB range is 1 to 150 meters. NetSim only enforces the upper limit of 150m for both indoor and outdoor gNBs.
TX Power (dBm)	Local	–40 to 100 dBm	In NetSim the Tx power range is –40 dBm to 100 dBm. The default value for Tx power is 23 dBm for UEs and 40 dBm for gNBs. When running in MIMO mode the transmit power is split equally amongst all the MIMO layers. The number of MIMO layers is $\min(N_t, N_r)$.
Duplex Mode	Local	TDD, FDD	Time Division Duplexing: Downlink (DL) and uplink (UL) transmissions are on the same frequency band but separated in time. Depending on the DL:UL ratio, slots are allocated for DL/UL transmissions. Frequency Division Duplexing: There are different frequency bands for UL and for DL. Hence UL and DL transmissions can occur simultaneously. NetSim supports both FDD and TDD bands and various CA configurations and Operating bands, for TDD and FDD, in FR1 and FR2 are available.
CA Type	Local	Intra-band contiguous CA, Intra-band non-contiguous CA, Single Band	In Carrier aggregation (CA) multiple component carriers (CCs) are combined to usually increase the bandwidth, and thereby increase the bit rate. CA combinations are divided into intra-band (contiguous and non-contiguous) and inter-band. Intra-band contiguous CA configuration refers to contiguous carriers aggregated in the same operating band. Intra-band non-contiguous CA configuration refers to non-contiguous carriers aggregated in the same operating band. Inter-band CA configuration refers to the aggregation of component carriers in different operating bands, where the carriers aggregated in each band can be contiguous or non-contiguous. The Single Band drop-down options are per TS 38.101-1 for FR1 and 38.101-2 for FR2.
CA Configuration	Local	Depends on CA Type	The dropdown shows the frequency band options for the user to choose from.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
CA Count	Fixed	Depends on CA Type	This is a non-editable parameter that shows the number of component carriers based on the CA configuration. CA count would be 1 for Single Band configuration and will be greater than or equal to 2 for carrier aggregation.
NOTE: For detailed information on Frequency Range (FR1 & FR2), please refer to PHY Layer.			
Slot Type	Local	Mixed, Downlink, Uplink	Mixed: In Mixed slot type, there will be both downlink and uplink slots allocated. The DL:UL ratio will determine how many slots are allocated for downlink and for uplink. The default value of the DL:UL ratio is 1:1. Uplink: In uplink slot type, there are only uplink slots, and the DL:UL ratio will be fixed by NetSim as 0:1. Note that uplink applications running TCP protocol will experience zero throughputs since there will be no downlink slots available for ACK transmissions. Downlink: In downlink slot type, there are only downlink slots and the DL:UL ratio will be fixed by NetSim as 1:0. Note that downlink applications running TCP protocol will experience zero throughputs since there will be no uplink slots available for ACK transmissions.
Frequency Range	Local	FR1 & FR2	The frequency bands for 5G NR are separated into two frequency ranges. First, is Frequency Range 1 (FR1) which includes sub-6 GHz frequency bands. The other is Frequency Range 2 (FR2) which includes frequency bands in the mmWave range. FR1: 410 MHz – 7125 MHz. FR2-1: 24250 MHz – 52600 MHz. FR2-2: 52600 MHz – 71000 MHz. NetSim supports both FR1 and FR2. This is a non-editable parameter shown by NetSim based on the CA configuration chosen by the user.
DL/UL Ratio	Local	a:b	Represents the ratio in which slots are assigned to downlink and uplink transmissions. The value is in the form of a:b::DL:UL. Note that the ratio 1:0 or 0:1 might lead to NIL data transmissions since the initial attachment procedures require both UL and DL control packet transmissions.
Operating Band	Fixed	n34, n38, n39, n40, n41, n50, n51, n77, n78, n79, n257, n258, n259, n260, n261, n262, n263	The operating band whose numbering is defined by 3GPP. This is a non-editable parameter (except for custom band) that is shown by NetSim based on the CA configuration chosen by the user.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
F Low (MHz)	Fixed	2010–4400 MHz	The lowest frequency of the Uplink/Downlink operating band. This is a non-editable parameter (except for custom band) shown by NetSim based on the CA configuration chosen by the user.
F High (MHz)	Fixed	2025–5000 MHz	The highest frequency of the Uplink/Downlink operating band. This is a non-editable parameter shown by NetSim based on the CA configuration chosen by the user.
Numerology	Local	$\mu = 0, 1, 2, 3, 5, 6$	Sub carrier spacing is derived from numerology per the expression $15 \times 2^\mu$ kHz. Thus, Numerology = 0 means subcarrier spacing 15 kHz, Numerology = 1 means subcarrier spacing 30 kHz, Numerology = 2 means subcarrier spacing 60 kHz, Numerology = 3 means subcarrier spacing 120 kHz, Numerology = 5 means subcarrier spacing 480 kHz, and Numerology = 6 means subcarrier spacing 960 kHz.
Channel Bandwidth (MHz)	Local	5–2000 MHz	The bandwidth can vary from 5 MHz to 100 MHz for TDD bands in FR1 frequency range and 50 MHz to 2000 MHz for TDD bands in FR2 frequency range. The bandwidth is 5 MHz to 40 MHz in case of FDD bands. Unit is MHz.
PRB Count	Local		PRB stands for physical resource block. The PRB count is dependent on Channel Bandwidth and automatically determined by NetSim. It cannot be edited in the GUI.
Guard Band (KHz)	Local	242.5–147040 kHz	Guard band is the unused part of the radio spectrum between radio bands, for the purpose of preventing interference.
Subcarrier Spacing	Local	15–960 kHz	In 5G NR, subcarrier spacing of 15, 30, 60, 120, 240, 480, and 960 KHz are supported.
Bandwidth PRB	Local	180–11520 kHz	The PRB bandwidth is dependent on numerology (μ).
Slot per Frame	Local	10, 20, 40, 80, 160, 320, 640	This represents the number of slots in a frame and is a non-editable parameter. NetSim determines the slots per frame, based on the selected numerology.
Slot per Subframe	Local	1, 2, 4, 8, 16, 32, 64	Number of slots in a sub-frame. Non-editable, determined by numerology.
Slot Duration (μ s)	Local	1000, 500, 250, 125, 62.5, 31.25, 15.63	Slot duration is a non-editable parameter that depends on numerology selected. $\mu = 0$, Slot Duration = 1000 μ s; $\mu = 1$, 500 μ s; $\mu = 2$, 250 μ s; $\mu = 3$, 125 μ s; $\mu = 4$, 62.5 μ s; $\mu = 5$, 31.25 μ s; $\mu = 6$, 15.63 μ s.
Cyclic Prefix	Local	Normal	If set to “normal” then symbols per slot is 14; if “extended” then 12.

NOTE: Cyclic Prefix is Extended only for a few CA types.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
Symbol per Slot	Local	12, 14	Depends on Cyclic prefix. Normal: 14, Extended: 12.
Overhead (%) per DL slot	Local	0.01–0.99	Fraction of symbols used for control signaling. Default: 0.14 for FR1, 0.18 for FR2, 0.25 for 4G.
Overhead (%) per UL slot	Local	0.01–0.99	Fraction of symbols used for control signaling. Default: 0.08 for FR1, 0.10 for FR2, 0.25 for 4G.
Symbol Duration (μ s)	Local	71.43, 35.71, 17.86, 8.93, 4.47, 2.23, 1.12	Symbol duration depends on numerology. Non-editable.
ANTENNA			
TX Antenna Count	Local	1–128 (gNB), 1–16 (UE)	The number of transmit antennas. This parameter takes effect during MIMO operation; the number of MIMO layers would be $\min(N_t, N_r)$, where N_t is the transmit antenna count at the transmitter and N_r is the receive antenna count at the receiver. The layer-wise gains depend on the fading model chosen and are explained in the 5G NR manual digital beamforming section.
RX Antenna Count	Local	1–128 (gNB), 1–16 (UE)	The number of receive antennas. This parameter takes effect during MIMO operation; the number of MIMO layers would be $\min(N_t, N_r)$, where N_t is the transmit antenna count at the transmitter and N_r is the receive antenna count at the receiver. The layer-wise gains depend on the fading model chosen and are explained in the 5G NR manual digital beamforming section.
Antenna Type	Fixed		NetSim supports Omnidirectional and Sector Antennas.
Orientation Angle	Local	0–360	NetSim implements a 2D parabolic sector antenna as per 3GPP TR 37.840. The boresight angle denotes the direction of maximum gain, or the highest radiated power. The angle is defined to start at 0 from the positive X-axis. If positive Y points downward, the angle increases on clockwise rotation from the positive X-axis. If positive Y points upward, the angle increases in an anti-clockwise direction from the positive X-axis. The units for the boresight angle are in degrees.
Element Gain	Local	–50 to +50	Maximum directional gain of the radiation element (in dB). Default 8 dBi.
Front to back ratio	Local	10–40	Ratio of power gain between the front and rear of a directional antenna.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
Beam width	Local	0–90	The 3 dB, or half power, beamwidth of the antenna.
PDSCH CONFIG			
MCS Table	Local	QAM64, QAM256, QAM64LOWSE	Modulation and coding scheme Table. Recommend same MCS table for PDSCH and PUSCH. For QAM64: CQI Table 1, QAM256: Table 2, QAM64LOWSE: Table 3.
X Overhead	Local	XOH0, XOH6, XOH12, XOH18	Accounts for overhead from CSI-RS, CORESET, etc.
PUSCH CONFIG			
MCS Table	Local	QAM64, QAM256, QAM64LOWSE	Same options as PDSCH.
Transform Precoding	Local	Enable/Disable	Transform Precoding is the first step to create a DFT-s-OFDM waveform. Transform Precoding is to spread UL data in a special way to reduce PAPR (Peak-to-Average Power Ratio) of the waveform. In terms of mathematics, Transform Precoding is just a form of DFT (Digital Fourier Transform).
CSIREPORT CONFIG			
CQI Table	Local	Table1, Table2, Table3	Based on 3GPP Table 5.2.2.1-2. Must match MCS table: QAM64: Table 1, QAM256: Table 2, QAM64LOWSE: Table 3.
CHANNEL MODEL			
Pathloss Model	Local	3GPP TR 38.901-7.4.1, Log Distance, None	Signal attenuation per the mean pathloss model.
Outdoor Scenario	Local	Rural Macro (RMa), Urban Macro (UMa), Urban Micro (UMi)	Per 3GPP TR 38.900 standard.
Building Height (m)	Local	5–50m	Height of building in meters.
Street Width (m)	Local	5–50m	Width of the street in meters.
Indoor Scenario	Fixed	Indoor Office	Scenario where gNB and UE are within an indoor building.
Indoor Office Type	Local	Mixed-Office, Open-Office	There are two types of Indoor Office (InH): Mixed-Office and Open-Office. An indoor scenario is defined as one where we have both gNBs and UEs present within a building. Path-loss is higher than an Open-Office scenario.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
LOS/NLOS Selection	Fixed	3GPP TR 38.901-Table 7.4.2-1, User Defined	3GPP TR 38.901-Table 7.4.2-1: The LOS mode, either Line-of-sight or Non-Line-of-sight, is based on LOS probability calculated per the standard table. User Defined: LOS probability is not per standard but is based on user input. NetSim will determine whether a device is in line-of-sight or non-line-of-sight based on the LOS probability value set by the user.
LOS Probability	Local	0 to 1	LOS Probability defines the LOS mode. If LOS Probability = 1, the LOS mode is set to Line-of-Sight explicitly and if LOS Probability = 0, the LOS mode is set to Non-Line-of-Sight explicitly. For any value between 0 and 1, LOS mode is set per the given probability, by tossing a biased coin.
Shadow Fading Model	Local	None, 3GPP TR 38.901	Models for signal attenuation due to shadowing. 3GPP TR 38.901 model is suitable for a scenario with mobility and obstructions within the propagation environment. In this model, the shadowing value follows a log-normal distribution with a user specified standard deviation. None disables the shadow fading model.
Fading and Beamforming	Local	No Fading MIMO unit gain, No fading MIMO array gain, Rayleigh with Eigen beamforming, Rician with Eigen beamforming	Rayleigh with Eigen beamforming: NetSim uses the rich scattering in the channel to form spatial channels. The number of spatial channels is equal to the number of layers. No fading MIMO unit gain: No fading with gain equal to unity (0 dB). No fading MIMO array gain: No fading but gain equals the array gain. Rician with Eigen beamforming: the channel combines a dominant Line-of-Sight component with scattered components. See Table 3-3 for more information.
O2I Building Penetration Model	Local	None, Low Loss Model, High Loss Model	A model for signal attenuation due to path-loss combined with fading, shadowing and O2I loss. The O2I loss is the Outdoor-to-Indoor penetration loss where the signal attenuates when it penetrates through structures like concrete walls, glass, wood etc. Low-loss model is applicable to RMa. High-loss model is applicable to UMa and UMi. None disables the O2I loss.
Additional Loss Model	Local	None, Matlab	Additional loss models can be set to NONE or MATLAB. If set to MATLAB then MATLAB will be automatically called by NetSim during execution. Note: NetSim Academic version does not support MATLAB.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
Pathloss Exponent (-)	Local	2 to 5	Pathloss exponent indicates the rate at which the pathloss increases with distance. The value depends on the specific propagation environment. Set any value between 2 to 5.
Shadowing Model	Local	None, Log Normal	Log Normal model suitable for scenarios with mobility and obstructions.
Standard Deviation (dB)	Local	5 to 12 dB	Standard deviation of log-normal shadowing distribution.
INTERFERENCE MODEL			
Downlink Interference Model	Global	No interference, Graded distance based Wyner model, Exact geometric model	Wyner is approximate, geometric model is exact.
Uplink Interference Model	Global	No interference, Interference over thermal	Uses Interference-over-thermal (IoT) to model co-channel uplink interference.
IoT value (dB)	Global	0 to 20	The Uplink IoT (dB) value is used to compute the SINR, and interference power based on the configured interference-over-thermal setting.
ERROR MODEL AND MCS SELECTION			
MCS selection model	Global	Ideal Shannon theorem-based rate, Shannon rate with attenuation factor	NetSim determines the modulation and coding scheme in 5G and LTE, based on received SINR, per the following models: Ideal Shannon theorem-based rate and Shannon rate with attenuation factor. Then the 3GPP standards spectral efficiency versus MCS table is looked up to select the MCS. This could be the 64QAM table, 256 QAM table, or the 64QAMLOWSE table depending on what was chosen by the user.
Attenuation Factor	Global	0.5–1	Attenuation factor (α) takes values between 0.5 and 1 with the default value of 0.75.
BLER Model	Global	Zero BLER, BLER enable	Block Error Rate Model (BLER) is used to decide code block and transport block errors in 5G and LTE. If enabled then NetSim looks up the SINR-CBS-MCS versus BLER tables to decide on the code block error rate for the chosen MCS.
Outer loop link adaptation	Global	TRUE, FALSE	The Outer Loop Link Adaptation (OLLA) technique, if enabled, can improve the channel quality estimation by adjusting the value of SINR by an offset dependent on whether previous transmissions were decoded successfully or not, as captured by Hybrid Automatic Repeat Request (HARQ) feedback.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
Target BLER	Global	0–1	The OLLA algorithm in NetSim is designed to converge the transport BLER to the set value of the target BLER. Range: 0 to 1.
NOTE: Refer Propagation Models (Per 3GPP TR 38.900) for technical information.			
UE Properties — Interface (5G_RAN) – Physical Layer			
UE Height (m)	Local	1–22.5	It is the height of the UE in meters.
TX Power (dBm)	Local	–40 to 50 dBm	In NetSim the Tx power range is –40 dBm to 50 dBm. The default value for Tx power is 23 dBm for UEs and 40 dBm for gNBs. When running in MIMO mode the transmit power is split equally amongst all the MIMO layers. The number of MIMO layers is $\min(N_t, N_r)$.
UE ANTENNA			
TX Antenna Count	Local	1, 2, 4, 8, 16	The number of transmit antennas. This parameter takes effect during MIMO operation; the number of MIMO layers would be $\min(N_t, N_r)$, where N_t is the transmit antenna count at the transmitter and N_r is the receive antenna count at the receiver. The layer-wise gains depend on the fading model chosen and are explained in the 5G NR manual digital beamforming section.
RX Antenna Count	Local	1, 2, 4, 8, 16	The number of received antennas. This parameter takes effect during MIMO operation; the number of MIMO layers would be $\min(N_t, N_r)$, where N_t is the transmit antenna count at the transmitter and N_r is the receive antenna count at the receiver. The layer-wise gains depend on the fading model chosen and are explained in the 5G NR manual digital beamforming section.
5G Logs			
LTENR Radio Measurements Log	Global	Enable/Disable	The LTENR Radio measurements csv log file records Timestamp, Device ID, Distance, Pathloss, Shadow fading loss, Received power, SNR, Interference Power, SINR, MCS, CQI, Beamforming gain and more, for each carrier on the PDSCH, PUSCH and SSB. PDSCH and PUSCH measurements are logged every sub-frame while SSB measurements are logged every UE measurement report.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
LTENR Resource Allocation Log	Global	Enable/Disable	The 5G Radio Resource Allocation csv log file records information related to physical resource block (PRB) allocation such as the Total PRBs, Slot Start Time(ms), Slot End, BitsPerPRB, BufferFill, Allocated PRBs, Rank (scheduling metric) and more, in the DL and in the UL. All these parameters are written in every slot.
LTENR Handover TTT Log	Global	Enable/Disable	Records the events that occur during a handover. This contains the timestamp, serving cell ID, UE ID, target cell ID, and Handover Trigger time (time at which the handover condition was met) when the TTT parameter is enabled. The log can be used to identify handover attempts and the impact of TTT on handovers.
LTENR Code Block Log	Global	Enable/Disable	Records parameters associated with Code Block segmentation such as Process ID, TB size, Modulation, Code Rate, CBS, BLER, CBG ID, etc. along with remarks on events associated with HARQ and PRB allocation. This will be useful to understand BLER model and Code Block segmentation in 5G.
LTENR OLLA Log	Global	Enable/Disable	Logs parameters associated with Outer Loop Link Adaptation (OLLA) such as CQI with and without OLLA, phy SINR, SINR Delta, Virtual SINR, etc. along with timestamps, gNB ID, UE ID, etc. This log can be used to understand OLLA mechanisms in 5G.
IEEE 802.11 Radio Measurement Log	Global	Enable/Disable	Records pathloss, shadowing loss, fading loss, transmitted power, received power, SNR, Interference Power, SINR, BER, NSS, MCS, etc. This log can be used to understand the channel model and its impact on varying channel conditions.
IEEE 802.11 Backoff Log	Global	Enable/Disable	Records details such as the Device name, Time stamp, Packet ID, BackoffTime, contention Window size and Retry Limit. This log can be used to understand the medium access mechanism in IEEE 802.11 protocols.
IEEE 802.11 Log	Global	Enable/Disable	Records events and states associated with IEEE 802.11 protocols along with time stamps. This file can be used for understanding and debugging through the protocol internals.
OSPF Log	Global	Enable/Disable	Records OSPF Protocol events: control message exchanges, interface state updates, etc.
OSPF Hello Log	Global	Enable/Disable	Logs OSPF Hello message events with timestamps.

Continued on next page

Table 2-2 continued from previous page

Parameter	Type	Range	Description
TCP Log	Global	Enable/Disable	Records TCP connection state transitions.
PRB Utilization log	Global	Enable/Disable	Records PRB utilization parameters over time.
TCP Congestion window log	Global	Enable/Disable	Records TCP congestion window events and states.

2.4.1 Devices: Click and drop into environment

- AMF, UPF, and SMF:
 - Exactly one set of these devices are automatically placed by NetSim into the environment and connected appropriately to switches.
 - These devices are part of the 5G core.
 - These devices which are placed onto the environment cannot be deleted by the user.
- Add a gNB (Macro cell gNB Omni Antenna, Small cell gNB Omni Antenna and Macro Cell Sector Antenna):
 - Click the gNB icon on the toolbar and place the gNB in the grid; it will automatically connect to the L2.Switches connected to the AMF and UPF. The logical connectivity of the different interfaces (Xn, N1-N2, and N3) are broken out into different physical links.
 - gNBs can also be placed inside the building based on the network scenario created.
 - Every gNB should be connected to at least one UE.
- Add a User Equipment (UE):
 - Click the UE icon on the toolbar and place the UE in the grid.
 - In SA & NSA mode UEs will get automatically connected to Master nodes while for the secondary nodes UEs should be connected manually.
 - UEs can also be placed inside the building. The UEs are always assumed to be connected to one gNB.
 - A UE can never be connected to more than one gNB, and neither can it be out-of-range of all gNBs.
- Add a Router: A Router is automatically placed with the 5G Core devices and is connected with UPF/EPC.
- Add a L2 Switch or Access Point: Click the L2 Devices > L2 Switch icon or L2 Devices > Access Point icon on the toolbar and place the device in the grid.
- Add a Wired Node and Wireless Node: Click the Node > Wired Node icon or Node > Wireless Node icon on the toolbar and place the device in the grid.
- Add a Building: Go to Options > Configure buildings and Add a building in the grid.
 - Buildings will have an impact on RF propagation losses if Pathloss Shadow fading O2I is selected.
 - A building occupies a minimum 1 cell on the grid and a maximum size equal to the complete grid.

- Two buildings cannot overlap one another.
- The maximum number of buildings supported in NetSim is Five (5).
- Connect the devices in the 5G NR network by using Wired/Wireless Links present in the Create Scenario tab in the top ribbon. While connecting gNB and UE, the following connections are allowed:
 - Outdoor gNB to Outdoor UE.
 - Outdoor gNB to Indoor UE.
 - Indoor gNB to Indoor UE.
 - Connecting Indoor gNB to Outdoor UE is allowed in NetSim.
 - Based on gNBs/UEs placed inside or outside of the buildings NetSim automatically chooses the indoor/outdoor propagation models during simulation.
- Configure an application as follows:
 - Click any application from the Set Traffic tab from the top ribbon.
 - Specify the source and destination devices in the network.
 - Specify other parameters as per the user requirement.
- Set the properties of UPF, AMF, SMF, gNB, UE, and other devices as follows:
 - Right-click on UPF, AMF, and SMF, then click on Open Properties as a new window and modify the interface and layer-wise properties to your requirement.
 - Right-click a gNB or UE, click on Open Properties as a new window and specify the parameters.
 - * The TX Power per layer (dBm) parameter (Interface 5G RAN – Physical Layer) is local and if you change this parameter in gNB or UE, manually update the parameter for the other devices.
 - * The PDCP Header Compression, PDCP Discard Delay Timer, and PDCP Out of Order Delivery parameters (Interface 5G RAN – DataLink Layer) are local and if you change any of these parameters in gNB or UE, manually update the parameter for the other devices.
 - Right-click an Access Point, L2 Switch, Wireless Node or Wired Node and specify the parameters.
 - * The Interface Wireless > Physical Layer and Interface Wireless > DataLink Layer parameters are local and if you change any of these parameters in Access Point or Wireless Node, manually update the parameter for the other devices.

3 Model Features

3.1 The 5G Frame Structure

In 5G-NR the physical time and frequency resources correspond to OFDM symbols (time) and subcarriers (frequency) respectively. The physical radio resources in each frame (or subframes) can be considered as a resource grid made up of OFDM subcarriers in the frequency domain, and OFDM symbols in the time domain. The smallest physical resource, known as the resource element (RE), comprises one subcarrier (frequency) and one OFDM symbol (time).

5G NR supports a flexible OFDM numerology to support diverse spectrum bands/types and deployment models. The numerology, μ , can take values from 0 to 4 and specifies the Subcarrier-Spacing (SCS) as $15 \times 2^\mu$ kHz and a slot length of $\frac{1}{2^\mu}$ ms. With μ varying from 0 to 4, SCS varies from 15 to 240 kHz. NetSim supports $\mu = 0, 1, 2$ for FR1 and $\mu = 2, 3$ for FR2. The setting $\mu = 0$ corresponds to the LTE (4G) system configuration.

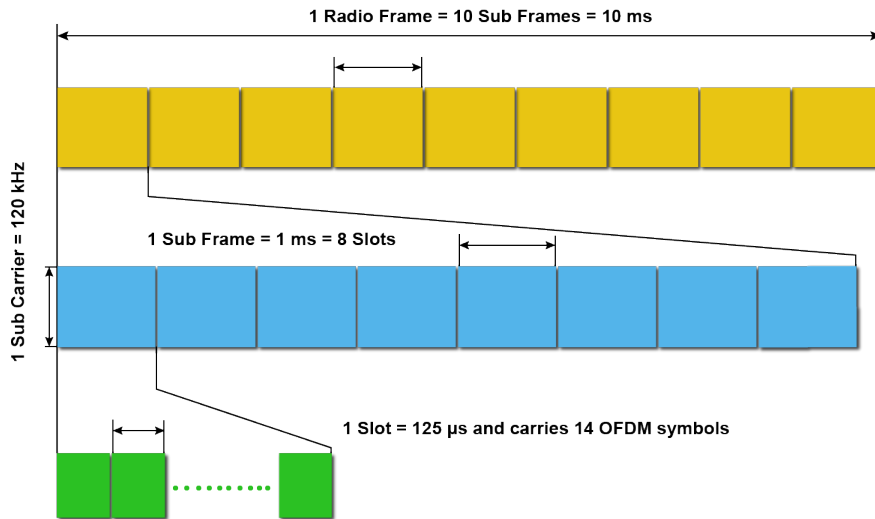


Figure 3-1: NR Frame Structure when numerology μ is set to 3

In the time domain (to support backwards compatibility with LTE) the frame length in 5G NR is set to 10 ms, and each frame is composed of 10 subframes of 1 ms each. The 1 ms subframe is then divided into one or more slots in 5G, whereas LTE had exactly two slots in a subframe. The slot length depends on the numerology, μ , and is equal to $\frac{1}{2^\mu}$ ms. The number of OFDM symbols per slot is 14 for a configuration using normal cyclic prefixes. For extended cyclic prefixes, the number of OFDM symbols per slot is 12. See section 3.9.9.1— Numerologies, for more information.

In the frequency domain, the number of subcarriers per physical resource block (PRB) is fixed to 12, and the Subcarrier-Spacing (SCS) is $15 \times 2^\mu$ kHz.

Physical Resource Block (PRB): The PRB is the minimum unit of resource allocation in the frequency domain, i.e., the width of a resource block, 180 kHz. It is a system-level constant. For example, a PRB can either contain 12 subcarriers of 15 kHz each. As a formula, $PRB_{width} = 12 \times 15 \times 2^\mu$ kHz.

Resource Block (RB): It is the minimum unit of resource allocation, i.e., 1 PRB by 1 slot. NetSim’s scheduler performs resource allocation every subframe (TTI, transmission time interval), however, the granularity of resource allocation is 1 slot in time, i.e., the duration of a resource block, and 1 PRB in frequency. One sub-carrier by one symbol is defined as a resource element.

3.2 Data Transmission Overview

- In NetSim only the DL and UL traffic channels (PDSCH and PUSCH) are modelled. The control signals and control channels are abstracted; these abstractions are explained in various parts of this document.

- In TDD operation the UL and DL transmissions are separated in the time-domain over different frames/subframes/slots/symbols and use the same carrier frequency. In FDD operation UL and DL transmissions are separated in the frequency domain, with different frequencies used for UL and for DL transmission.
- Higher layer packets arrive at the RLC buffer for each UE and each gNB.
- Prior to transmission, the MAC scheduler in the gNB determines the allocation of PRBs (PHY resources) to users. In this module the Transport block size (TBS) (explained in 3.9.12) is computed using the channel quality index (CQI). The CQI is determined by the Adaptive Modulation and Coding (AMC) function based on the SNR.
- Now, the received SNR is determined from a) large scale pathloss and shadowing calculated per the 3GPP's stochastic propagation models, and b) the small-scale fading which leads to beamforming gains when using MIMO. These models provide signal attenuation as an output. Several parameters are used in the model, including the distance between the transmitter and the receiver. These computations are executed by each associated UE-gNB pair, in DL and UL, at the start of simulation and again at every mobility event. In calculating SNR, the noise power is obtained from $N = k \times T \times B$.
- Note that the SNR/CQI is not computed/feedback using reference signals/control channels but is computed on the data channel (PDSCH and PUSCH). Then it is assumed to be instantaneously known to the transmitter and receiver. This assumption is known as perfect CSIT and CSIR. With perfect CSIT the transmitter can adapt its transmission rate (MCS) relative to the instantaneous channel state (SNR).
- Based on this SNR the AMC determines a wideband CQI which indicates the highest rate Modulation and coding scheme (MCS), that it can reliably decode, if the entire system bandwidth were allocated to that user. The modulation scheme defines the number of bits that can be carried by a single RE. Modulation schemes supported by 5G include QPSK (2 bits), 16 QAM (4 bits), 64 QAM (6 bits), and 256 QAM (8 bits). The code rate defines the proportion of bits transmitted that are useful. It is computed as the ratio of useful bits by total bits that are transmitted. The modulation order Q_m , which denotes the number of bits per RE, and the code rate denoted by R are jointly encoded as a modulation and coding scheme (MCS) index. These values of Q_m and R are then passed to the TBS determination function.
- At each gNB a frame of length 10 ms is started. Each frame in turn starts 10 subframes, each of length 1 ms. Each subframe then starts a certain number of slots based on numerology.
- The PHY layer in NetSim then notifies the MAC about the slot start. The MAC sub layer in turn seeks a buffer status report from the RLC layer and invokes the MAC scheduler. It then notifies the RLC of the transmission. The RLC then transmits the transport block to the PHY layer. The downlink and uplink data channels (PDSCH, PUSCH) receive this transport block as its service data unit (SDU), which is then processed and transmitted over the radio interface.

3.3 5G NR Stack

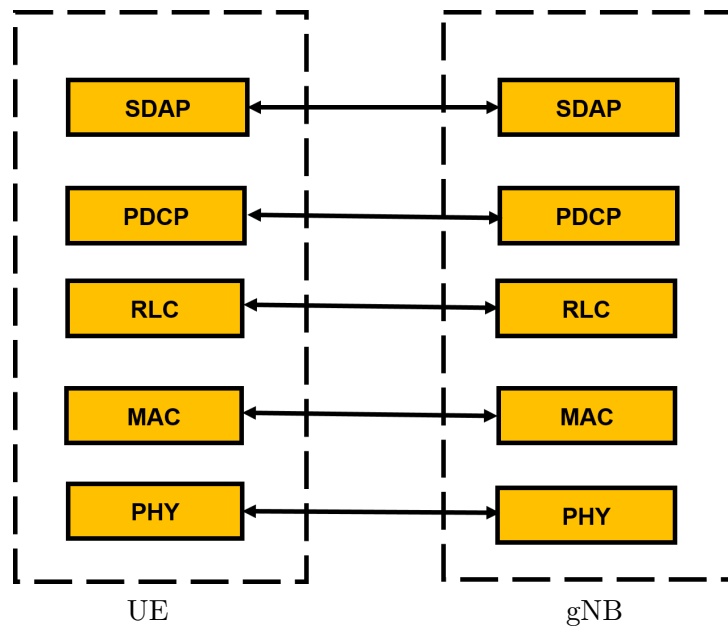


Figure 3-2: User Plane Protocol Stack

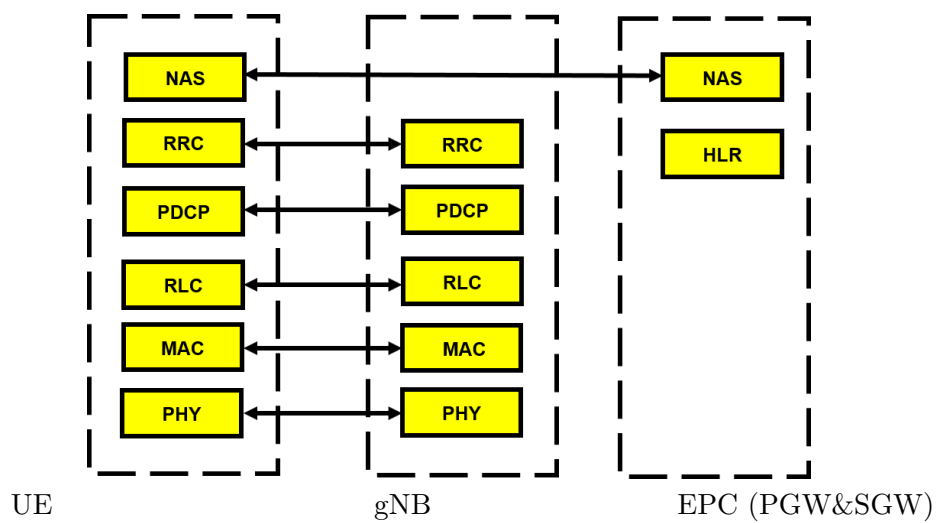


Figure 3-3: Control Plane Protocol Stack

3.4 SDAP (Specification: 37.324)

The features in NetSim SDAP are:

- Mapping between a QoS flow and a data radio bearer (DRB) per the new QoS framework
- Marking QoS flow ID (QFI) in both DL and UL packets.

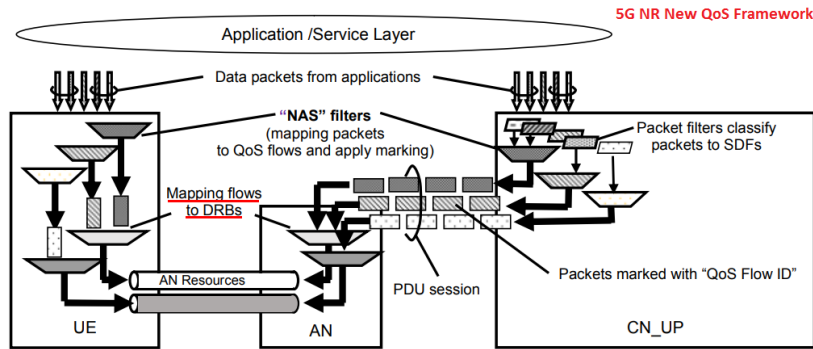


Figure 3-4: 5G Quality of Services (QoS)

In NetSim the SDAP module’s Set Mode function maps the Application QoS Type (which can be set in NetSim’s GUI) to RLC mode.

Table 3-1: Mapping of Application QoS to RLC mode in NetSim

Application QoS (Set in NetSim GUI)	RLC Mode	Priority
nrtPS, ertPS, rtPS, UGS	UM Mode	GBR
BE	AM Mode	Non-GBR

In the same function, the logical channel is also set to DTCH which is the dedicated traffic channel. Next comes the MAC_OUT function. This function determines what the current device is connected to i.e., if it is a UE, it finds the associated gNB, else if the current device is a gNB it finds the associated UEs. The SDAP header is then added which contains the QFI. Recall that the NetSim 5G NR library only supports unicast transmissions (i.e., broadcast is not supported).

After this is the SendToNetwork function. This function is called when a packet is at MAC-IN at the receiver. The function creates the Network Event, sets all the Event-Details and sends the packet to the IP layer. And finally, the HandleMacIN function decides whether the packet must be sent to another interface (if intermediate device) or sent to a network layer (if end device). The header is stripped off.

3.4.1 5G QoS characteristics

5G Quality of Service (QoS) model is based on QoS Flows. Each QoS flow has a unique identifier called QoS Flow Identifier (QFI). There are two types of flows: Guaranteed Bit Rate (GBR) QoS Flows and Non-GBR QoS Flows. Every QoS flow has a QoS profile that includes QoS parameters and QoS characteristics. Applicable parameters depend on GBR or non-GBR flow type. QoS characteristics are standardized or dynamically configured.

The current NetSim COTS build does not implement 5G QoS. All traffic flowing is categorized as non-GBR. A framework has been provided for users to modify the underlying code to implement QoS flow categorization in terms of:

- Resource type (GBR, Delay critical GBR or Non-GBR);
- Priority level.
- Packet delay budget.

- Packet error rate.

3.5 RLC (Based on specification 38.322)

NetSim RLC entity is based on 3GPP Technical specification 38.322. The RLC layer sits between PDCP and MAC layer. The RLC has three different modes of operation: TM (Transparent Mode), UM (Unacknowledged Mode) and AM (Acknowledge mode) as shown in Figure 3-5.

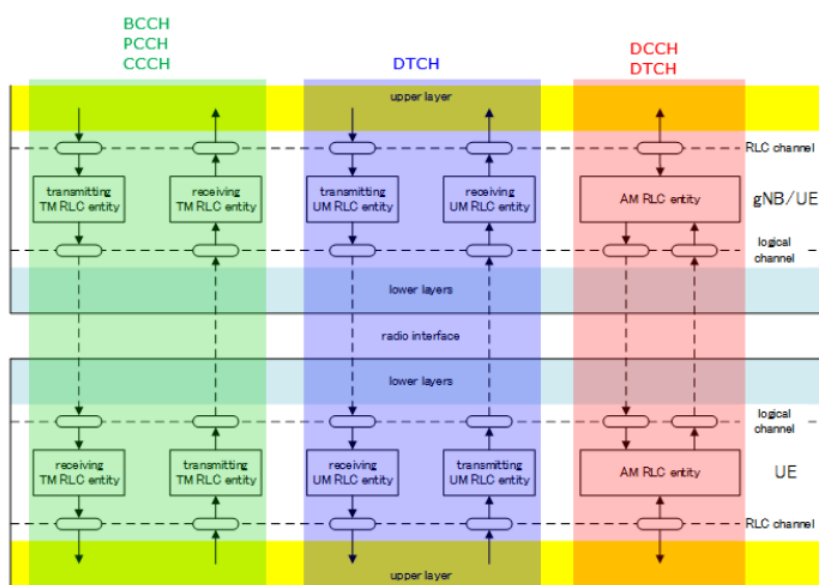


Figure 3-5: RLC Modes of operation and RLC Entities

A summary of key features of these modes is as follows:

- TM: No RLC Header, Buffering at Tx only, No Segmentation/Reassembly, No feedback (i.e., No ACK/NACK)
- UM: RLC Header, Buffering at both Tx and Rx, Segmentation/Reassembly, No feedback (i.e., No ACK/NACK)
- AM: RLC Header, Buffering at both Tx and Rx, Segmentation/Reassembly, Feedback (i.e., ACK/NACK)

Each of these modes can both transmit and receive data. In TM and UM, separate entity is used for transmission and reception, but in AM a single RLC entity performs both transmission and reception.

NetSim implements all the 7 entities for the RLC that are shown in Figure 3-5. Note that each of the logical channels uses a specific RLC mode:

- BCCH, PCCH, CCCH use RLC TM only.
- DCCH uses RLC AM only.
- DTCH uses RLC UM or AM. (Which mode is used for each DTCH channel, is determined by RRC message).

The RLC entities provide the RLC service interface to the upper PDCP layer and the MAC service interface to the lower MAC layer. The RLC entities use the PDCP service interface from the upper PDCP layer and the MAC service interface from the lower MAC layer.

UM stands for ‘Unacknowledged Mode’. ‘Unacknowledged Mode’ means ‘it does not require any reception response from the other party’. ‘Reception response’ simply means ‘ACK’ or ‘NACK’ from the other party. (UM mode is similar to TM mode in that it does not require any ACK/NACK from the other party, but it is different from TM in that it has its own header)

The RLC transmit side:

- Buffers the data and generates an RLC Header.
- Segmentation of the RLC SDU and modification of the RLC Header (Some fields in RLC header may be changed based on the segmentation status)
- Adds RLC header.

NOTE: If you compare this in LTE process, it seems that UM RLC does not perform any ‘Concatenation’. According to the following statement from 38.322 v0.1.0, the ‘concatenation’ process is moved to MAC layer. From RAN2 NR#1: Working assumption on no RLC concatenation taken at RAN2#96 is confirmed (i.e., concatenation of RLC PDUS is performed in MAC).

The RLC on the receive side:

- Buffers. Here the RLC waits for all the fragments to arrive.
- Reorders, if required
- Strips the RLC header.
- Reassembles

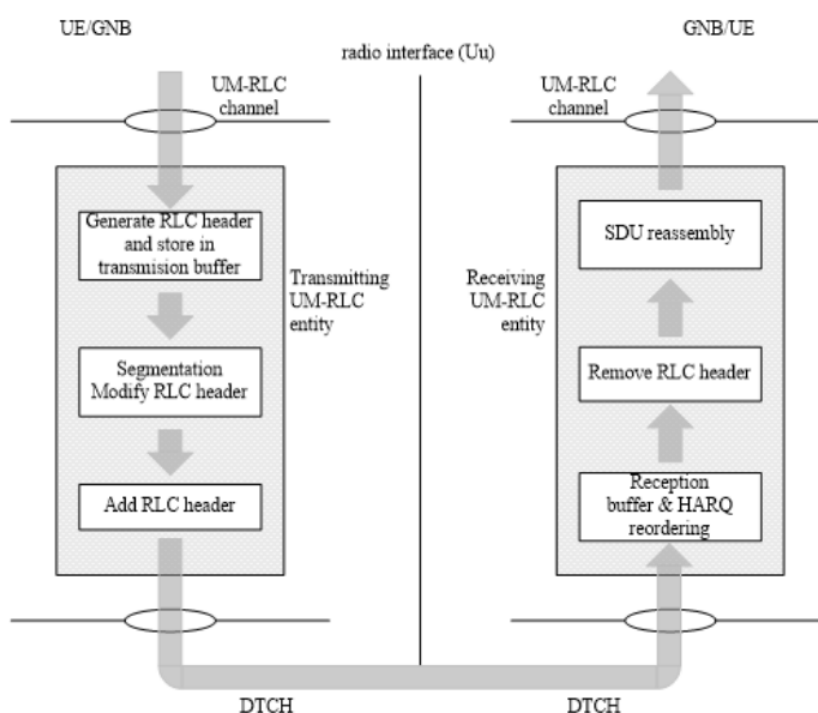


Figure 3-6: RLC UM working.

NetSim GUI RLC Configurable parameters

The following timers are configured per TS 38.331 [5]:

- **t-PollRetransmit:** This timer is used by the transmitting side of an AM RLC entity in order to retransmit a poll. The default value in NetSim is set to ms5 (5 milliseconds). Range is provided in the GUI dropdown menu.
- **t-Reassembly:** This timer is used by the receiving side of an AM RLC entity and receiving UM RLC entity in order to detect loss of RLC PDUs at the lower layer. If t-Reassembly is running, t-Reassembly shall not be started additionally, i.e., only one t-Reassembly per RLC entity is running at a given time. The default value in NetSim is set to ms5 (5 milliseconds). Range is provided in the GUI dropdown menu.
- **t-StatusProhibit:** This timer is used by the receiving side of an AM RLC entity in order to prohibit transmission of a STATUS PDU. Default value in NetSim is set to ms5 (5 milliseconds). Range is provided in the GUI dropdown menu. The following parameters are configured per TS 38.331 [5]:
- **maxRetxThreshold:** This parameter is used by the transmitting side of each AM RLC entity to limit the number of retransmissions corresponding to an RLC SDU, including its segments. Default value in NetSim is set to t1. Range is provided in the GUI dropdown menu.
- **pollPDU:** This parameter is used by the transmitting side of each AM RLC entity to trigger a poll for every pollPDU PDUs. Default value in NetSim is set to p4(PDUs). Range is provided in the GUI dropdown menu.
- **pollByte:** This parameter is used by the transmitting side of each AM RLC entity to trigger a poll for every pollByte bytes. Default value in NetSim is set as kB25 (KBytes). Range is provided in the GUI dropdown menu.

3.6 RLC-AM (Based on specification 38.322)

AM stands for ‘Acknowledge Mode’. This means an ACK/NACK is required from the receiver unlike RLC-UM where no ACK/NACK is required from the receiver. The code for RLC-AM mode is written in the file LTENR RLC AM.c

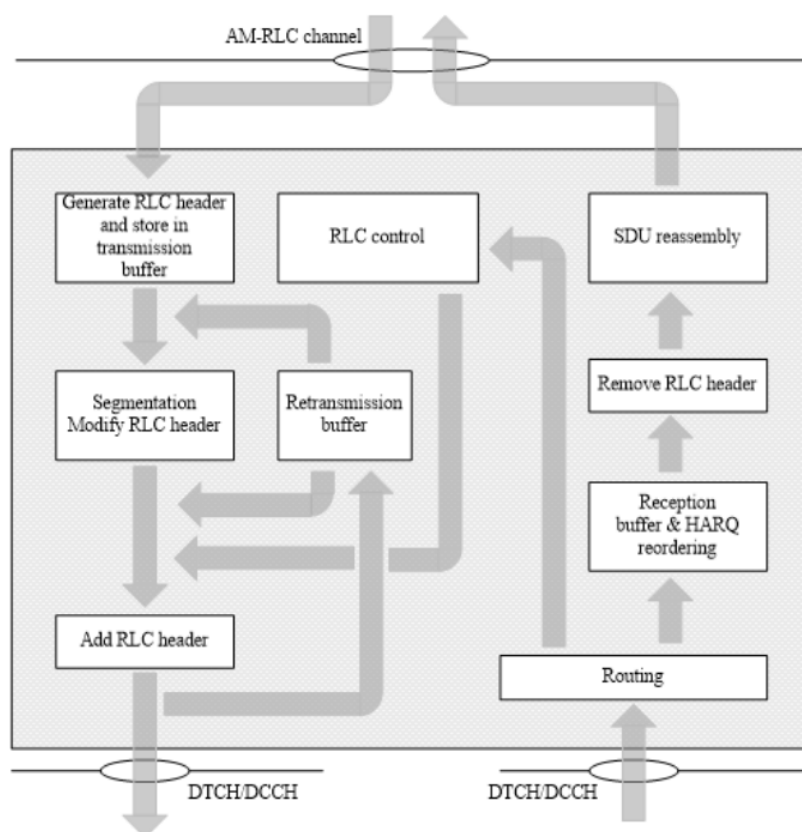


Figure 3-7: RLC AM Working

The functionality of RLC-AM is:

After the RLC transmitter does the segmentation/concatenation process, it adds an RLC header and then it creates two identical copies and transmits the one copy of the data out to lower layer (MAC) and sends another copy to Retransmission buffer.

If the RLC gets Nack or does not get any response from the receiver for a certain period of time, the RLC PDU in the retransmission buffer gets transmitted again. If the RLC gets ACK, the copy of the packet in retransmission buffer is discarded.

There are four buffers maintained in RLC-AM. There is no size defined in the standard and hence NetSim implements an infinite buffer (see LTENR RLC.h and LTENR RLCBuffer.c for related code). There are 3 buffers for transmit operations and 1 for receive operation:

- Transmission buffer: Queues SDUs received from higher layer (PDCP)
- Transmitted buffer: Queues SDUs that have been transmitted but for which ACK/NACK has not yet been received.
- Re-transmission Buffer: Queues RLC SDUs which are considered for retransmission. (i.e. for which NACK has been received)
- Reception Buffer: Queues fragments of SDUs (receiver side)

The MAC sub layer then seeks a Buffer Status Report from the RLC. Here the packet is added to the Transmission Buffer. Then based on the MAC scheduler, the MAC layer sends a notification to RLC, which in turn sends a packet by first checking the Re Transmission Buffer followed by the Transmission-Buffer.

The T POLLRetransmit determines if a packet needs to be re-transmitted. If RLCAM- Ack is not received, the packet is moved from transmitted buffer to retransmission buffer. The codes for T POLLRetransmit are in the section #pragma region RLCAM T POLLRetransmit.

3.6.1 Transmit Operations

The transmitting side of an AM RLC entity shall prioritize transmission of RLC control PDUs over AMD PDUs. The transmitting side of an AM RLC entity shall prioritize transmission of AMD PDUs containing previously transmitted RLC SDUs or RLC SDU segments over transmission of AMD PDUs containing not previously transmitted RLC SDUs or RLC SDU segments. The transmitting side of an AM RLC entity shall maintain a transmitting window according to the state variable

TX Next Ack as follows:

- a SN falls within the transmitting window if $\text{TX Next Ack} \leq \text{SN} < \text{TX Next Ack} + \text{AM Window Size}$;
- a SN falls outside of the transmitting window otherwise.

The transmitting side of an AM RLC entity shall not submit to lower layer any AMD PDU whose SN falls outside of the transmitting window.

For each RLC SDU received from the upper layer, the AM RLC entity shall:

- associate a SN with the RLC SDU equal to TX Next and construct an AMD PDU by setting the SN of the AMD PDU to TX Next;
- increment TX Next by one.

When submitting an AMD PDU that contains a segment of an RLC SDU, to lower layer, the transmitting side of an AM RLC entity shall:

- set the SN of the AMD PDU to the SN of the corresponding RLC SDU.

The transmitting side of an AM RLC entity can receive a positive acknowledgement (confirmation of successful reception by its peer AM RLC entity) for an RLC SDU by the following:

- STATUS PDU from its peer AM RLC entity.

When receiving a positive acknowledgement for an RLC SDU with $\text{SN} = x$, the transmitting side of an AM RLC entity shall:

- send an indication to the upper layers of successful delivery of the RLC SDU;
- set TX Next Ack equal to the SN of the RLC SDU with the smallest SN, whose SN falls within the range $\text{TX Next Ack} \leq \text{SN} \leq \text{TX Next}$ and for which a positive acknowledgment has not been received yet.

3.6.2 Receive Operations

The receiving side of an AM RLC entity shall maintain a receiving window according to the state variable RX Next as follows:

- a SN falls within the receiving window if $RX\ Next \leq SN < RX\ Next + AM\ Window\ Size$;
- a SN falls outside of the receiving window otherwise.

When receiving an AMD PDU from lower layer, the receiving side of an AM RLC entity shall:

- either discard the received AMD PDU or place it in the reception buffer.
- if the received AMD PDU was placed in the reception buffer:
 - update state variables, reassemble and deliver RLC SDUs to upper layer and start/stop t-Reassembly as needed when t-Reassembly expires, the receiving side of an AM RLC entity shall:
 - update state variables and start t-Reassembly as needed.

After submitting an AMD PDU including a poll to lower layer, the transmitting side of an AM RLC entity shall:

- set POLL SN to the highest SN of the AMD PDU among the AMD PDUs submitted to lower layer;
- if t-PollRetransmit is not running: start t-PollRetransmit.
- else: restart t-PollRetransmit.

3.6.3 Actions when an RLC PDU is received from a lower layer

On receiving the AMPDU NetSim checks if

- It is within the receive window.
- The packet is not already received i.e. not a duplicate packet.

If both the conditions are true, the AMPDU is placed in the Reception Buffer and the Reassembly Timer is started. If the PDU has a Poll Request then it starts constructing the StatusPDU.

3.6.4 Reception of a STATUS report

Upon reception of a STATUS report from the receiving RLC AM entity the transmitting side of an AM RLC entity shall:

- if the STATUS report comprises a positive or negative acknowledgement for the RLC SDU with sequence number equal to POLL SN:
- if t-PollRetransmit is running: stop and reset t-PollRetransmit.

3.7 PDCP (Based on specification 38.322)

The PDCP layer receives a packet (data/control) from the upper layer, executes the PDCP functions and then transmits it to a lower layer.

PDCP Entity: The PDCP entities are located in the PDCP sublayer. NetSim currently implements one PDCP entity per UE (users can add more by modifying the code). The same PDCP entity is associated with both the control and the user plane.

The PDCP functionality supported in NetSim is:

- Transmit PDCP SDU
 - Sets the PDCP Sequence Number
 - Adds RLC Header.
 - Calls RLC service primitive.
- PDCP Association
 - This call back function is invoked when the UE associates/dissociates from a gNB.
- Maintenance of PDCP sequence numbers (to know more check the PDCP entity structure)
- Discard Timer:
 - When the discardTimer expires for a PDCP SDU, or the successful delivery of a PDCP SDU is confirmed by PDCP status report, the transmitting PDCP entity shall discard the PDCP SDU along with the corresponding PDCP Data PDU.
 - Discarding a PDCP SDU already associated with a PDCP SN causes a SN gap in the transmitted PDCP Data PDUs, which increases PDCP reordering delay in the receiving PDCP entity.
- Transmission Buffer (size is assumed to be infinite): This is where PDCP SDUs are stored before being sent down to a lower layer.

3.8 MAC Layer

3.8.1 Overview

NetSim 5G NR MAC implements the following features:

- Multiplexing/de-multiplexing of MAC SDUs into/from transport blocks for DL-SCH and UL-SCH data transfer.
- Buffer status reporting.
- MAC Scheduler.

3.8.2 MAC Scheduler: Introduction

Base stations (gNBs) generally deal with multiple mobile stations UEs, some of which require larger bandwidths than others and some of which have better connections (signal quality) than others. In ideal circumstances the base station has plenty of resources (e.g., bandwidth) and

each UE gets the resources it needs. However, usually resources are limited, and the base station needs some way of fairly allocating the resources between the UEs.

Consider the downlink of a single gNB 5G cellular system. Several UEs are receiving data from ongoing transfers, for example, TCP controlled file downloads. Assuming that the bottleneck on the transfer path for these connections is this gNB to UE wireless access, the downlink per-UE queues in the gNB will be nonempty. At the beginning of each downlink slot (TTI) the gNB scheduler has to decide which of the UEs' waiting data to transmit in that slot.

At each gNB the MAC scheduler decides the PRB allocation, per carrier, per TTI (slot), in the PDSCH (DL) and in the PUSCH (UL). Control packets such as the buffer status report (BSR) and UL assignment, are assumed to be sent out of band. The resources for transmission of these control packets are part of Overhead as defined in 3.9.21.

3.8.3 Round Robin Scheduler

It divides the available PRBs among the active flows, i.e., those logical channels which have a non-empty RLC queue. The MCS for each user is calculated according to the received CQIs.

3.8.4 Proportional Fair Scheduler

For data transfers, an important performance measure is long term throughput in bits/second, say, T_i , $1 \leq i \leq n$, where n is the number of UEs. One approach to designing a scheduler is to evaluate the goodness of the throughput vector (T_1, \dots, T_n) by a network utility, which is the sum of individual user utilities. The utility (or, usefulness) of a throughput T , to a user, increases with increasing throughput, but for large throughputs, increasing throughput further gives diminishing increase in usefulness. This property is modeled as a nondecreasing concave function of throughput. A common measure of utility is the log function, i.e., for the throughput vector (T_1, \dots, T_n) , the utility of throughput T_i to user i is measured as $\ln(T_i)$. The network utility is, then, given as

$$\sum_{i=1}^n \ln(T_i) \quad (1)$$

A Proportional Fair (PF) scheduler works by scheduling users in slots so that the utility of their long-term throughputs is maximized. In the 5G setting, the scheduling decisions at the beginning of a TTI are based on the physical rates that each UE can get in each Resource Block (RB). If we are given statistical models of these rates, then a nonlinear optimization problem can be formulated and solved to obtain the schedule. This is not a practical approach, however, and a learning algorithm is desired, which, based on slot-by-slot CSI measurements, takes scheduling decisions, which lead to PF optimal throughputs.

The Proportional Fair Scheduler is such a learning scheduler, that uses the throughputs that users are expected to get in the next slot, and the average throughputs they have each obtained up to this slot, to decide which UEs to schedule in the next slot. The practical PF scheme, described below, is based on information such as a presently available data rate for each user in each RB in the next slot (obtained by CSI measurements), and an average data rate over an immediately prior predetermined interval for each user.

3.8.4.1 Implementation

Since NetSim uses a flat fading model, in each slot, each UE achieves the same MCS in every RB in that slot. In other words, different UEs achieve, possibly, different MCSs, but a single UE has the same MCS across all RBs in a slot. Under this assumption, it is optimal to schedule the same UE in every RB in that slot. Since the channel condition can stochastically vary from slot to slot, the MCSs that the UEs achieve will vary from slot to slot. Under this assumption, the following algorithm is Proportional Fair optimal.

Let i, j denote generic users and let t be the slot index. A resource block index k is not required given the flat fading assumption. Let $M_i(t)$ be the MCS seen by user i at time (slot) t . The channel CQI (derived from the data channel SINR) is used by the adaptive modulation and coding (AMC) module to determine the MCS. We denote by $S(M, B)$ the TB size in bits for a given MCS, M , and a given number of physical resource blocks (PRBs), B . The achievable rate $R_i(t)$ in bit/s for user i in slot t is defined as

$$R_i(t) = \frac{S(M_i(t), 1)}{\tau} \quad (2)$$

where τ is the TTI, i.e., 1 slot duration. At the start of each slot t , the user index $i^*(t)$ — selected by the scheduler — to which required PRBs (per that user's demand) is assigned at time t is determined as

$$i^*(t) = \underset{j=1, \dots, N}{\operatorname{argmax}} \left(\frac{R_j(t)}{T_j(t)} \right) \quad (3)$$

This selection is carried out by the scheduler till all PRBs in slot t are allocated. In the above expression, $T_j(t)$ is the past throughput performance perceived by the user j , and is defined as

$$T_j(t) = \left(1 - \frac{1}{\alpha} \right) T_j(t-1) + \frac{1}{\alpha} \hat{T}_j(t) \quad (4)$$

where α is the time constant (in units of slots) of the exponential moving average. NetSim uses $\alpha = 50$, and $\hat{T}_j(t)$ is the actual throughput achieved by user j in the subframe t . If $\hat{B}_j(t)$ is the number of PRBs allocated to user j , we finally get

$$\hat{T}_j(t) = \frac{S(M_j(t), \hat{B}_j(t))}{\tau} \quad (5)$$

The value of α can be changed by the user by editing the NetSim's source code; it cannot be changed via the GUI. The PF scheduler thus selects a user having the maximum among values obtained by dividing a present possible data rate by an average data rate during a predetermined interval at every scheduling time point.

3.8.4.2 Remarks

When there is no channel variation, i.e., each UE achieves the same MCS in every RB in every slot, then the throughput of the PF scheduler equals that of the round robin scheduler.

The difference between the RR and PF schedulers can be seen when the radio channel varies stochastically over the slots.

Mobility cases: NetSim pathloss computations do not follow continuous math since it will mean

a potentially infinite number of calculations. These PL calculations are discrete time instants i.e., every time a UE moves with the UE movement update determined per the update interval parameter in the UI or via a mobility file. Let us denote the time difference between updates as ΔT . The UE is assumed to instantaneously move to a point P_T at time T and stay there till just before time $(T + \Delta T)$. At the moment, $(T + \Delta T)$, the UE instantaneously moves to point $P_{T+\Delta T}$. Pathloss is computed at (P_t, T) and then at $(P_{T+\Delta T}, T + \Delta T)$. Therefore, (and again) differences between the RR and PF scheduler will be appreciable only if the update interval is of the order of milliseconds.

3.8.5 Max Throughput Scheduler

The Max Throughput (MT) scheduler aims to maximize the overall throughput of the Base station (gNB or eNB). It allocates each PRB to the user that can achieve the maximum achievable rate in the current TTI. The highest achievable rate is calculated by wideband MCS, that is derived from the CQI which in-turn is computed from the SINR. The scheduler allocates the required PRBs to this UE in the current TTI (slot). The calculation of achievable rate is similar to what is explained in the PF scheduler.

We denote $S(M, B)$ as the TB size in bits for a given MCS, M , and a given number of physical resource blocks (PRBs), B . The achievable rate $R_i(t)$ in bit/s for user i at slot t is defined as

$$R_i(t) = \frac{S(M_i(t), 1)}{\tau} \quad (6)$$

where τ is the TTI i.e., 1 slot duration. At the start of each slot t , the user index $i^*(t)$ — selected by the scheduler — to which required PRBs (per that user's demand) is assigned at time t is determined as

$$i^*(t) = \operatorname{argmax}_{j=1, \dots, N} (R_j(t)) \quad (7)$$

While MT can maximize cell throughput, it cannot provide fairness to the UEs that experience poor channel condition.

When there are several UEs having the same achievable rate, NetSim implements RR scheduling amongst these UEs that have the same achievable rate.

3.8.6 Special cases

- Carrier aggregation case: the scheduler runs on a per carrier basis.
 - PF Scheduler: $\hat{T}_j(t)$ is computed and maintained independently for each carrier.
- NSA mode: Traffic is split between 4G and 5G (eNB and gNB) above the MAC. The scheduler runs independently on the eNB and gNB.
- Association and Handover: PF Scheduler: At time of association or handover, say t_a , NetSim sets $T_j(t_a) = 1$
- Application priorities and heterogenous traffic: In 5G, the types of QoS are
 - GBR, which is transmitted in RLC UM mode. In NetSim, Applications which have a UGS priority set are transmitted in UM mode.

- Non-GBR, which is transmitted in RLC AM mode. In NetSim, Applications which do not have a UGS priority set are transmitted in AM mode.
- Control channel traffic, which is transmitted in RLC TM mode. NetSim assumes ideal control plane behaviour and doesn't model these transmissions.
- The MAC scheduler allocates resources on a combined (UM plus AM) RLC requirement. Once UE wise allocation is complete, RLC would first transmit the UM mode traffic followed by the AM mode traffic, to that UE. And so on for all UEs.

3.8.7 Active Queue Management (AQM)

3.8.7.1 Overview

Active Queue Management (AQM) controls how packets are admitted to or dropped from the RLC transmission queues at the gNB before MAC scheduling takes place. Without AQM, queues can grow unchecked, leading to persistent bufferbloat and increased end-to-end latency. AQM mitigates this by proactively dropping or limiting packets before the queue overflows, providing earlier congestion feedback to the transport layer.

In NetSim, AQM is applied to user-plane traffic (Dedicated Traffic Channel, DTCH) only. Control and signalling traffic bypasses AQM and is always admitted to the queue.

3.8.7.2 Supported Algorithms

NetSim supports three queueing disciplines, selectable via the `TYPE` parameter:

1. **Drop Tail** — A simple FIFO queue with a hard buffer limit. Packets are accepted until the queue reaches the configured limit; all subsequent arrivals are dropped. Drop Tail provides no early congestion signalling and can lead to lock-out and global synchronisation effects with TCP traffic.
2. **RED (Random Early Detection)** — Maintains an exponentially weighted moving average (EWMA) of the queue size and uses it to make probabilistic drop decisions. The EWMA is updated on each packet arrival as follows:

$$\bar{q} \leftarrow \bar{q} + w_q (q_{\text{current}} - \bar{q}) \quad (8)$$

where \bar{q} is the average queue size, q_{current} is the instantaneous queue size, and w_q is a small weight (default 0.0002) that controls how quickly the average responds to queue fluctuations.

The drop decision follows three regions:

- If $\bar{q} < \text{min_th}$: the packet is accepted.
- If $\text{min_th} \leq \bar{q} < \text{max_th}$: the packet is dropped with a probability that increases linearly from 0 to max_p as \bar{q} moves from min_th to max_th .
- If $\bar{q} \geq \text{max_th}$: all arriving packets are dropped.

By dropping packets before the queue is actually full, RED allows TCP senders to reduce their sending rate early, reducing average queuing delay.

3. **WRED (Weighted RED)** — Extends RED with per-priority-class thresholds. Four traffic classes are supported: *Low*, *Normal*, *Medium*, and *High*. Each class has its own

min_th, max_th, and max_p. All classes share a single EWMA queue average, but the drop decision is evaluated against the thresholds of the arriving packet’s priority class. This allows lower-priority traffic to be dropped more aggressively during congestion while higher-priority traffic is protected.

3.8.7.3 Configuration

AQM is configured in the gNB properties. Table 3-2 lists the available parameters.

Table 3-2: AQM configuration parameters.

Parameter	Applies to	Default	Description
ENABLE	All	false	Enable or disable AQM
TYPE	All	DROP_TAIL	Algorithm: DROP_TAIL, RED, or WRED
QUEUE_LIMIT	All	0 (unlimited)	Hard buffer limit in MB; 0 means unlimited
WQ	RED, WRED	0.0002	EWMA weight for average queue computation
MIN_TH	RED	4.0 MB	Minimum threshold for early dropping
MAX_TH	RED	7.0 MB	Maximum threshold; all packets dropped above this
MAX_P	RED	0.05	Maximum drop probability at MAX_TH
LOW_MIN_TH	WRED	4.0 MB	Minimum threshold for Low priority class
NORMAL_MIN_TH	WRED	4.5 MB	Minimum threshold for Normal priority class
MEDIUM_MIN_TH	WRED	5.0 MB	Minimum threshold for Medium priority class
HIGH_MIN_TH	WRED	5.5 MB	Minimum threshold for High priority class
LOW_MAX_TH ... HIGH_MAX_TH	WRED	7.0 MB	Maximum thresholds (per class)
LOW_MAX_P ... HIGH_MAX_P	WRED	0.05	Maximum drop probabilities (per class)

3.8.7.4 AQM Metrics and Log

When AQM is enabled, per-interface metrics reported at the end of the simulation include the number of packets dropped by AQM, the number dropped by buffer overflow, and the average queue size. A detailed queue log file (CSV) is also written, recording per-packet enqueue and dequeue events, instantaneous and EWMA queue sizes, and drop reasons.

3.8.8 Log File

The resource allocation and the rank, i.e., $\left(\frac{R_j(t)}{T_j(t)}\right)$ computations are logged in the Radio Resource Allocation csv file.

gNB ID													UE ID		
Carrier ID	gNB ID	CC ID	Slot ID	Slot	Total PRBs	Slot Start Time(ms)	Slot End Time(ms)	UE ID	BitsPerPRB	BufferFill(B)	Allocated PRBs	Rank	Past Performance (PF)	Bits per PRB	Allocated PRBs
	9	1	2	Downlink	273	1000.5	1001	11	432	75250	234	432	0		
	9	1	2	Downlink	273	1000.5	1001	10	368	75250	0	368	0		
	9	1	2	Downlink	273	1000.5	1001	12	224	75250	0	224	0		
	9	1	1	Downlink	273	1001	1001.5	11	432	137846	234	432	0		
	9	1	1	Downlink	273	1001	1001.5	10	368	150500	0	368	0		
	9	1	1	Downlink	273	1001	1001.5	12	224	150500	0	224	0		
	9	1	2	Downlink	273	1001.5	1002	11	432	200442	234	432	0		
	9	1	2	Downlink	273	1001.5	1002	10	368	225750	0	368	0		
	9	1	2	Downlink	273	1001.5	1002	12	224	225750	0	224	0		
	9	1	1	Downlink	273	1002	1002.5	11	432	263038	234	432	0		
	9	1	1	Downlink	273	1002	1002.5	10	368	301000	0	368	0		

Figure 3-8: Radio resource allocation log file showing allocation per carrier per slot between each gNB and its associated UEs.

3.9 PHY Layer

3.9.1 Overview of the PHY implementation

NetSim is a packet level simulator for simulating the performance of end-to-end applications over various packet transport technologies. NetSim can scale to simulating networks with 100s of end-systems, routers, switches, etc. NetSim provides estimates of the statistics of application-level performance metrics such as throughput, delay, packet-loss, and statistics of network-level processes such as buffer occupancy, collision probabilities, etc.

To achieve a scalable simulation that can execute in reasonable time on desktop level computers, in all networking technologies the details of the physical layer techniques have been abstracted up to the point that bit-error probabilities can be obtained from which packet error probabilities are obtained.

Of all the wireless access technologies implemented in NetSim, the most sophisticated is 5G NR, in which the physical layer utilizes a variety of techniques that go well beyond even 4G LTE. These include multiple subcarrier bandwidths in the same system, slot lengths that depend on the subcarrier bandwidth, flexible time-division duplexing, a wide range of constellation sizes and coding rates, multiuser MIMO-OFDM, etc. Particularly with regard to MIMO-OFDM, with the attendant channel estimation (the errors therein), and the complexities of signal processing, NetSim has taken the design decision to replace these by idealized, symbol level models, where the statistics of the effective stochastic channel gains, and the statistics of the effective stochastic noise and interference are modelled in an idealized setting. Such models then permit the calculation of the required bit error rates, and thereby code block error rates, etc.

Overview of the 5G NR PHY:

- 5G NR utilizes an implementation of OFDMA, with several different carrier bandwidths, and a wide range of modulation and coding schemes.
- Users would be sharing the same RF bandwidth but would be using different modulation schemes and thus obtaining different bit rates. As the devices involved in the communication move around, the radio channel between them also keeps changing.
- The received SNR is determined from pathloss calculated per the 3GPP’s stochastic propagation models. The models provide signal attenuation as an output. Several parameters are used in the model, including the distance between the transmitter and the receiver.
- A CQI is computed for all the symbols in one TB, based on the SNR calculated on the data channels (DL and UL). The SNR calculation is done at the start of the simulation, then every UE measurement interval and at every instant a UE moves. In calculating SNR, the noise power is obtained from $N = k \times T \times B$.

- Based on the SNR, the Adaptive Modulation and Coding (AMC) functionality determines the values of Q , the modulation order, and R , the code rate, in the TBS formula. The SNR is computed on a per UE level for UL and DL.
- The transport block size in NetSim is as per the MAC procedure for TBS determination standardized in TS 38.214 Section 5.1.3.2 (DL) and 6.1.4.2 (UL).
- An approximate estimate of the TBS per carrier is:

$$n_{info} = R \times \log_2(Q) \times \nu \times n_{sc}^{rb} \times n_{symbol} \times N_{PRB} \times (1 - OH) \quad (9)$$

Where R is the code rate, Q is the modulation order, ν is the number of MIMO layers, n_{sc}^{rb} is the number of subcarriers per resource block, n_{symbol} is the number of symbols per slot, N_{PRB} is the number of PRBs and OH is the overheads specified in the standard.

- The available PHY resource is shared dynamically between the users, with the resource allocation being dynamically adjusted per user demands and channel conditions. The MAC Scheduler determines the data (how much to and from, which UE and gNB) that is to be transmitted, from the higher layer RLC buffer, in units of Physical Resource Blocks (PRBs). It is transmitted at a rate determined using R , code rate and Q , modulation order of the UE – gNB channel.

3.9.2 Transmit power, Total Radiated power and EIRP

According to 3GPP standard 38.901 section 7.8, and common simulation practice, the Transmit Power parameter in a NetSim gNB or eNB is the power of a single transmitter (antenna port). The default value is 40 dBm.

In contrast, vendor datasheets usually specify the total combined power of the radio unit, which may contain multiple transmitters. The relationship is

$$TRP \text{ (dBm)} = \text{Per Transmitter Power (dBm)} + 10 \log_{10}(NTXU) \quad (10)$$

where TRP is the Total Radiated Power and $NTXU$ is the Number of Transmitters.

Example: If a user configures the antenna counts as 32 transmit and 32 receive (32T32R), then

$$TRP = 40 + 10 \log_{10}(32) = 55.05 \text{ (dBm)} \approx 320 \text{ W} \quad (11)$$

EIRP (Effective Isotropic Radiated Power) is the radiated power in the most favorable direction. It includes antenna gain.

$$EIRP \text{ (dBm)} = \text{Total Conducted Power (dBm)} + \text{Antenna Gain (dBi)} \quad (12)$$

If 3 dB loss is assumed between conducted and radiated power,

$$\text{Total Conducted power} = 55.05 + 3 = 58.05 \text{ dBm} \quad (13)$$

And if the maximum antenna gain was 25 dBi, we have

$$EIRP = 58.05 + 25 = 83.05 \text{ dBm} \quad (14)$$

Finally, if the bandwidth was set to 100 MHz, then the EIRP density would be

$$\text{EIRP Density} = 83.05 - 10 \log_{10}(100) = 63.05 \text{ (dBm/MHz)} \quad (15)$$

3.9.3 MIMO and Beamforming

- For a transmitter (gNB or eNB) with t antennas and a receiver with r antennas, the $r \times t$ channel gain matrix (between every transmit-receive antenna pair) has complex Gaussian elements. We assume in the standard model that the complex Gaussian elements are statistically independent across elements, and each element is a circularly symmetric Gaussian. We denote this matrix by H .
- For the channel matrix H being defined as above, the Wishart Matrix is defined as follows:

$$W = HH^\dagger \quad r < t,$$

$$W = H^\dagger H \quad r \geq t$$

Therefore, letting $m = \min(r, t)$, W is an $m \times m$ nonnegative definite matrix, with eigenvalues $\lambda_1 \geq \lambda_2 \geq \lambda_3 \geq \dots \geq \lambda_L > 0 = \lambda_{L+1} = \dots = \lambda_m$. It is these eigenvalues that are used in the parallel SISO models described below.

- NetSim permits the user to enable or disable a stochastic fading model. Fading is modelled by the elements of H being time varying, with some coherence time. Such time variation results in the eigenvalues of W also varying. NetSim models such time variation by letting the user define a coherence time during which the eigenvalues (fast fading gains) are kept fixed. For each (r, t) value, NetSim maintains a list of samples of eigenvalues for the corresponding Wishart matrix. To model fading, a new set of eigenvalues is used by NetSim in successive coherence times.
- Putting the above discussions together, if fast fading with eigen-beamforming is enabled in NetSim's GUI, then the MIMO link is modelled by several SISO channels (see below), with the symbol level channel gain being derived from the eigenvalues of the Wishart matrix.

$$\text{BeamFormingGain (dB)} = 10 \log_{10}(\text{EigenValue}) \quad (16)$$

- It must be noted that the eigenvectors are not required as they are only a part of the receive and transmit signal processing, and NetSim only needs to work with the equivalent symbol-by-symbol flat fading SISO channels.
- If fast fading is disabled, NetSim reduces the MIMO transmission to a set of parallel, independent channels with constant gain, since the Beamforming gain does not change with time.
- Note that the LOS probability parameter in NetSim is solely used to compute the large scale pathloss per the 3GPP 38.901 standard. This parameter is not used in the channel rank (MIMO layers) computations.

Table 3-3: Determination of (i) No. of MIMO layers and (ii) Gains in each layer using Fading and Beamforming parameters.

Fading and Beamforming	No. of MIMO layers	Beamforming Gain (per layer) and Model
No Fading MIMO unit gain	$\min(N_t, N_r)$	Unity (0 dB). A theoretical model useful for benchmarking.
No fading MIMO array gain	$\min(N_t, N_r)$	Max (N_t, N_r) . Assumes Matched Filter Precoding (MFP) and Maximal Ratio Combining (MRC)
Rayleigh with Eigen beamforming	$\min(N_t, N_r)$	Eigenvalues of the Wishart Matrix. Assumes MFP and MRC
Rician with Eigen beamforming	$\min(N_t, N_r)$	Eigenvalues of HH^H (Rician channel covariance matrix). Assumes MFP and MRC.

3.9.4 Type-1 Codebook (per TS 38.214)

This section explains the implementation of Type1 CSI feedback-based precoding codebooks as defined in 3GPP LTE/NR (TS 38.214) for MIMO beamforming systems.

The implementation is generic and supports:

Different antenna geometries ($N_1 \times N_2$). Single rectangular array of antenna ports with:

N_1 : Number of antenna elements in horizontal direction

N_2 : Number of antenna elements in vertical direction

Multiple oversampling factors (O_1, O_2)

O_1 : Horizontal oversampling factor

O_2 : Vertical oversampling factor

1 to 8 transmission layers

Total antenna ports:

$$P_{CSI-RS} = 2 \times N_1 \times N_2 \quad (17)$$

The factor 2 represents dual polarization.

Algorithm:

Step 1: A random MIMO channel matrix $H \in \mathbb{C}^{N_r \times N_t}$ is generated (Rayleigh fading) between the UE and the gNB.

Step 2: Perform Singular Value Decomposition (SVD) of H to calculate Rank:

$$H = U \cdot \Sigma \cdot V^H \quad (18)$$

For each layer L :

- $W = V[:, : L]$
- $R = B \log_2 \det \left(I_{N_r} + \frac{P}{L(N_0 B + I)} H W W^H H^H \right)$
- L giving maximum rate is selected as the Rank.

Where:

- P : power of gNB multiplied by the path loss between gNB and UE
- L : number of layers (Rank)
- B : system bandwidth
- H : channel matrix
- W : precoding matrix
- N_0 : noise spectral density
- I : Interference

Step 3: For the selected rank, construct all candidate precoding matrices (W) from the Type-1 codebook (as defined in 3GPP TS 38.214, Sec. 5.2.2.2.1).

Select the Precoder with maximum Frobenius norm F_i :

$$F_i = \|H \cdot W\|_F \quad (19)$$

Step 4: To reduce search time, we have adopted a new search pattern:

Coarse phase: Compute Frobenius norm for every 4th codebook entry to find a coarse best index.

Fine phase: Perform an exhaustive search within ± 8 entries around this coarse index to locate the optimal precoder.

Step 5: After testing all codebook entries, the UE selects the precoder and calculates eigenvalues.

Step 6: Record the layer wise SINR and Beamforming Gains in LTENR_Radio_Measurements_Log.csv.

Codebook Generation:

Each rank corresponds to a structured precoder matrix built from $\varphi_n, \theta_p, \mu_m, v_{(l,m)}, \tilde{v}_{l,m}$ as specified in Tables 5.2.2.2.1-5 through 5.2.2.2.1-12.

φ_n, θ_p : Phase rotation terms, used to create different phase-shifted versions of the same beam.

$$\varphi_n = e^{\frac{j\pi n}{2}} \quad (20)$$

$$\theta_p = e^{\frac{j\pi p}{4}} \quad (21)$$

μ_m : It is a steering vector in the vertical direction:

$$\mu_m = \left[1 \quad e^{\frac{j2\pi m}{O_2 N_2}} \quad \dots \quad e^{\frac{j2\pi m(N_2-1)}{O_2 N_2}} \right] \quad (22)$$

$v_{(l,m)}, \tilde{v}_{l,m}$: Combines horizontal and vertical (from μ_m) steering into a 2D beam.

$$v_{(l,m)} = \left[\mu_m \quad e^{\frac{j2\pi l}{O_1 N_1}} \cdot \mu_m \quad \dots \quad e^{\frac{j2\pi l(N_1-1)}{O_1 N_1}} \cdot \mu_m \right]^T \quad (23)$$

$$\tilde{v}_{l,m} = \left[\mu_m \quad e^{\frac{j4\pi l}{O_1 N_1}} \cdot \mu_m \quad \dots \quad e^{\frac{j4\pi l(N_1/2-1)}{O_1 N_1}} \cdot \mu_m \right]^T \quad (24)$$

Each precoder is identified by indices $i_{11}, i_{12}, i_{13}, i_2$. The ranges of these indices depend on N_1, N_2, O_1, O_2 and Rank L .

N_1, N_2 : Number of antennas in the horizontal and vertical direction of the panel.

O_1, O_2 : Oversampling factor in horizontal and vertical direction. They increase the resolution of the beam grid in the horizontal (O_1) and vertical (O_2) directions.

Example: If the horizontal dimension has $N_1 = 4$ antenna elements, we will normally get 4 discrete beams. With $O_1 = 2$ oversampling, the grid is refined, and we now get $4 \times 2 = 8$ candidate beams in the horizontal direction, allowing better coverage of possible beam angles.

The code loops over all valid index combinations, generating all possible candidate precoders.

3.9.5 MIMO (Digital) Beamforming Assumptions in NetSim

NetSim makes the following assumptions to simplify MIMO operations for a packet-simulator:

- Operation in spatial multiplexing mode only and not in transmit diversity mode.
- The $LayerCount = \min(N_t, N_r)$ where N_t is the number of transmit antennas and N_r is equal to the number of receive antennas.
- The rank of the channel is assumed to be equal to the layer count. NetSim doesn't perform any Rank indicator (RI) computations.
- Each layer is reduced to a flat fading SISO channel, i.e., for layer $j, 1 \leq j \leq LayerCount$,

$$y_j = \sqrt{\lambda_j} x_j + w_j \quad (25)$$

- where, x_j is the symbol transmitted, λ_j is the corresponding eigenvalue of the Wishart matrix obtained as in the previous section, w_j is circular symmetric complex Gaussian noise, and y_j is the complex valued baseband received symbol.
- Since the distance between the transmitter and receiver is much larger than the antenna spacings, a common pathloss is assumed for every layer. The pathloss is modelled, as usual, using distance dependent pathloss (power law), log normal shadowing, and a statistical model for fast fading (e.g., Rayleigh fading).
- Then, given the transmit power in the symbol x_j , the layer SNR can be obtained directly from the flat fading SISO equivalent model displayed above.
- It is assumed that the transmit power is equally split between all *Layers* transmitted. At a high SNR, (iterative) water-filling will lead to nearly equal power allocation across all subcarriers and all layers.
- The transmit power (or total radiated power) is not split equally among the antennas. The per-antenna power depends on the beamforming vector used. For example, if the (eigenvalue) beamforming vector is $[1, 0]^T$ in the 2-antenna case, all the power is radiated out of the first antenna. If it is $\left[\frac{1}{\sqrt{2}}, \frac{1}{\sqrt{2}}\right]^T$, then the power is split equally among the antennas ... and so on. NetSim abstracts out the actual beamforming operation and computes the received SINR when the beamforming vectors are used.
- Downlink parallel transmission to multiple users is enabled by utilising multiple parallel resource blocks. Within each resource block, all MIMO layers are transmitted to the same UE.
- UEs receive no interference from other gNBs, and a gNB does not receive interference from UEs connected to any other gNB.

- Error free channel: This arises due to the practical fact that the adaptive MCS algorithm chooses the modulation order and coding scheme based on the SNR, in such a way that the data is decoded successfully at the receiver with a very high probability.
- The MAC scheduler will assign the subcarriers to the UEs. If required, all available subcarriers can also be assigned to a single UE.
- The channel is flat across the bandwidth per user. Modelling frequency selective fading within each user has been avoided to reduce computation time; NetSim already chooses a different fading gain every coherence time. Hence further averaging over frequency is not modelled. Note that the scheduler does not allot RBs based on CQI feedback and hence modelling frequency selectivity is not necessary.

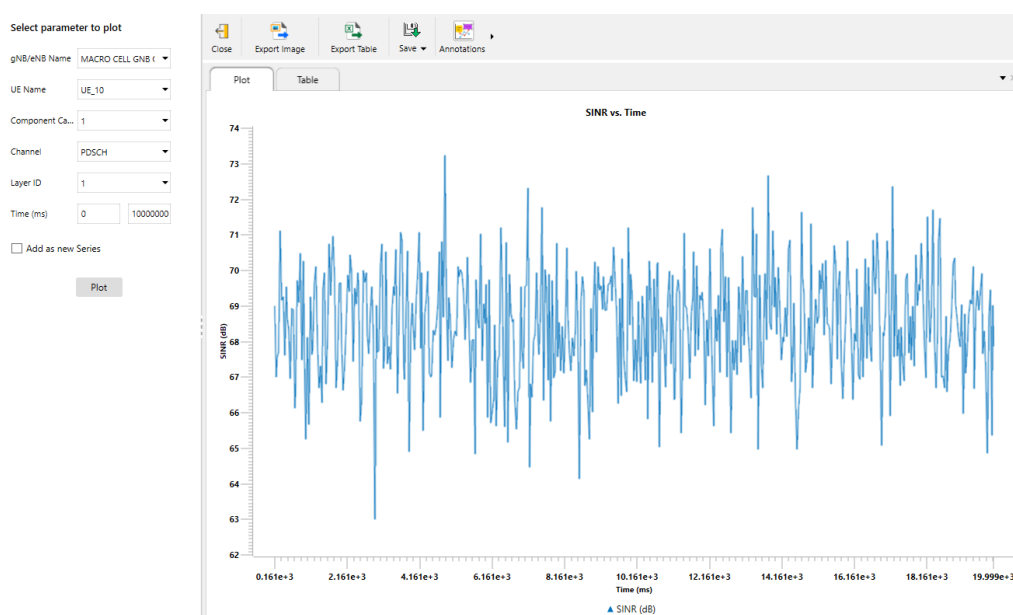


Figure 3-9: An example NetSim output showing SINR vs. time for each MIMO layer, as the UE moves away from the gNB. The beamforming gain is recalculated every coherence time.

In summary, NetSim models the effect of eigen-beamforming in MIMO systems via the eigenvalues of the gram matrix formed using (random) channel instantiations. These eigenvalues are used to compute layer-wise SNRs and the corresponding CQI. The CQI values are used by a scheduler to fix the TBS parameters, and this in turn determines the throughput.

NetSim’s power lies in its ability to incorporate the impact of link-level factors (such as beamforming) on the network-level performance with high precision and computational efficiency. This, in turn, allows the simulator to scale to 10s of gNBs and 100s of UEs, and yet return performance results in a short time.

3.9.6 Analog beamforming in the SSB

- In Analog beamforming, multiple antennas are used to concentrate the radiated power towards a particular direction (e.g., a part of a sector), thus improving the received SINR and the probability of detecting the SSB from the gNB (at a UE.)
- Analog beamforming and digital beamforming are different as shown in Table 3-4.

Table 3-4: *Difference between Analog and digital beamforming*

	Analog Beamforming	Digital Beamforming
Benefit	Array gain	Spatial Multiplexing/Diversity
Principle	Use the antennas to steer the main lobe towards the users in a particular area (e.g., a sector, and e.g., using a phased array). Directional (Spatial). Channel independent	Transmit and receive coding to create parallel channels. Eigen vector based. Channel dependent
Use Case	mmWave, Short range, LOS	Low and Mid Band, Medium and long ranges, NLOS

- In NetSim, downlink Analog beamforming is implemented only in the control plane, i.e., broadcast beams for the SS/PBCH channel. If Analog beamforming is enabled in the UI then it will be used in signal strength calculations for purposes of Initial access (association) and Handovers.
- The Analog beamforming gain computed is a wideband estimate.
- A certain fraction of the (time-frequency) resources is deducted for control plane operations, when computing available resources in the PDSCH. This fraction is termed as overheads (OH) and the fractions are different for DL, UL and for FR1, FR2 as explained in section 3.9. Analog beamforming measurements are assumed to be part of this overhead.
- The Initial access and handover decisions are based on received SSB SNR, defined as

$$SNR = \frac{\text{RxSignalLevel (dB)} + \text{AnalogBFGain (dB)}}{N_0 \times W} \quad (26)$$

where N_0 is the noise spectral density and W is the channel bandwidth. Recall, that rate (MCS selection) is based on PDSCH SINR.

- Given the directional beamforming and the periodic transmission bursts we assume that SSB interference from other gNBs is NIL. The probability of two SSB (directional) beams from two gNBs arriving at the same time at a UE is low. Even if this were to occur then both beams would be impacted almost equally by interference and the relative impact is negligible. This stems from the fact that UEs would see nearly equal powers from each gNB when H/O is occurring. Hence SNR is used.
- In the above formula:

$$\text{RxSignalLevel} = \text{gNBTxPower} + \text{PathGain} + \text{ShadowFading} \quad (27)$$

- The gNBTxPower is the transmit power in the SSB. This is different from the per-layer transmit power that NetSim uses in PDSCH transmissions. The SSB power is set equal to the total power across all layers in the data channel (PDSCH).

- NetSim does not (currently) implement Analog beamforming in the PDSCH or in the PUSCH. Digital beamforming can be enabled in the PDSCH/PUSCH as explained in section 3.9.
- Analog beamforming is supported both in 5G (gNBs) as well as 4G (eNBs).

3.9.6.1 Assumptions

The UE's optimal receive beam is perfectly aligned to the gNB's optimal transmit beam. As shown in the figure below, UE needs to measure RSRP based on the selected best SSB from serving cell and neighbouring cells, respectively. In this example, NetSim assumes beam 3 from s-gNB and beam 1 from neighbor gNB is perfectly aligned with the UE's receive beams.

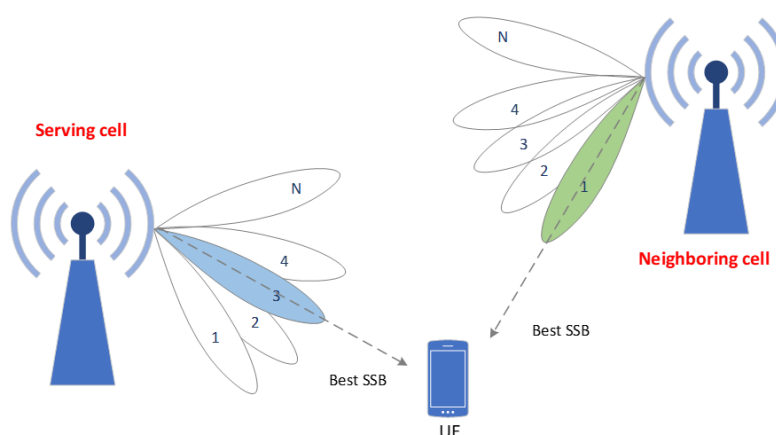


Figure 3-10: UE Measuring RSRP using Beamforming

Based on the above, NetSim computes an upper bound on the average Analog beamforming gain (dB) as $10 \log_{10}(N_t \times N_r)$. Here N_t is the transmit antenna count at the gNBs and N_r is the receive antenna count at the UE.

The beam selection and alignment are assumed to occur instantaneously. There is no time delay to account for beam-selection, SSB burst periodicity etc. Users requiring such time delays can attempt modelling it using the Handover interruption time variable available in the gNB properties. In any case, the beam selection/monitoring of the best beams from both serving and neighbouring cells are assumed to be occurring in parallel with the other data processing taking place at the UE.

3.9.6.2 Logging

There is a change in radio measurements data logging in comparison with v13.1.

- The column DL/UL is being replaced as “Channel” and will have three types of entries (i) PDSCH (ii) PUSCH and (iii) SSB.
- PUSCH/PDSCH transmit/receive powers will continue to be logged on a per MIMO layer basis.
- The SSB is transmitted/received as a single stream using all Tx/Rx antennas. Hence this will have a single value for Tx-power (equal to the gNB Tx-power set in UI), for Rx-power and for AnalogBFGain.

3.9.7 Rank Estimation

The channel rank determines the number of parallel data streams (layers) that can be transmitted between the base station (BS) and user equipment (UE) in a MIMO system. This value is influenced by the propagation environment, channel model and the beamforming technique used.

The table below shows the rank algorithms supported when different fading and beamforming models are used.

Table 3-5: Rank algorithms with respect to Fading models.

Fading Model	Beamforming	Rank Algorithm(s) Supported
No Fading	Unit Gain	Max Rank, Min (N_t, N_r)
No Fading	Array Gain	Max Rank, Min (N_t, N_r)
Rayleigh	Eigen	Max Rank, Min (N_t, N_r), Max Rate
Rician	Eigen	Max Rank, Min (N_t, N_r), Max Rate
Rayleigh	Type-1 BF	Max Rate
Rician	Type-1 BF	Max Rate

The Max Rate Algorithm

In this case, each UE sees a channel matrix H of dimensions $N_r \times N_t$ representing the channel from the BS to the UE. The optimal number of layers is selected by solving:

$$\max_{1 \leq m \leq \min\{N_r, N_t\}} \left(\sum_{i=1}^m \log \left(1 + \frac{SINR}{m} \right) \right) \quad (28)$$

where the SINR for the i -th layer is computed as:

$$SINR = \frac{P \cdot \beta \cdot \sigma^2}{N_o \cdot B + I} \quad (29)$$

Where:

- P : Tx power of BS (gNB)
- β : path loss between BS and UE_k
- σ : i -th largest singular value of H_k
- N_o : noise spectral density
- B : system bandwidth
- I : Out-of-cell Interference

3.9.7.1 Logging of the Channel Rank

The channel rank selected by the system is logged for each transmission instance in the file LTENR_Radio_Measurements_Log.csv, under the column titled “Rank”.

3.9.8 Fast fading

For a transmitter (gNB or eNB) with t antennas and a receiver with r antennas, the $N_r \times N_t$ channel gain matrix (between every transmit-receive antenna pair) on a given subcarrier has complex Gaussian elements. We assume in the standard model that the complex Gaussian elements are statistically independent across elements (which is the case the antennas are spread sufficiently far apart, e.g., of the order of a few wavelengths), and each element is a circularly symmetric Gaussian. We denote this matrix by H .

In NetSim, Fast-Fading is modeled by the elements of the H-Matrix being time-varying, with some coherence time. NetSim abstracts out the actual (digital) beamforming operation and computes the received SINR when the beamforming vectors are used. The MIMO link is modelled by parallel SISO channels, and the beamforming gain/loss would be equal to Eigenvalues of the Gram matrix of H (which would also be time-varying). This is the case when the transmitter/receiver uses Eigen beamforming to precode/combine the signals across antennas, respectively. In turn, it assumes the availability of channel state information at both the transmitter and receiver. In the case where multiple layers are transmitted to different users, the interference is calculated by considering its statistics, by assuming that the channels between the base station and the different users to be independent of each other.

3.9.8.1 Rician Fading for MIMO Systems

We denote N_t : Number of transmit antennas, N_r : Number of receive antennas, and K : Rician K-factor. The range of K in NetSim is 0 to 10,000 with support for two decimals. When $K = 0$ we get Rayleigh fading and when $K \rightarrow \infty$ we get a deterministic LOS channel i.e., a constant gain channel.

NetSim applies Eigen beamforming and precoding with the number of MIMO-layers (also called channel-rank) $m = \min(N_t, N_r)$.

NetSim creates a H matrix of size $N_r \times N_t$ with each element

$$h_{ij} = x + iy \quad (30)$$

where $x, y \sim N(\mu, \sigma^2)$ with $\mu = \sqrt{\frac{K}{2(K+1)}}$, and $\sigma = \sqrt{\frac{1}{2(K+1)}}$

Let λ_i be the eigen values of HH^H . Then the layer wise gains (in linear scale) are given by

$$\text{Gains} = \{\lambda_1, \lambda_2, \dots, \lambda_{\min(N_t, N_r)}\} \quad (31)$$

These gains are recorded in the columns “Beamforming Gain” in the Radio Measurements log file.

3.9.9 Antenna: Omni and Sector

NetSim implements both Omni and sector antennas. With Omni directional antennas the gain in all directions is 0 dB.

The sector antennas are modeled per the 2D parabolic antenna pattern given in 3GPP TR 37.840. To accurately simulate a tri-sector gNB, it is necessary to deploy three “Macro Cell Sector Antennas,” each configured with the appropriate boresight angles to represent the three 120-degree sectors effectively. For example, the boresight angles could be set to 60°, 180°, and 300°. This configuration ensures that the antennas collectively cover a full 360° area, with each

sector providing a 120-degree field of coverage. By adjusting the boresight angles in this manner, the configuration can accurately reflect the directional characteristics of a tri-sector gNB.

The horizontal radiation pattern of a sector antenna is given by

$$A_{E,H}(\varphi) = -\min \left[12 \left(\frac{\varphi}{\varphi_{3dB}} \right)^2, A_m \right] \quad (32)$$

where, A_m is the front to back ratio (i.e., the ratio of power gain between the front and rear of a directional antenna). This is a user input with a default setting of 30 dB.

φ is the angle formed between the direction of interest (i.e., the line connecting the UE to the gNB) and the antenna's boresight direction (azimuth angle).

φ_{3dB} is the 3 dB, or half power, beam width of the antenna.

The sector antenna gain is given by the expression

$$A_E(\varphi, \theta) = G_{E,max} - \min \{ -[A_{E,H}(\varphi) + A_{E,V}(\theta)], A_m \} \quad (33)$$

where, $A_{E,V}(\theta)$ is currently 0 dB, and is a parameter reserved for future use to include the vertical radiation pattern of the antenna, and

$G_{E,max}$ is the maximum directional gain of the radiation element (in dB) i.e., the gain along the antenna boresight; this is a user input and the default value is 8 dBi.

The boresight angle denotes the azimuthal direction of maximum gain, or the highest radiated power, and is a user input. This can vary from 0 to 360 degrees. Angle in NetSim is defined to start at 0 from the positive X-axis. If positive Y points downward, the angle increases on clockwise rotation from the positive X-axis. If positive Y points upward, the angle increases in an anti-clockwise direction from the positive X-axis. The unit for angle is degrees.

3.9.10 NR Frequency Bands

The definition of frequency ranges is per the table given below.

Table 3-5: NR Frequency Bands Ranges

Frequency range	Designation	Corresponding frequency range
FR1	FR1	410 MHz – 7125 MHz
FR2	FR2-1	24250 MHz – 52600 MHz
FR2	FR2-2	52600 MHz – 71000 MHz

3.9.10.1 NR Band – FR 1

The FR1 bands (per 3GPP TS 38.101-1 V15.5.0 (2019-03)) implemented in NetSim are those that run:

- TDD Single Band in Duplex mode, namely n34, n38, n39, n40, n41, n50, n51, n77, n78, n79, n259, n260, n261 and n262.
- FDD Single Band in Duplex mode, namely n1, n2, n3, n5, n7, n8, n12, n20, n25, n28, n66,

n70, n71 and n74.

Table 3-6: NR operating bands in FR1 in NetSim

NR operating band	Uplink (UL) operating band BS receive / UE transmit $F_{UL,low} - F_{UL,high}$	Downlink (DL) operating band BS transmit / UE receive $F_{DL,low} - F_{DL,high}$	Duplex Mode
n1	1920 MHz – 1980 MHz	2110 MHz – 2170 MHz	FDD
n2	1850 MHz – 1910 MHz	1930 MHz – 1990 MHz	FDD
n3	1710 MHz – 1785 MHz	1805 MHz – 1880 MHz	FDD
n5	824 MHz – 859 MHz	869 MHz – 894 MHz	FDD
n7	2500 MHz – 2570 MHz	2620 MHz – 2690 MHz	FDD
n8	880 MHz – 915 MHz	925 MHz – 960 MHz	FDD
n12	699 MHz – 716 MHz	729 MHz – 746 MHz	FDD
n20	832 MHz – 862 MHz	791 MHz – 821 MHz	FDD
n25	1850 MHz – 1915 MHz	1930 MHz – 1995 MHz	FDD
n28	703 MHz – 748 MHz	758 MHz – 803 MHz	FDD
n34	2010 MHz – 2025 MHz	2010 MHz – 2025 MHz	TDD
n38	2570 MHz – 2620 MHz	2570 MHz – 2620 MHz	TDD
n39	1880 MHz – 1920 MHz	1880 MHz – 1920 MHz	TDD
n40	2300 MHz – 2400 MHz	2300 MHz – 2400 MHz	TDD
n41	2496 MHz – 2690 MHz	2496 MHz – 2690 MHz	TDD
n50	1432 MHz – 1517 MHz	1432 MHz – 1517 MHz	TDD
n51	1427 MHz – 1432 MHz	1427 MHz – 1432 MHz	TDD
n66	1710 MHz – 1780 MHz	2110 MHz – 2200 MHz	FDD
n70	1695 MHz – 1710 MHz	1995 MHz – 2020 MHz	FDD
n71	663 MHz – 698 MHz	617 MHz – 652 MHz	FDD
n74	1427 MHz – 1470 MHz	1475 MHz – 1518 MHz	FDD
n77	3300 MHz – 4200 MHz	3300 MHz – 4200 MHz	TDD
n78	3300 MHz – 3800 MHz	3300 MHz – 3800 MHz	TDD
n79	4400 MHz – 5000 MHz	4400 MHz – 5000 MHz	TDD
n259	39500 MHz – 43500 MHz	39500 MHz – 43500 MHz	TDD
n260	37000 MHz – 40000 MHz	37000 MHz – 40000 MHz	TDD
n261	27500 MHz – 28350 MHz	27500 MHz – 28350 MHz	TDD
n262	47200 MHz – 48200 MHz	47200 MHz – 48200 MHz	TDD

Maximum transmission bandwidth configuration The maximum transmission bandwidth configuration N_{RB} for each UE channel bandwidth and subcarrier spacing is specified below.

Table 3-7: Maximum transmission bandwidth configuration N_{RB}

SCS (kHz)	5 MHz	10 MHz	15 MHz	20 MHz	25 MHz	30 MHz	40 MHz	50 MHz	60 MHz	80 MHz	90 MHz	100 MHz
N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
15	25	52	79	106	133	160	216	270	N/A	N/A	N/A	N/A
30	11	24	38	51	65	78	106	133	162	217	245	273
60	N/A	11	18	24	31	38	51	65	79	107	121	135

Minimum guard band and transmission bandwidth configuration The minimum guard band for each UE channel bandwidth and SCS is specified below.

Table 3-8: Minimum guard band for each UE channel bandwidth and SCS (kHz)

SCS	5	10	15	20	25	30	40	50	60	80	90	100
15	242.5	312.5	382.5	452.5	522.5	592.5	552.5	692.5	N/A	N/A	N/A	N/A
30	505	665	645	805	785	945	905	1045	825	925	885	845
60	N/A	1010	990	1330	1310	1290	1610	1570	1530	1450	1410	1370

NOTE: The minimum guard bands have been calculated using the following equation:

$$\frac{(BW_{channel} \times 1000 \text{ (kHz)}) - N_{RB} \times SCS \times 12}{2} - SCS \quad (34)$$

where N_{RB} are from Table 3-8.

The minimum guard band of receiving BS SCS 240 kHz for each UE channel bandwidth is specified below.

Table 3-9: Minimum guard band (kHz) of SCS 240 kHz from Standards Table 5.3.3-2

SCS (kHz)	100 MHz	200 MHz	400 MHz
240	3800	7720	15560

3.9.10.2 NR Band – FR 2

The FR2 bands (per 3GPP TS 38.101-2 V15.5.0 (2019-03)) implemented in NetSim are shown below.

Table 3-10: NR operating bands in FR2 in NetSim

Operating Band	Uplink (UL) operating band BS receive UE transmit	Downlink (DL) operating band BS transmit UE receive	Duplex Mode
n257	26500 MHz – 29500 MHz	26500 MHz – 29500 MHz	TDD
n258	24250 MHz – 27500 MHz	24250 MHz – 27500 MHz	TDD
n259	39500 MHz – 43500 MHz	39500 MHz – 43500 MHz	TDD
n260	37000 MHz – 40000 MHz	37000 MHz – 40000 MHz	TDD
n261	27500 MHz – 28350 MHz	27500 MHz – 28350 MHz	TDD
n262	47200 MHz – 48200 MHz	47200 MHz – 48200 MHz	TDD
n263	57000 MHz – 71000 MHz	57000 MHz – 71000 MHz	TDD

Table 3-11: Maximum transmission bandwidth configuration N_{RB} from Standards Table 5.3.2-1

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}	N_{RB}
60	66	132	264	N/A	N/A	N/A	N/A
120	32	66	132	264	N/A	N/A	N/A
480	N/A	N/A	N/A	66	124	248	N/A
960	N/A	N/A	N/A	33	62	124	148

Table 3-12: Minimum guard band for each UE channel bandwidth and SCS (kHz) from Standards Table 5.3.3-1

SCS (kHz)	50 MHz	100 MHz	200 MHz	400 MHz	800 MHz	1600 MHz	2000 MHz
60	1210	2450	4930	N/A	N/A	N/A	N/A
120	1900	2420	4900	9860	N/A	N/A	N/A
480	N/A	N/A	N/A	9680	42640	85520	N/A
960	N/A	N/A	N/A	9440	42400	85280	147040

Maximum transmission bandwidth configuration

3.9.11 UE channel bandwidth

3.9.11.1 General

All UEs connected to BS (gNB) have the same channel bandwidth. This is a user settable bandwidth available in the gNB properties. Bandwidth is a single parameter in TDD; in FDD users can set DL bandwidth and UL bandwidth. It is currently not possible in NetSim to configure different channel bandwidths to different UEs connected to a BS.

The above is true even in the case of carrier aggregation (CA). All component carriers (CCs) are assigned to all UEs, and the pooled OFDM resources are shared between the UEs.

3.9.12 Frame structure and physical resources

3.9.12.1 Numerologies

Multiple OFDM numerologies are supported as given by Table 4.2-1 where μ and the cyclic prefix for a bandwidth part is obtained from the higher-layer parameter `subcarrierSpacing` and `cyclicPrefix`, respectively.

Table 3-13: Supported transmission numerologies from Standards Table 4.2-1

μ	$\Delta f = 15 \times 2^\mu$ (kHz)	Cyclic prefix
0	15	Normal
1	30	Normal
2	60	Normal, Extended
3	120	Normal
4	240	Normal
5	480	Normal
6	960	Normal

3.9.12.2 Frames and subframes

Downlink and uplink transmissions are organized into frames with $T_f = 10$ ms duration, each consisting of ten subframes of $T_{sf} = 1$ ms duration. The number of consecutive OFDM symbols per subframe is $N_{symb}^{subframe,\mu} = N_{symb}^{slot} \cdot N_{slot}^{subframe,\mu}$.

3.9.12.3 Slots

For subcarrier spacing configuration μ , slots are numbered $n_s^\mu \in \{0, \dots, N_{slot}^{subframe,\mu} - 1\}$ in increasing order within a subframe and $n_{s,f}^\mu \in \{0, \dots, N_{slot}^{frame,\mu} - 1\}$ in increasing order within a frame. There are N_{symb}^{slot} consecutive OFDM symbols in a slot where N_{symb}^{slot} depends on Tables 3-14 and 3-15. The start of slot n_s^μ in a subframe is aligned in time with the start of OFDM symbol $n_s^\mu \cdot N_{symb}^{slot}$ in the same subframe.

OFDM symbols in a slot can be classified as ‘downlink’, ‘flexible’, or ‘uplink’.

Signaling of slot formats is described in subclause 11.1 of [5, TS 38.213].

In a slot in a downlink frame, the UE shall assume that downlink transmissions only occur in ‘downlink’ or ‘flexible’ symbols.

In a slot in an uplink frame, the UE shall only transmit in ‘uplink’ or ‘flexible’ symbols.

A UE not capable of full-duplex communication among a group of cells is not expected to

transmit in the uplink in one cell within the group of cells earlier than $N_{Rx-Tx} \cdot T_c$ after the end of the last received downlink symbol in the same or different cell within the group of cells where N_{Rx-Tx} is given by Table 3-16.

A UE not capable of full-duplex communication among a group of cells is not expected to receive in the downlink in one cell within the group of cells earlier than $N_{Tx-Rx} \cdot T_c$ after the end of the last transmitted uplink symbol in the same or different cell within the group of cells where N_{Tx-Rx} is given by Table 3-16.

Table 3-14: Number of OFDM symbols per slot, slots per frame, and slots per subframe for normal cyclic prefix from Standards Table 4.3.2-1

μ	N_{slot}^{slot}	$N_{slot}^{frame,\mu}$	$N_{slot}^{subframe,\mu}$
0	14	10	1
1	14	20	2
2	14	40	4
3	14	80	8

Table 3-15: Number of OFDM symbols per slot, slots per frame, and slots per subframe for extended cyclic prefix from Standards Table 4.3.2-2

μ	N_{slot}^{slot}	$N_{slot}^{frame,\mu}$	$N_{slot}^{subframe,\mu}$
2	12	40	4

Table 3-16: Transition time N_{Rx-Tx} and N_{Tx-Rx} from Standards Table 4.3.2-3

Transition time	FR1	FR2
N_{Rx-Tx}	25600	13792
N_{Tx-Rx}	25600	13792

3.9.12.4 Slot structure in NetSim

We show below the slot structure, in NetSim, for two examples of $\mu = 0$ and $\mu = 1$.

1. If we take $\mu = 0$, the number of slots in a sub frame is 1. The total number of slots, therefore, in a frame is $1 \times 10 = 10$. For different DL:UL ratios the slot structures are as follows.

Table 3-17: *The Slot structures for different DL:UL ratios when $\mu = 0$*

Ratio 1:1		Ratio 1:4		Ratio 4:1	
Sub Frame ID	Slot Type	Sub Frame ID	Slot Type	Sub Frame ID	Slot Type
1	UL	1	UL	1	UL
2	DL	2	DL	2	DL
3	UL	3	UL	3	DL
4	DL	4	UL	4	DL
5	UL	5	UL	5	DL
6	DL	6	UL	6	UL
7	UL	7	DL	7	DL
8	DL	8	UL	8	DL
9	UL	9	UL	9	DL
10	DL	10	UL	10	DL

2. For $\mu = 1$, the number of slots in a sub frame is 2. The total number of slots, therefore, in a frame is $2 \times 10 = 20$. For different DL:UL ratios the slot structures are as follows.

Table 3-18: *The Slot structures for different DL:UL ratios when $\mu = 1$*

Ratio 1:1		Ratio 1:4		Ratio 4:1	
Sub Frame ID	Slot Type	Sub Frame ID	Slot Type	Sub Frame ID	Slot Type
1	UL	1	UL	1	UL
1	DL	1	DL	1	DL
2	UL	2	UL	2	DL
2	DL	2	UL	2	DL
3	UL	3	UL	3	DL
3	DL	3	UL	3	UL
4	UL	4	DL	4	DL
4	DL	4	UL	4	DL
5	UL	5	UL	5	DL
5	DL	5	UL	5	DL
6	UL	6	UL	6	UL
6	DL	6	DL	6	DL
7	UL	7	UL	7	DL
7	DL	7	UL	7	DL
8	UL	8	UL	8	DL
8	DL	8	UL	8	UL
9	UL	9	DL	9	DL
9	DL	9	UL	9	DL
10	UL	10	UL	10	DL
10	DL	10	UL	10	DL

For a DL/UL mixed configuration, the first slot in NetSim is always UL and the second slot is always DL, and subsequent slots are based on the DL:UL ratio set.

3.9.13 Channel state information

Perfect CSIT and CSIR: The channel matrix H is assumed to be known perfectly and instantaneously at the transmitter and receiver, respectively. With perfect CSIT the transmitter can adapt its transmission rate (MCS) relative to the instantaneous channel state (SNR).

3.9.13.1 Channel quality indicator (CQI)

A wideband CQI is computed based on the spectral efficiency obtained from the SINR calculated on the PDSCH and PUSCH. The SINR calculation is done at the start of the simulation, then every UE measurement interval and at every instant a UE moves. In calculating SNR, the noise power is obtained from $N = k \times T \times B$. Based on the SNR, the Adaptive Modulation and Coding (AMC) functionality determines the values of Q , the modulation order, and R , the code rate, in the TBS formula.

The modulation order and code rate are based on the table chosen by the user. In the NetSim GUI users can select “table1” (corresponding to Table 3-19), “table2” (corresponding to Table 3-20) or “table3” (corresponding to Table 3-21 or the URLLC table).

NetSim does not implement Sub-band Offset. The AMC determines a wideband CQI which indicates the highest rate MCS that it can reliably decode, if the entire system bandwidth were allocated to that user.

Table 3-19: 4-bit CQI Table 1 from Standards Table 5.2.2.1-2

CQI index	Modulation	Code rate $\times 1024$	Spec. Eff.
0	out of range	–	–
1	QPSK	78	0.1523
2	QPSK	120	0.2344
3	QPSK	193	0.3770
4	QPSK	308	0.6016
5	QPSK	449	0.8770
6	QPSK	602	1.1758
7	16QAM	378	1.4766
8	16QAM	490	1.9141
9	16QAM	616	2.4063
10	64QAM	466	2.7305
11	64QAM	567	3.3223
12	64QAM	666	3.9023
13	64QAM	772	4.5234
14	64QAM	873	5.1152
15	64QAM	948	5.5547

Table 3-20: 4-bit CQI Table 2 from Standards Table 5.2.2.1-3

CQI index	Modulation	Code rate × 1024	Spec. Eff.
0	out of range	–	–
1	QPSK	78	0.1523
2	QPSK	193	0.3770
3	QPSK	449	0.8770
4	16QAM	378	1.4766
5	16QAM	490	1.9141
6	16QAM	616	2.4063
7	64QAM	466	2.7305
8	64QAM	567	3.3223
9	64QAM	666	3.9023
10	64QAM	772	4.5234
11	64QAM	873	5.1152
12	256QAM	711	5.5547
13	256QAM	797	6.2266
14	256QAM	885	6.9141
15	256QAM	948	7.4063

Table 3-21: 4-bit CQI Table 3 from Standards Table 5.2.2.1-4

CQI index	Modulation	Code rate × 1024	Spec. Eff.
0	out of range	–	–
1	QPSK	30	0.0586
2	QPSK	50	0.0977
3	QPSK	78	0.1523
4	QPSK	120	0.2344
5	QPSK	193	0.3770
6	QPSK	308	0.6016
7	QPSK	449	0.8770
8	QPSK	602	1.1758
9	16QAM	378	1.4766
10	16QAM	490	1.9141
11	16QAM	616	2.4063
12	64QAM	466	2.7305
13	64QAM	567	3.3223
14	64QAM	666	3.9023
15	64QAM	772	4.5234

3.9.14 Modulation order, code rate, and TBS determination

To determine the modulation order, target code rate, and transport block size(s) in the physical downlink shared channel, the UE shall first determine the modulation order (Q_m) and target

code rate (R), and second the UE shall use the number of layers (ν), the total number of allocated PRBs to determine the transport block size.

3.9.14.1 MCS tables

The user can select from the following MCS tables, for each gNB and associated UEs, from the GUI:

- QAM64 Table 3-23 (Table 1)
- QAM256 Table 3-24 (Table 2)
- QAM64LowSE Table 3-25 (Table 3)

The UE and gNB then use this table to determine the modulation order Q_m and Code Rate, R . The selection is based on looking up the MCS for the given spectral efficiency, which is computed as explained in Section 3.9.18. Different tables can be chosen for DL (gNB to UE) and for UL (UE to gNB). The UL table index selection based on transform precoding selection in the GUI is given in the table below.

Table 3-22: Uplink MCS Table index determination based on transform precoding and MCS table selection in GUI

Transform Precoding	MCS Table (PUSCH Config)	MCS Table Index
Enabled	QAM256	5.1.3.1–2
Enabled	QAM64LowSE	6.1.4.1–2
Enabled	QAM64	6.1.4.1–1
Disabled	QAM256	5.1.3.1–2
Disabled	QAM64LowSE	5.1.3.1–3
Disabled	QAM64	5.1.3.1–1

Table 3-23: MCS index table 1 for PDSCH from Standards Table 5.1.3.1-1

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
0	2	120	0.2344
1	2	157	0.3066
2	2	193	0.3770
3	2	251	0.4902
4	2	308	0.6016
5	2	379	0.7402
6	2	449	0.8770
7	2	526	1.0273
8	2	602	1.1758
9	2	679	1.3262
10	4	340	1.3281
11	4	378	1.4766
12	4	434	1.6953

Table 3-23 continued

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
13	4	490	1.9141
14	4	553	2.1602
15	4	616	2.4063
16	4	658	2.5703
17	6	438	2.5664
18	6	466	2.7305
19	6	517	3.0293
20	6	567	3.3223
21	6	616	3.6094
22	6	666	3.9023
23	6	719	4.2129
24	6	772	4.5234
25	6	822	4.8164
26	6	873	5.1152
27	6	910	5.3320
28	6	948	5.5547
29	2	Reserved	
30	4	Reserved	
31	6	Reserved	

Table 3-24: MCS index table 2 for PDSCH from Standards Table 5.1.3.1-2

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
0	2	120	0.2344
1	2	193	0.3770
2	2	308	0.6016
3	2	449	0.8770
4	2	602	1.1758
5	4	378	1.4766
6	4	434	1.6953
7	4	490	1.9141
8	4	553	2.1602
9	4	616	2.4063
10	4	658	2.5703
11	6	466	2.7305
12	6	517	3.0293
13	6	567	3.3223
14	6	616	3.6094
15	6	666	3.9023
16	6	719	4.2129

Table 3-24 continued

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
17	6	772	4.5234
18	6	822	4.8164
19	6	873	5.1152
20	8	682.5	5.3320
21	8	711	5.5547
22	8	754	5.8906
23	8	797	6.2266
24	8	841	6.5703
25	8	885	6.9141
26	8	916.5	7.1602
27	8	948	7.4063
28	2	Reserved	
29	4	Reserved	
30	6	Reserved	
31	8	Reserved	

Table 3-25: MCS index table 3 for PDSCH from Standards Table 5.1.3.1-3

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
0	2	30	0.0586
1	2	40	0.0781
2	2	50	0.0977
3	2	64	0.1250
4	2	78	0.1523
5	2	99	0.1934
6	2	120	0.2344
7	2	157	0.3066
8	2	193	0.3770
9	2	251	0.4902
10	2	308	0.6016
11	2	379	0.7402
12	2	449	0.8770
13	2	526	1.0273
14	2	602	1.1758
15	4	340	1.3281
16	4	378	1.4766
17	4	434	1.6953
18	4	490	1.9141
19	4	553	2.1602
20	4	616	2.4063

21	6	438	2.5664
22	6	466	2.7305
23	6	517	3.0293
24	6	567	3.3223
25	6	616	3.6094
26	6	666	3.9023
27	6	719	4.2129
28	6	772	4.5234
29	2	Reserved	
30	4	Reserved	
31	6	Reserved	

Table 3-26: MCS index table for PUSCH with transform precoding and 64QAM. Standards table 6.1.4.1-1

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
0	q	$240/q$	0.2344
1	q	$314/q$	0.3066
2	2	193	0.3770
3	2	251	0.4902
4	2	308	0.6016
5	2	379	0.7402
6	2	449	0.8770
7	2	526	1.0273
8	2	602	1.1758
9	2	679	1.3262
10	4	340	1.3281
11	4	378	1.4766
12	4	434	1.6953
13	4	490	1.9141
14	4	553	2.1602
15	4	616	2.4063
16	4	658	2.5703
17	6	466	2.7305
18	6	517	3.0293
19	6	567	3.3223
20	6	616	3.6094
21	6	666	3.9023
22	6	719	4.2129
23	6	772	4.5234
24	6	822	4.8164
25	6	873	5.1152
26	6	910	5.3320

27	6	948	5.5547
28	q	Reserved	
29	2	Reserved	
30	4	Reserved	
31	6	Reserved	

Table 3-27: MCS index table 2 for PUSCH with transform precoding and 64QAM Low SE. Standards table 6.1.4.1-2

MCS Index I_{MCS}	Modulation Order Q_m	Target code Rate $R \times [1024]$	Spectral efficiency
0	q	$60/q$	0.0586
1	q	$80/q$	0.0781
2	q	$100/q$	0.0977
3	q	$128/q$	0.1250
4	q	$156/q$	0.1523
5	q	$198/q$	0.1934
6	2	120	0.2344
7	2	157	0.3066
8	2	193	0.3770
9	2	251	0.4902
10	2	308	0.6016
11	2	379	0.7402
12	2	449	0.8770
13	2	526	1.0273
14	2	602	1.1758
15	2	679	1.3262
16	4	378	1.4766
17	4	434	1.6953
18	4	490	1.9141
19	4	553	2.1602
20	4	616	2.4063
21	4	658	2.5703
22	4	699	2.7305
23	4	772	3.0156
24	6	567	3.3223
25	6	616	3.6094
26	6	666	3.9023
27	6	772	4.5234
28	q	Reserved	
29	2	Reserved	
30	4	Reserved	
31	6	Reserved	

3.9.15 Transport block size (TBS) determination

The procedure for TBS determination is standardized in TS 38.214 Section 5.1.3.2 (DL) and 6.1.4.2 (UL). The standard specifies the TBS determination through Step 1, Step 2, Step 3, and Step 4, all of which are implemented in NetSim.

NetSim first determines the TBS as specified below:

- The UE shall first determine the number of REs (N_{RE}) within the slot.
 - A UE first determines the number of REs allocated for PDSCH within a PRB (N'_{RE}) by $N'_{RE} = N_{sc}^{RB} \times N_{symb}^{PRB} - N_{DMRS}^{PRB} - N_{oh}^{PRB}$, where $N_{sc}^{RB} = 12$ is the number of subcarriers in a physical resource block, N_{symb}^{slot} is the number of symbols of the PDSCH allocation within the slot, N_{DMRS}^{PRB} is the number of REs for DM-RS per PRB, and N_{oh}^{PRB} is set to 0.
 - A UE determines the total number of REs allocated for PDSCH (N_{RE}) by $N_{RE} = \min(156, N'_{RE}) \times n_{PRB}$, where n_{PRB} is the total number of allocated PRBs for the UE.

- Intermediate number of information bits (N_{info}) is obtained by

$$N_{info} = N_{RE} \times R \times Q_m \times \nu$$

$$TBS_{temp} = N_{RE} \times R \times Q_m \times \nu$$

- When $N_{info} \leq 3824$, TBS is determined as follows:
 - Quantized intermediate number of information bits $N'_{info} = \max\left(24, 2^n \left\lfloor \frac{N_{info}}{2^n} \right\rfloor\right)$, where $n = \max(3, \lfloor \log_2(N_{info}) \rfloor - 6)$.
 - Use Table 5.1.3.2-1 to find the closest TBS that is not less than N'_{info} .

Table 3-28: TBS for $N_{info} \leq 3824$ from Standards Table 5.1.3.2-1

Index	TBS	Index	TBS	Index	TBS	Index	TBS
1	24	31	336	61	1288	91	3624
2	32	32	352	62	1320	92	3752
3	40	33	368	63	1352	93	3824
4	48	34	384	64	1416		
5	56	35	408	65	1480		
6	64	36	432	66	1544		
7	72	37	456	67	1608		
8	80	38	480	68	1672		
9	88	39	504	69	1736		
10	96	40	528	70	1800		
11	104	41	552	71	1864		
12	112	42	576	72	1928		
13	120	43	608	73	2024		
14	128	44	640	74	2088		

15	136	45	672	75	2152
16	144	46	704	76	2216
17	152	47	736	77	2280
18	160	48	768	78	2408
19	168	49	808	79	2472
20	176	50	848	80	2536
21	184	51	888	81	2600
22	192	52	928	82	2664
23	208	53	984	83	2728
24	224	54	1032	84	2792
25	240	55	1064	85	2856
26	256	56	1128	86	2976
27	272	57	1160	87	3104
28	288	58	1192	88	3240
29	304	59	1224	89	3368
30	320	60	1256	90	3496

- When $N_{info} > 3824$, TBS is determined as follows:

- Quantized $N'_{info} = \max\left(3840, 2^n \times \text{round}\left(\frac{N_{info}-24}{2^n}\right)\right)$, where $n = \lfloor \log_2(N_{info} - 24) \rfloor - 5$.
- if $R \leq \frac{1}{4}$: $TBS = 8C \left\lceil \frac{N'_{info}+24}{8C} \right\rceil - 24$, where $C = \left\lceil \frac{N'_{info}+24}{3816} \right\rceil$
- else if $N'_{info} > 8424$: $TBS = 8C \left\lceil \frac{N'_{info}+24}{8C} \right\rceil - 24$, where $C = \left\lceil \frac{N'_{info}+24}{8424} \right\rceil$
- else: $TBS = 8 \left\lceil \frac{N'_{info}+24}{8} \right\rceil - 24$

3.9.16 HARQ

3.9.16.1 Introduction

We start with a brief and simplistic explanation of the HARQ mechanism.

- Hybrid automatic repeat request (hybrid ARQ or HARQ) is a combination of retransmissions and error correction. The HARQ protocol runs in the MAC and PHY layers.
- In the 5G PHY, a code block group (CBG) is transmitted over the air by the transmitter to the receiver. If the CBG is successfully received the receiver sends back an ACK, else if the CBG is received in error the receiver sends back a NACK (negative ACK).
- If the transmitter receives an ACK, it sends the next CBG. However, if the transmitter receives a NACK, it retransmits the previously transmitted CBG.
- In 5G, the incorrectly received CBG is not discarded but stored at the receiver. When the re-transmitted CBG is received, the two CBGs are combined. This is called Hybrid ARQ with chase-combining (HARQ-CC).

3.9.16.2 Implementation in NetSim

- HARQ is implemented in 4G (eNB) and in 5G (gNB) in both downlink and uplink.
- A HARQ entity is defined for each gNB-UE pair, separately for Uplink and Downlink and for each component carrier. The HARQ entity handles the HARQ processes.
 - Max number of HARQ processes is 8 in 4G
 - Max number of HARQ processes is 16 in 5G
- Each HARQ process transmits one Transport Block (TB) at any time.
- When operating in MIMO, each layer handles a different TB. This means that one TB is not transmitted across multiple layers.
- Each TB is split into Code blocks (CBs) and CBs are grouped into Code Block Groups (CBGs).
- At the receiver the CBGs are given to a multiplexer which combines the CBGs into a TB.
- CBGs are always retransmitted at the same MCS as the first transmission. This restriction comes from the specification of the rate matcher in the 3GPP TS 38.212 standard.

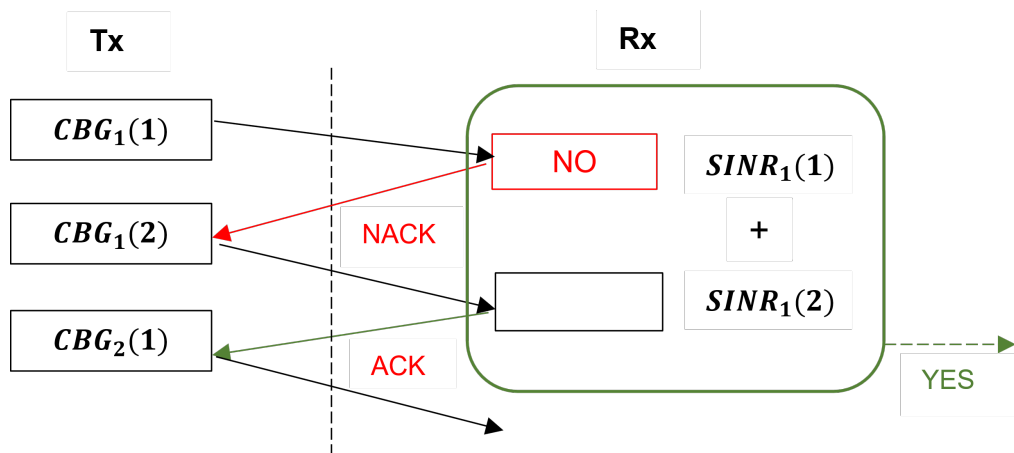


Figure 3-11: We see the HARQ transmission process. The transmitter sends CBG1 which is errored. Therefore, the receiver sends a NACK. CBG1 is then retransmitted (transmission attempt 2). The receiver then soft combines the first and second transmissions, which is successful and hence sends back an ACK.

- HARQ entity is terminated during handover-triggered de-association from a gNB and re-created at the new gNB after the handover procedure is completed.
- HARQ retransmissions have priority over new data transmissions. Within a HARQ process, new data transmissions are not taken up when retransmission data is in the queue.
- HARQ processes are multiplexed in time (slots) in a round robin fashion. For example, if we had a case with 4 HARQ processes then:

Slot 1 – HARQ Process 1 > Success

Slot 2 – HARQ Process 2 > Success

Slot 3 – HARQ Process 3 > Error

Slot 4 – HARQ Process 4 > Success
 Slot 5 – HARQ Process 1 > Success
 Slot 6 – HARQ Process 2 > Success
 Slot 7 – HARQ Process 3 > Retransmission Success
 ... and so on

3.9.16.3 Assumptions and limitations

- The HARQ ACK/NACK is sent out-of-band by the receiver immediately after receipt ($\Delta t \rightarrow 0^+$). It is then instantaneously and correctly received at the transmitter. The ACK/NACKs are not logged.
- If DL/UL transmission can occur, then reverse direction (UL/DL respectively) ACK/NACK will be successful. Specifically, even if the UL data link is in outage, ACK/NACK transmitted in the UL will be correctly received by the gNB.

3.9.16.4 Transmission flow

- Packets are either split or combined into transport blocks (TBs) depending on the packet size and the TB size. It is the TB that needs to be transmitted over the air.
 - Users can set the application layer packet size in NetSim GUI > Application properties. The packet size at the MAC is the application packet size plus transport layer and IP layer overheads. Users can obtain the MAC layer packet size from the packet trace.
 - The TB size is determined by the LTE and 5G NR protocol running in the MAC/PHY. Users can obtain the TB size from the code block log file (explained subsequently in section 3.9.15).
- TBs are then split to Code blocks (CBs). The code block size calculation and TB segmentation is explained in Section 3.9.17.
- CBs are grouped into code block groups (CBGs).
 - The max number of CBGs per TB can be set in the NetSim GUI (based on RRC parameter MAX CBG PER TB in the NetSim GUI).
- TBs are transmitted by transmitting CBGs, which in turn comprise CBs.
- BLER is applied upon CBG reception at the receiver.
- If any CB is in error, the transmitter retransmits the entire CBG of which that CB is a part.
- The receiver then soft combines the first transmission and all subsequent retransmissions.
 - Soft combining is modelled by adding their SINRs in the linear scale. For example, if there were 2 retransmissions, then the combined SINR would be given by

$$\text{CombinedSINR}_3^{Tx} = \text{SINR}_3^{Tx} + \text{SINR}_2^{Tx} + \text{SINR}_1^{Tx} \quad (35)$$

- BLER is applied on the improved (combined) SINR by tossing a biased coin.

- If any CB is in error, go to step 6, subject to transmit limit of 4 (retransmit limit of 3).
- If all CBGs (in a TB) are successful, then at the receiver, the TB is sent up to the RLC.
- Else, the entire TB is dropped.

3.9.16.5 Special cases

If there is a retransmission scheduled in a multi-layer scenario, then the scheduler cannot retransmit data in one layer and transmit new data in another layer to the same UE. Hence during retransmissions, the scheduler allows other UEs to use the resources. The reason is: the next TB can only be sent after receiving a successful ACK or if the current TB is dropped. Therefore, another TB (to the same UE) cannot be scheduled on the remaining resources. For example, if Max-throughput scheduling is used, when a CBG is received in error the NDI flag is false. When the NDI flag is false, the UE is not passed through the scheduler function; only the CB that needs to be transmitted is retransmitted. Hence remaining PRBs left — after retransmitting the errored CBG — must be allocated to a non-Max-SINR UE. Also note that, the non-Max-SINR UE's CBGs may also be errored in which case those CBGs need to be retransmitted. This complicating factor leads to a breakdown in the general belief that Max-throughput scheduler leads to Max-SINR UE getting all throughput with other UEs getting NIL throughput.

Again, consider a multi-layer scenario with CBG errors in 2 or more layers. How many PRBs should then be allocated for retransmissions and how many for new data from different UEs? In such cases NetSim calculates the PRBs required for retransmission as the max of PRBs required for retransmission in each layer.

3.9.16.6 Logging

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X
Time (ms)	gNBId	gNBIF	UEId	UEIF	Channel	CA	FrameId	Sub	SlotId	LayerId	ProcessId	Re	TBS	Modulation	CodeI	CBS	CBS	SINR(Combined)	BLE	CBG	CBK	NDI	Tra
13000.5	10	4	12	1	PDSCH	0	1301	1	2	1	1		888	256QAM	711	968	888	43.169552	0	1	1	TRUE	0
13000.5	10	4	12	1	PDSCH	0	1301	1	2	2	1		888	256QAM	711	968	888	50.511929	0	1	1	TRUE	0
13000.5	10	4	12	1	PDSCH	0	1301	1	2	3	1		888	256QAM	711	968	888	56.157132	0	1	1	TRUE	0
13000.5	10	4	12	1	PDSCH	0	1301	1	2	4	1		888	256QAM	711	968	888	58.955028	0	1	1	TRUE	0
13001.5	10	4	12	1	PDSCH	0	1301	2	2	1	1		888	256QAM	711	968	888	51.730194	0	1	1	TRUE	0
13003	10	4	12	1	PDSCH	0	1301	4	1	1	1		888	256QAM	711	968	888	43.169552	0	1	1	TRUE	0
13003	10	4	12	1	PDSCH	0	1301	4	1	2	1		888	256QAM	711	968	888	50.511929	0	1	1	TRUE	0
13003	10	4	12	1	PDSCH	0	1301	4	1	3	1		888	256QAM	711	968	888	56.157132	0	1	1	TRUE	0
13003	10	4	12	1	PDSCH	0	1301	4	1	4	1		888	256QAM	711	968	888	58.955028	0	1	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	1	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	1	2	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	2	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	2	2	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	3	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	4	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	4	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	5	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	6	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	7	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	1	1		80808	256QAM	711	8448	8112	43.169552	0	8	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	1	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	1	2	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	2	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	2	2	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	3	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	4	1	TRUE	0
13005.5	10	4	12	1	PDSCH	0	1301	6	2	2	1		80808	256QAM	711	8448	8112	50.511929	0	5	1	TRUE	0

Figure 3-12: HARQ log file showing code block transmission. Here CBS represents the information bits within a code block (CBS column).

- Transmission attempts 1, 2, 3 and 4 are indexed as 0, 1, 2, 3. If the 4th attempt is errored, the CBG is dropped.
- Packet trace only logs “packet” flow, and does not log flow of TBs, CBGs etc. Therefore, the packet trace logs a packet in the MAC OUT of the transmitter and subsequently if received successfully at the MAC IN of the receiver. If the packet is errored, it is also marked in the packet trace.
- Note that if a TB is in error then all the packets that were part of the TB will be marked as error.

- The transmission/re-transmission of CBs is logged in the Code Block logfile.
- The remarks column would have messages for HARQ preparation and would be blank for actual transmissions.
- TBS is always logged on a per layer basis.
- CBGID is also on a per layer basis.
- SINR reported in the CBG log is the post-soft combining SINR.

Time [ms]	gNBId	gNBIf	UEId	UEIf	Channel	CA	FrameId	Sub	SlotId	LayerId	ProcessId	Re	TBS	Modulation	Codef	CBS	CBS_	SINR(Combined)	BU
160.999	9	4	11	1		0	17	1	2	0	N/A		HARQ entity created						
160.999	9	4	13	1		0	17	1	2	0	N/A		HARQ entity created						
160.999	10	4	12	1		0	17	1	2	0	N/A		HARQ entity created						
160.999	10	4	14	1		0	17	1	2	0	N/A		HARQ entity created						
161	9	4	11	1	PUSCH	0	17	2	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
161	9	4	13	1	PUSCH	0	17	2	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
161	9	4	11	1	PUSCH	0	17	2	1	0		1	Allocated PRBs for new data = 0						
161	9	4	13	1	PUSCH	0	17	2	1	0		1	Allocated PRBs for new data = 0						
161	10	4	12	1	PUSCH	0	17	2	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
161	10	4	14	1	PUSCH	0	17	2	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
161	10	4	12	1	PUSCH	0	17	2	1	0		1	Allocated PRBs for new data = 0						
161	10	4	14	1	PUSCH	0	17	2	1	0		1	Allocated PRBs for new data = 0						
161.5	9	4	11	1	PUSCH	0	17	2	2	0		1	Process number = 1, NDI = True, Transmission number = 0						
161.5	9	4	13	1	PUSCH	0	17	2	2	0		1	Process number = 1, NDI = True, Transmission number = 0						
161.5	9	4	11	1	PUSCH	0	17	2	2	0		1	Allocated PRBs for new data = 0						
161.5	9	4	13	1	PUSCH	0	17	2	2	0		1	Allocated PRBs for new data = 0						
161.5	10	4	12	1	PUSCH	0	17	2	2	0		1	Process number = 1, NDI = True, Transmission number = 0						
161.5	10	4	14	1	PUSCH	0	17	2	2	0		1	Process number = 1, NDI = True, Transmission number = 0						
161.5	10	4	12	1	PUSCH	0	17	2	2	0		1	Allocated PRBs for new data = 0						
161.5	10	4	14	1	PUSCH	0	17	2	2	0		1	Allocated PRBs for new data = 0						
162	9	4	11	1	PUSCH	0	17	3	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
162	9	4	13	1	PUSCH	0	17	3	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
162	9	4	11	1	PUSCH	0	17	3	1	0		1	Allocated PRBs for new data = 0						
162	9	4	13	1	PUSCH	0	17	3	1	0		1	Allocated PRBs for new data = 0						
162	10	4	12	1	PUSCH	0	17	3	1	0		1	Process number = 1, NDI = True, Transmission number = 0						
162	10	4	14	1	PUSCH	0	17	3	1	0		1	Process number = 1, NDI = True, Transmission number = 0						

Figure 3-13: HARQ log showing HARQ working via information provided in the Remarks columns

3.9.16.7 HARQ turn off

There are ongoing discussions of abandoning HARQ for the 1 ms end-to-end latency use case of URLLC. This decision implies that the code rate has to be lowered such that a single shot transmission, i.e., no retransmissions and no feedback, achieves the required BLER.

NetSim allows users to turn HARQ OFF via the GUI. Note that the code block log will continue to be written. Users will notice that errored CBGs are not retransmitted if HARQ is turned OFF. Since the CB/CBG is in error, that entire TB to which it belongs will be in error.


Users can inspect the packet trace and will see large numbers of packet errors if HARQ is turned OFF and if the UE is seeing a high BLER.

3.9.17 Segmentation of transport block into code blocks

- If the transport block size is larger than 3824, a 16-bit CRC is added at the end of the transport block or a 24-bit CRC is added.
- The transport block is divided into multiple equal size code blocks when the transport block size exceeds a threshold.
- For quasi-cyclic low-density parity-check code (QC-LDPC) base graph 1, the threshold is equal to 8448.
- For QC-LDPC base graph 2, the threshold is equal to 3840. In 5G NR, the maximum code block size number is 8448.

- An additional 24-bit CRC is added at the end of each code block when there is a segmentation.
- A CBG can have up to 2/4/6/8 CBs.
- Maximum transport block size: 1,277,992.

LDPC BG 1, CBS Max, $(K_{cb}) = 8448$, LDPC BG 2, CBS Max, $(K_{cb}) = 3840$

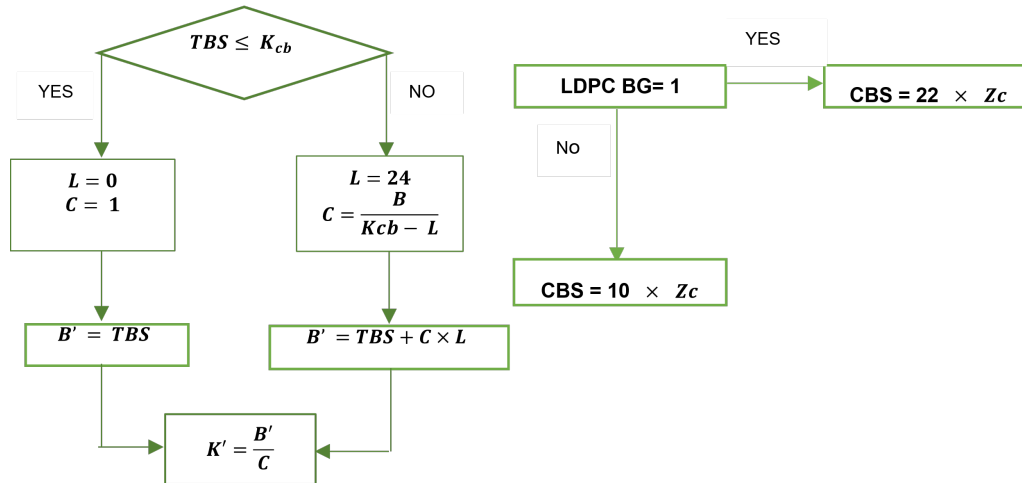

L = Extra CRC bits, C = Number of Code blocks, TBS = Size of Transport block, K' = Information bits in code block. The base matrix expansion factor Z_c is calculated by selecting minimum Z_c in all sets of lifting size tables, such that: $K_b \times Z_c \geq K$. K_b denotes the number of information bit columns for the lifting size Z_c .

3.9.18 BLER and CQI/MCS selection

NetSim GUI allows users to set the BLER, via the BLER drop down option. This option has two settings, and each setting in turn has different options for MCS selection. Both BLER and MCS selection are global options and will apply to all gNBs and UEs in both DL and UL in the network scenario.

- Zero BLER
 - MCS Selection: Ideal Shannon theorem-based rate
 - * The spectral efficiency (SE) is computed as

$$\text{SpectralEfficiency} = \log_2(1 + \text{SINR}) \tag{36}$$

- This Spectral efficiency (SE) is matched with the Channel Quality Indicator (CQI) table, selecting the highest SE that does not exceed this calculated value. This SE (determined from the CQI table) then guides the selection of modulation and coding from the MCS table. For example if the SINR is -1.4 dB, then $\log_2(1 + 10^{-1.4/10}) = 0.782$. The highest $\text{SE} \leq 0.782$ from the CQI table-2 is 0.3770. This value is then looked up in the MCS table-2; the modulation order is 2 and the code rate is 193.

- Data is transmitted at this MCS with zero BLER.
- The spectral efficiency to MCS table is explained in section **3.9.14.1** (Modulation order and target code rate determination).
- MCS Selection: Shannon rate with attenuation factor — MCS is chosen as in the case of Ideal Shannon Theorem-based rate, but with the spectral efficiency calculated as:

$$\text{SpectralEfficiency} = \alpha \times \log_2(1 + \text{SINR}) \quad (37)$$

Where α is the attenuation factor and generally $0.5 \leq \alpha \leq 1.00$. Default: 0.75.

Data is transmitted at this MCS with zero BLER.

A more general formula, available in literature, is $\text{Spectral Efficiency} = \alpha \times \log_2(1 + \beta \times \text{SINR})$ with $0 < \beta \leq 1$. This can be easily programmed in NetSim by modifying the code to include β and then rebuilding it.

SINR in the above expressions is in linear scale.

- BLER Enable: Within this, users can set outer loop link adaptation (OLLA) to True or False.
 - OLLA False: The MCS is chosen in exactly the same way as described in the Zero BLER case. Data is, however, transmitted at the chosen MCS, with BLER. The BLER is looked up from NetSim’s proprietary BLER-MCS-SINR curves.
 - OLLA True: In this case, the user needs to set a target BLER (t-BLER), for example 10%. Based upon the set t-BLER the MCS is dynamically adjusted based on an outer-loop link adaptation algorithm that uses HARQ ACK-NACK messages. Note that the t-BLER is based on initial transmission and not after a re-transmission. See 3.9.17 for working of OLLA.

3.9.19 BLER-MCS-SINR Curves

NetSim has exhaustive SINR-BLER data for various transport block sizes for all MCSs (1, 2, ..., 28) for Base graphs (1, 2) for all three tables (1, 2, 3). The SINR-BLER data was generated using an in-house proprietary link-level simulation program and the results have been carefully validated against published literature.

3.9.20 Outer Loop Link Adaptation (OLLA)

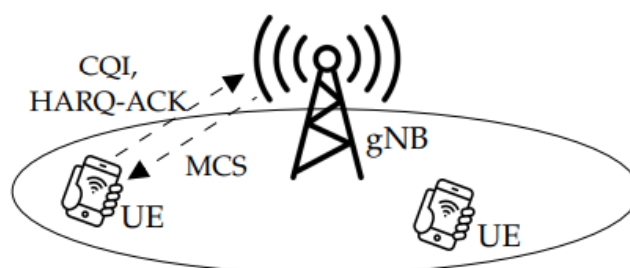


Figure 3-14: UE reports CQI based on SINR and the gNB transmits data at an MCS based on CQI

During the downlink AMC process, a user equipment (UE) reports the channel quality indicator (CQI) of the link to the gNB. This CQI is based on the received instantaneous SINR. OLLA is a feedback loop technique that adjusts the instantaneous SINR value by adding or subtracting an offset, using positive or negative acknowledgement signals (ACK or NACK). The offset is updated continuously based on the HARQ feedback, such that the average Block Error Rate ($BLER_A$) converges to a predefined target ($BLER_T$).

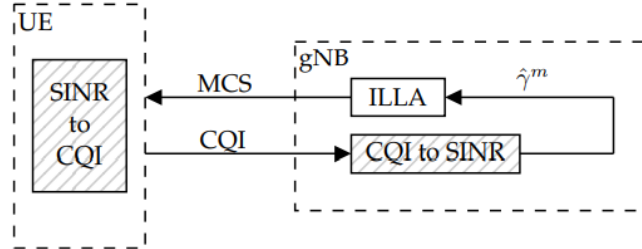


Figure 3-15: MCS selection per inner loop link adaptation (without OLLA)

Rate adaptation has two parts:

- an inner loop adaptation where the SINR measured by the user is used as an anchor to determine the transmission rate. This transmission rate is fed back, and
- OLLA is used at the base-station to make appropriate corrections to this transmission rate.

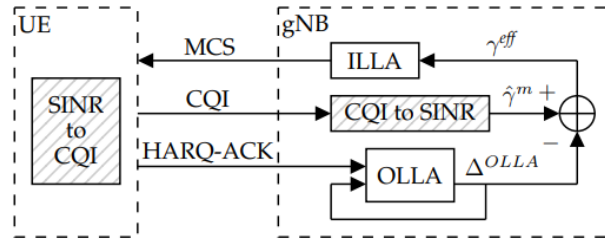


Figure 3-16: MCS selection with OLLA

The OLLA compensation is as follows:

$$\Delta_{OLLA}(k) = \Delta_{OLLA}(k - 1) + \Delta_{up} \times e(k) - \Delta_{down} \times (1 - e(k)) \quad (38)$$

Where $e(k) = 0$ for ACK and $e(k) = 1$ for NACK. This can be written as:

$$\Delta_{OLLA}(k) = \begin{cases} \Delta_{OLLA}(k - 1) - \Delta_{down} & \text{ACK, } e(k) = 0 \\ \Delta_{OLLA}(k - 1) + \Delta_{up} & \text{NACK, } e(k) = 1 \end{cases} \quad (39)$$

We see that when ACK is received, Δ_{OLLA} is decreased by Δ_{down} , and when NACK is received, Δ_{OLLA} is increased by Δ_{up} .

The estimated SINR compensated by the OLLA mechanism is given by the following relationship in the log scale (units of dB):

$$\gamma_{eff}(k, n) = \hat{\gamma}_m(k, a) - \Delta_{olla}(k, n) \quad (40)$$

A positive value of Δ_{OLLA} leads to a lower value of γ_{eff} , which translates into a pessimistic interpretation of the reported channel conditions and the selection of a conservative MCS. Conversely, a negative value of Δ_{OLLA} leads to a higher γ_{eff} , translating into an optimistic interpretation of the channel conditions and the selection of an aggressive MCS.

At the beginning of each radio resource control (RRC) connection, Δ_{OLLA} is initialized to a fixed value, Δ_{ini} , defined on a cell basis. As the connection progresses, Δ_{OLLA} is progressively modified by OLLA based on HARQ feedback.

The ratio $\frac{\Delta_{down}}{\Delta_{up}}$ controls the target BLER:

$$BLER_T = \frac{1}{\left(1 + \frac{\Delta_{up}}{\Delta_{down}}\right)} \approx \frac{\Delta_{down}}{\Delta_{up}}, \text{ if } \Delta_{up} \gg \Delta_{down}$$

Typical values for Δ_{up} and Δ_{down} are 1 dB and 0.1 dB, respectively, to ensure quick recovery from high BLER situations and smooth convergence to equilibrium. These values yield a target BLER of 0.1 (10%).

Note that the target BLER is only reached at the end of large activity connections, for which a large number of ACKs and NACKs are received by the gNB. For these connections, OLLA reaches steady state and Δ_{OLLA} fluctuates around the proper value due to random system errors. In contrast, for small activity connections, convergence is not guaranteed, unless Δ_{OLLA} is properly initialized.

When Δ_{ini} is too large, γ_{eff} is initially far below the actual channel conditions. This leads to an excessively conservative selection of the initial MCS and, therefore, user throughput is below the maximum achievable value. Considering a typical value of $\Delta_{down} = 0.1$ dB, OLLA needs at least 10 consecutive successful transmissions (i.e., 10 ms) to compensate for a 1 dB bias in SINR reporting.

On the other hand, when Δ_{ini} is too small, γ_{eff} is far above the actual channel conditions and a too aggressive MCS is initially selected. This causes high BLER figures and unnecessary re-transmissions, thus lowering the net user data flow. In both cases, user throughput is negatively affected.

The target BLER for OLLA is at a transport block level and is defined as the ratio of TBs errored to the TBs transmitted. In the NetSim PHY, TBs are split into code blocks (CBs), which are sent over the air. CBs are aggregated into code block groups (CBG); the HARQ plus soft combining operates at a CBG level.

3.9.21 Out of coverage

As explained in the assumptions, NetSim does not model physical control channels or reference signals. All measurements are made on the physical data channels. The downlink received SNR is determined from large scale pathloss and shadowing calculated per the stochastic propagation models in the 3GPP TR 38.900 standard, and fast fading calculated from the H matrix. This SNR calculation is done at the start of the simulation, and then at every instant a UE moves. It is a single wideband measurement at the center frequency. Interference from other gNBs is not considered in the SNR calculations.

Out of coverage in NetSim is based on the calculated spectral efficiency of the physical data channel. Spectral Efficiency is equal to $\alpha \times \log_2\left(1 + \frac{E_b}{N_0}\right)$. A UE is out-of-coverage when this spectral efficiency falls below a threshold. This threshold is the value of the spectral efficiency of index 1 per 3GPP 38.214 Table 5.2.2.1-2 for CQI Table 1, or 5.2.2.1-3 for CQI Table 2, or 5.2.2.1-4 for CQI Table 3.

The NetSim log would report CQI as 0 whenever this condition occurs. Note that the RRC connection is not released and NetSim does not currently model Radio Link Failures (RLF). If the UE's spectral efficiency with the same serving gNB again crosses the threshold, data transmissions can occur. Due to mobility, if the UE's spectral efficiency from a different gNB crosses the threshold, then a handover procedure is initiated.

3.9.22 Carrier Aggregation

In NetSim carrier aggregation (CA) is done in both DL and in the UL. When doing CA, the PHY layer is separate for each component carrier (CC). Thus, each CC will have a different pathloss, SINR and TBS. Then the resources of all component carriers (CCs) are pooled at the MAC, and scheduling is across the pooled resources. However, in practice each UE may be assigned resources from a particular CC. Since NetSim doesn't model frequency selective channel fading, there is generally negligible difference in network performance between allotting from a pool vs. allotting from one CC. The exception is when the data demand from any UE is greater than the capacity of a CC.

NetSim v13.3 GUI by default has options for Single Band and 2-band carrier aggregation. Loading all CA options – Single Band, 2 component carriers (CCs) and more than 2 CCs – requires the following change to be carried out.

- Go to <NetSim-Install-directory>/docs/xml (for example C:\ProgramFiles\NetSim\Pro_v13_3\Docs\xml). Here you will find two folders (i) Properties, and (ii) Properties 5G All Carriers. NetSim GUI by default reads from the Properties folder which has only Single Band and 2CC CA.
- Rename the Properties folder as say Properties 1CC.2CC and then rename Properties 5G All Carriers as Properties. Once this is done NetSim GUI will read the new properties folder which supports all CA options as explained in the section below.
- The reason for having a separate folder with Single Band and 2 CC is because loading all CA options takes a long time in the NetSim GUI.

3.9.23 CA Configuration Table (based on TR 38 716 01-01 Rel 16 NR)

The Intra band CA configuration is based on TR 38716 01-01 Rel 16 NR. The interband CA configuration is based on 38.716 02-00 for 2 bands DL / x bands UL, and TR 38.716 03 01 for 3 bands DL and 1 band UL. Carrier aggregation can be configured in the gNB's Physical layer properties. Following are the various configuration options that are available:

Table 3-29: CA Configuration Table

CC Configuration	CC Count	CC Type	Frequency Range	Uplink Low (MHz)	Uplink High (MHz)
TDD Bands					
Inter-Band CC					
CC.2DL.1UL.n39.n41	2	CC1, CC2	FR1	1880, 2496	1920, 2690
CC.2DL.2UL.n39.n41	2	CC1, CC2	FR1	1880, 2496	1920, 2690
CC.2DL.1UL.n41.n79	2	CC1, CC2	FR1	2496, 4400	2690, 5000
CC.2DL.2UL.n41.n79	2	CC1, CC2	FR1	2496, 4400	2690, 5000
CC.2DL.1UL.n40.n41	2	CC1, CC2	FR1	2300, 2496	2400, 2690
CC.2DL.2UL.n40.n41	2	CC1, CC2	FR1	2300, 2496	2400, 2690

Continued on next page

Table 3-29 continued

CC Configuration	CC Count	CC Type	Frequency Range	Uplink Low (MHz)	Uplink High (MHz)
CC_2DL_1UL_n50_n78	2	CC1, CC2	FR1	1432, 3300	1517, 3800
CC_2DL_2UL_n50_n78	2	CC1, CC2	FR1	1432, 3300	1517, 3800
CC_2DL_1UL_n41_n50	2	CC1, CC2	FR1	2496, 1432	2690, 1517
CC_2DL_2UL_n41_n50	2	CC1, CC2	FR1	2496, 1432	2690, 1517
CC_2DL_1UL_n39_n79	2	CC1, CC2	FR1	1880, 4400	1920, 5000
CC_2DL_2UL_n39_n79	2	CC1, CC2	FR1	1880, 4400	1920, 5000
CC_2DL_1UL_n40_n78	2	CC1, CC2	FR1	2300, 3300	2400, 3800
CC_2DL_2UL_n40_n78	2	CC1, CC2	FR1	2300, 3300	2400, 3800
CC_2DL_1UL_n40_n79	2	CC1, CC2	FR1	2300, 4400	2400, 5000
CC_2DL_2UL_n40_n79	2	CC1, CC2	FR1	2300, 4400	2400, 5000
CC_2DL_1UL_n77_n258	2	CC1, CC2	FR1, FR2	3300, 24250	4200, 27500
CC_2DL_2UL_n77_n258	2	CC1, CC2	FR1, FR2	3300, 24250	4200, 27500
CC_2DL_1UL_n78_n258	2	CC1, CC2	FR1, FR2	3300, 24250	3800, 27500
CC_2DL_2UL_n78_n258	2	CC1, CC2	FR1, FR2	3300, 24250	3800, 27500
CC_2DL_1UL_n79_n258	2	CC1, CC2	FR1, FR2	4400, 24250	5000, 27500
CC_2DL_2UL_n79_n258	2	CC1, CC2	FR1, FR2	4400, 24250	5000, 27500
CC_2DL_1UL_n78_n257	2	CC1, CC2	FR1, FR2	3300, 26500	3800, 29500
CC_2DL_2UL_n78_n257	2	CC1, CC2	FR1, FR2	3300, 26500	3800, 29500
CC_2DL_1UL_n41_n260	2	CC1, CC2	FR1, FR2	2496, 37000	2690, 40000
CC_2DL_2UL_n41_n260	2	CC1, CC2	FR1, FR2	2496, 37000	2690, 40000
Intra-Band Contiguous CC					
CC_2DL_n41C_1UL_n41A	2	CC1, CC2	FR1	2496, 2496	2690, 2690
CC_2DL_n257G_2UL_n257G	2	CC1, CC2	FR2	26500, 26500	29500, 29500
CC_3DL_n257H_3UL_n257G	3	CC1, CC2, CC3	FR2	26500, 26500, 26500	29500, 29500, 29500
CC_3DL_n257H_3UL_n257H	3	CC1, CC2, CC3	FR2	26500, 26500, 26500	29500, 29500, 29500
CC_4DL_n257I_4UL_n257G	4	CC1, CC2, CC3, CC4	FR2	26500, 26500, 26500, 26500	29500, 29500, 29500, 29500
CC_4DL_n257I_4UL_n257H	4	CC1, CC2, CC3, CC4	FR2	26500, 26500, 26500, 26500	29500, 29500, 29500, 29500
CC_4DL_n257I_4UL_n257I	4	CC1, CC2, CC3, CC4	FR2	26500, 26500, 26500, 26500	29500, 29500, 29500, 29500
CC_5DL_n257J_5UL_n257G	5	CC1, CC2, CC3, CC4, CC5	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_5DL_n257J_5UL_n257H	5	CC1, CC2, CC3, CC4, CC5	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_5DL_n257J_5UL_n257I	5	CC1, CC2, CC3, CC4, CC5	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_5DL_n257J_5UL_n257J	5	CC1, CC2, CC3, CC4, CC5	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_6DL_n257K_6UL_n257G	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_6DL_n257K_6UL_n257H	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_6DL_n257K_6UL_n257I	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_6DL_n257K_6UL_n257J	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_6DL_n257K_6UL_n257K	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_7DL_n257L_7UL_n257G	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	26500, 26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500, 29500
CC_7DL_n257L_7UL_n257H	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	26500, 26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500, 29500

Continued on next page

Table 3-29 continued

CC Configuration	CC Count	CC Type	Frequency Range	Uplink Low (MHz)	Uplink High (MHz)
CC_7DL_n257L_7UL_n257I	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_7DL_n257L_7UL_n257J	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_7DL_n257L_7UL_n257K	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_7DL_n257L_7UL_n257L	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257G	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257H	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257I	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257J	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257K	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257L	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_8DL_n257M_8UL_n257M	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	26500, 26500, 26500, 26500, 26500, 26500	29500, 29500, 29500, 29500, 29500, 29500
CC_n258B	2	CC1, CC2	FR2	24250, 24250	27500, 27500
CC_n258C	3	CC1, CC2, CC3	FR2	24250, 24250, 24250	27500, 27500, 27500
CC_n258D	2	CC1, CC2	FR2	24250, 24250	27500, 27500
CC_n258E	3	CC1, CC2, CC3	FR2	24250, 24250, 24250	27500, 27500, 27500
CC_n258F	4	CC1, CC2, CC3, CC4	FR2	24250, 24250, 24250, 24250	27500, 27500, 27500, 27500
CC_n258G	2	CC1, CC2	FR2	24250, 24250	27500, 27500
CC_n258H	3	CC1, CC2, CC3	FR2	24250, 24250, 24250	27500, 27500, 27500
CC_n258I	4	CC1, CC2, CC3, CC4	FR2	24250, 24250, 24250, 24250	27500, 27500, 27500, 27500
CC_n258J	5	CC1, CC2, CC3, CC4, CC5	FR2	24250, 24250, 24250, 24250, 24250	27500, 27500, 27500, 27500, 27500
CC_n258K	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	24250, 24250, 24250, 24250, 24250, 24250	27500, 27500, 27500, 27500, 27500, 27500
CC_n258L	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	24250, 24250, 24250, 24250, 24250, 24250, 24250	27500, 27500, 27500, 27500, 27500, 27500, 27500
CC_n258M	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	24250, 24250, 24250, 24250, 24250, 24250, 24250, 24250	27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500
Intra-Band Non-Contiguous CC					
CC_2DL_n41(2A)_1UL_n41A	2	CC1, CC2	FR1	2496, 2496	2690, 2690

Continued on next page

Table 3-29 continued

CC Configuration	CC Count	CC Type	Frequency Range	Uplink Low (MHz)	Uplink High (MHz)
CC_n260(5A)	5	CC1, CC2, CC3, CC4, CC5	FR2	37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000
CC_n260(6A)	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000
CC_n260(7A)	7	CC1, CC2, CC3, CC4, CC5, CC6, CC7	FR2	37000, 37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000, 40000
CC_n260(8A)	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000
CC_n260(2D)	4	CC1, CC2, CC3, CC4	FR2	37000, 37000, 37000, 37000	40000, 40000, 40000, 40000
CC_n260(2G)	4	CC1, CC2, CC3, CC4	FR2	37000, 37000, 37000, 37000	40000, 40000, 40000, 40000
CC_n260(3G)	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000
CC_n260(4G)	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000
CC_n260(2H)	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000
CC_n260(2O)	4	CC1, CC2, CC3, CC4	FR2	37000, 37000, 37000, 37000	40000, 40000, 40000, 40000
CC_n260(3O)	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000
CC_n260(4O)	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000
CC_n260(2P)	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000
CC_n260(4P)	12	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8, CC9, CC10, CC11, CC12	FR2	37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000
CC_n260(2Q)	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	37000, 37000, 37000, 37000, 37000, 37000, 37000, 37000	40000, 40000, 40000, 40000, 40000, 40000, 40000, 40000
CC_n261(2H)	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350
CC_n261(2I)	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350
CC_n261(2D)_n261A	4	CC1, CC2, CC3, CC4	FR2	27500, 27500, 27500, 27500	28350, 28350, 28350, 28350
CC_n261(2G)_n261A	4	CC1, CC2, CC3, CC4	FR2	27500, 27500, 27500, 27500	28350, 28350, 28350, 28350
CC_n261(3G)_n261A	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350

Continued on next page

Table 3-29 continued

CC Configuration	CC Count	CC Type	Frequency Range	Uplink Low (MHz)	Uplink High (MHz)
CC.n261(4G).n261A	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350
CC.n261(2O).n261A	4	CC1, CC2, CC3, CC4	FR2	27500, 27500, 27500, 27500	28350, 28350, 28350, 28350
CC.n261(4O).n261A	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350
CC.n261(7O).n261A	14	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8, CC9, CC10, CC11, CC12, CC13, CC14	FR2	27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350
CC.n261(2P).n261A	6	CC1, CC2, CC3, CC4, CC5, CC6	FR2	27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350
CC.n261(2Q).n261A	8	CC1, CC2, CC3, CC4, CC5, CC6, CC7, CC8	FR2	27500, 27500, 27500, 27500, 27500, 27500, 27500, 27500	28350, 28350, 28350, 28350, 28350, 28350, 28350, 28350
Single Band					
n34	1	CC1	FR1	2010	2025
n38	1	CC1	FR1	2570	2620
n39	1	CC1	FR1	1880	1920
n40	1	CC1	FR1	2300	2400
n41	1	CC1	FR1	2496	2690
n50	1	CC1	FR1	1432	1517
n51	1	CC1	FR1	1427	1432
n77	1	CC1	FR1	3300	4200
n78	1	CC1	FR1	3300	3800
n79	1	CC1	FR1	4400	5000
n257	1	CC1	FR2	26500	29500
n258	1	CC1	FR2	24250	27500
n259	1	CC1	FR2	39500	43500
n260	1	CC1	FR2	37000	40000
n261	1	CC1	FR2	27500	28350
n262	1	CC1	FR2	47200	48200
n263	1	CC1	FR2	57000	71000
FDD Bands					
Inter-Band CC					
CC.n1A.n8A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1920 — 880 — 2110 — 925	1980 — 915 — 2170 — 960
CC.n1A.n28A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1920 — 703 — 2110 — 758	1980 — 748 — 2170 — 803
CC.n3A.n8A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 880 — 1805 — 925	1785 — 915 — 1880 — 960
CC.n3A.n28A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 703 — 1805 — 758	1785 — 748 — 1880 — 803
CC.n7A.n28A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	2500 — 703 — 2620 — 758	2570 — 748 — 2690 — 803
CC.n7A.n66A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	2500 — 1710 — 2620 — 2110	2570 — 1780 — 2690 — 2200
CC.n20A.n28A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	832 — 703 — 791 — 758	862 — 748 — 821 — 803
CC.n25A.n71A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1850 — 663 — 1930 — 617	1915 — 698 — 1995 — 652

Continued on next page

Table 3-29 continued

CC Configuration	CC Count	CC Type	Frequency Range	Uplink Low (MHz)	Uplink High (MHz)
CC_n66A_n70A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 1695 — 2110 — 1995	1780 — 1710 — 2200 — 2020
CC_n66B_n70A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 1695 — 2110 — 1995	1780 — 1710 — 2200 — 2020
CC_n66(2A)_n70A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 1695 — 2110 — 1995	1780 — 1710 — 2200 — 2020
CC_n66A_n71A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 663 — 2110 — 617	1780 — 698 — 2200 — 652
CC_n66B_n71A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 663 — 2110 — 617	1780 — 698 — 2200 — 652
CC_n66(2A)_n71A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 663 — 2110 — 617	1780 — 698 — 2200 — 652
CC_n70A_n71A	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1695 — 663 — 1995 — 617	1710 — 698 — 2020 — 652
CC_n66A_n70A_n71A	3	CC1_UL — CC2_UL — CC3_UL — CC1_DL — CC2_DL — CC3_DL	FR1	1710 — 1695 — 663 — 2110 — 1995 — 617	1780 — 1710 — 698 — 2200 — 2020 — 652
CC_n66B_n70A_n71A	3	CC1_UL — CC2_UL — CC3_UL — CC1_DL — CC2_DL — CC3_DL	FR1	1710 — 1695 — 663 — 2110 — 1995 — 617	1780 — 1710 — 698 — 2200 — 2020 — 652
CC_n66(2A)_n70A_n71A	3	CC1_UL — CC2_UL — CC3_UL — CC1_DL — CC2_DL — CC3_DL	FR1	1710 — 1695 — 663 — 2110 — 1995 — 617	1780 — 1710 — 698 — 2200 — 2020 — 652
Intra-Band Contiguous CC					
CC_n1B	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1920 — 1920 — 2110 — 2110	1980 — 1980 — 2170 — 2170
CC_n7B	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	2500 — 2500 — 2620 — 2620	2570 — 2570 — 2690 — 2690
CC_n66B	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 1710 — 2110 — 2110	1780 — 1780 — 2200 — 2200
CC_n71B	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	663 — 663 — 617 — 671	698 — 698 — 652 — 652
Intra-Band Non-Contiguous CC					
CC_n3(2A)	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 1710 — 1805 — 1805	1782 — 1785 — 1880 — 1880
CC_n7(2A)	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	2500 — 2500 — 2620 — 2620	2570 — 2570 — 2690 — 2690
CC_n25(2A)	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1850 — 1850 — 1930 — 1930	1915 — 1915 — 1995 — 1995
CC_n66(2A)	2	CC1_UL — CC2_UL — CC1_DL — CC2_DL	FR1	1710 — 1710 — 2110 — 2110	1780 — 1780 — 2200 — 2200
Single Band					
n1	1	CC1	FR1	1920	1980
n2	1	CC1	FR1	1850	1910
n3	1	CC1	FR1	1710	1785
n5	1	CC1	FR1	824	859
n7	1	CC1	FR1	2500	2570
n8	1	CC1	FR1	880	915
n12	1	CC1	FR1	699	716
n20	1	CC1	FR1	832	862
n25	1	CC1	FR1	1850	1915
n28	1	CC1	FR1	703	748
n66	1	CC1	FR1	1710	1780
n70	1	CC1	FR1	1695	1710
n71	1	CC1	FR1	663	698
n74	1	CC1	FR1	1427	1470

3.9.24 PHY: Omitted Features

The currently omitted features include:

- Physical control channels: While calculating the TBS capacity, a fixed overhead is reduced to account for the control channels. This overhead fraction varies for UL and DL, across FR1 and FR2, and is provided in the standard.
- Random access procedure
- Power control

3.10 Supported Max Data Rate

For NR, the approximate data rate for a given number of aggregated carriers in a band or band combination is computed as follows.

$$\text{data rate (in Mbps)} = 10^{-6} \sum_{j=1}^J \left(v_{\text{Layers}}^{(j)} \right) \cdot Q_m^{(j)} \cdot f^{(j)} \cdot R \frac{N_{\text{PRB}}^{\text{BW}^{(j)},\mu} \cdot 12}{T_s^\mu} \left(1 - OH^{(j)} \right) \quad (41)$$

Where,

- J is the number of aggregated component carriers in a band or band combination $R_{\text{max}} = 948/1024$.
- For the j -th Component Carrier, $v_{\text{Layers}}^{(j)}$ is the maximum number of supported layers given by higher layer parameter `maxNumberMIMO-LayersPDSCH` for downlink and maximum of higher layer parameters `maxNumberMIMO-LayersCB-PUSCH` and `maxNumberMIMO-LayersNonCB-PUSCH` for uplink.
- $Q_m^{(j)}$ is the maximum supported modulation order given by higher layer parameter `supportedModulationOrderDL` for downlink and higher layer parameter `supportedModulationOrderUL` for uplink.
- f^j is the scaling factor given by higher layer parameter `scalingFactor` and can take the values 1, 0.8, 0.75, and 0.4.
- μ is the numerology (as defined in TS 38.211 [6]).
- T_s^μ is the average OFDM symbol duration in a subframe for numerology μ , i.e., $T_s^\mu = \frac{10^{-3}}{14 \cdot 2^\mu}$.
- Note that normal cyclic prefix is assumed, which has 14 OFDM symbols per slot or $14 \times 2^\mu$ symbols per millisecond.
- $N_{\text{PRB}}^{\text{BW}^{(j)},\mu}$ is the maximum Resource Block allocation in bandwidth $\text{BW}^{(j)}$ with numerology μ as defined in 5.3 TS 38.101-1 [2] and 5.3 TS 38.101-2 [3], where $\text{BW}^{(j)}$ is the UE supported maximum bandwidth in the given band or band combination. The number of subcarriers per physical resource block (PRB) is fixed to 12.
- $OH^{(j)}$ is the overhead and takes the following values.

0.14, for frequency range FR1 for DL

0.18, for frequency range FR2 for DL

0.08, for frequency range FR1 for UL

0.10, for frequency range FR2 for UL

The approximate maximum data rate can be computed as the maximum of the approximate data rates computed using the above formula for each of the supported band or band combinations.

For EUTRA in case of MR-DC, the approximate data rate for a given number of aggregated carriers in a band or band combination is computed as follows.

$$\text{data rate (in Mbps)} = 10^{-3} \sum_{j=1}^J \text{TBS}_j \quad (42)$$

Where,

- J is the number of aggregated EUTRA component carriers in MR-DC band combination.
- TBS_j is the total maximum number of DL-SCH transport block bits received within a 1ms TTI for j -th CC, as derived from TS36.213 [22] based on the UE supported maximum MIMO layers for the j -th carrier and based on the modulation order and number of PRBs based on the bandwidth of the j -th carrier.
- The approximate maximum data rate can be computed as the maximum of the approximate data rates computed using the above formula for each of the supported band or band combinations.
- For MR-DC, the approximate maximum data rate is computed as the sum of the approximate maximum data rates from NR and EUTRA.

3.11 Propagation Models (Per 3GPP TR 38.900)

3.11.1 Overview

The pathloss and channel between a UE and a BS depends on:

- **Location:** The pathloss depends on the UE's location (UE-gNB distance) and is calculated separately for each connected UE. The pathloss computations are recomputed every time a UE moves.
- **Scenario:** Rural Macro (RMa), Urban Macro (UMa), Urban Micro (UMi). This parameter is available as Outdoor Scenario in gNB properties > Interface (5G RAN) > Physical Layer > Channel Model. Each scenario has a different pathloss model defined in the standard. This property is common for the gNB and all connected UEs.
- **Whether the UE-gNB is Line-of-sight or Non-line-of-sight (LOS/NLOS):** This parameter is available as LOS probability in gNB properties > Interface (5G RAN) > Physical Layer > Channel Model. The pathloss models defined in the standard differ for LOS and NLOS. This property is common for the gNB and all connected UEs. However, a different (uniform) random number is sampled for each associated UE so that different UEs will see different LOS/NLOS channels. For each UE, the LOS/NLOS random variable

is sampled every time a UE moves, and hence a UE may switch from LOS to NLOS if it moves.

- **Shadow fading:** This parameter is available as a Shadow fading model in gNB properties > Interface (5G RAN) > Physical Layer > Channel Model. This property is common for the gNB and all connected UEs. In this case, a different log-normal random variable is sampled for each associated UE. For each UE, the shadow fading random variable is sampled every time a UE moves.
- **Fading and beamforming:** Fast fading is enabled by turning on the parameter Fading and Beamforming in gNB properties > Interface (5G RAN) > Physical Layer > Channel Model. Please see sections 3.9.3 and 3.9.4 for a detailed explanation. In essence, the eigenvalue of an $(N_r \times N_t)$ random matrix is the fast-fading gain. Since the random matrix would be different for each gNB-UE pair the gains would be different. The fast-fading gains are recomputed every (user settable) coherence time whose default value is 10 ms. The coherence time is common to all UEs attached to a gNB.

NetSim also features Indoor and Outdoor pathloss (PL) models.

- NetSim GUI (gNB properties > Interface (5G RAN) > Physical Layer > Channel Model) allows users to configure both indoor and outdoor PL models. Both indoor and outdoor options are shown in the GUI irrespective of the underlying scenario.
- Based on gNBs/UEs placement within or outside a building NetSim automatically chooses the indoor/outdoor propagation models. The selection is as follows:
 - Outdoor gNB to Outdoor UE: Outdoor PL model
 - Outdoor gNB to Indoor UE: Outdoor PL till building, then penetration (O2I) loss, and finally indoor PL within the building
 - Indoor gNB to Indoor UE: Indoor PL model
 - An Indoor gNB cannot be connected to an Outdoor UE in NetSim

3.11.2 Pathloss Formulas

The pathloss models are summarized in the table below and the distance definitions are indicated in the accompanying figures. Note that the distribution of the shadow fading is log-normal, and its standard deviation for each scenario is given in the table.

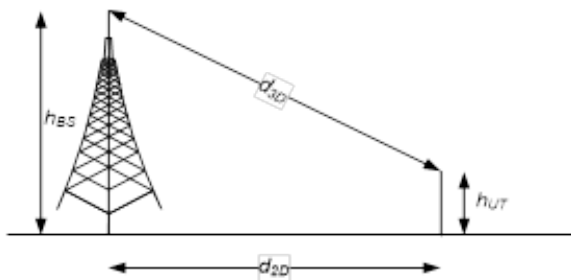


Figure 3-17: Definition of d_{2D} and d_{3D} from Standards Figure 7.4.1-1

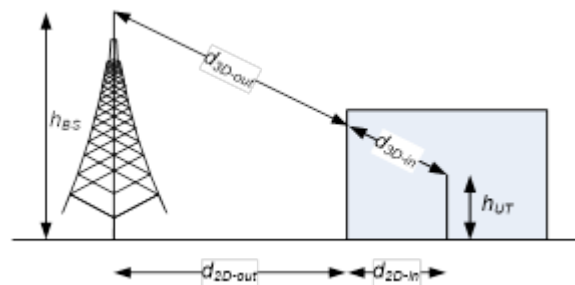


Figure 3-18: Definition of d_{2D-out} , d_{2D-in} , and d_{3D-out} and d_{2C-out} and d_{3D-out} , d_{3D-out} for indoor UTs from Standards Figure 7.4.1-2

Note that,

$$d_{3D\text{-out}} + d_{3D\text{-in}} = \sqrt{(d_{2D\text{-out}} + d_{2D\text{-in}})^2 + (h_{BS} - h_{UT})^2} \quad (7.4.1-2) \quad (43)$$

Table 3-30: Pathloss model from Standards Table 7.4.1-1.

Scenario	LOS/ NLOS	Pathloss [dB]	Shadow fading std [dB]	Applicability range, antenna height default values
RMa	LOS	$PL_{\text{RMa-LOS}} = \begin{cases} PL_1, & 10 \text{ m} \leq d_{2D} \leq d_{BP} \\ PL_2, & d_{BP} \leq d_{2D} \leq 10 \text{ km} \end{cases}$ $PL_1 = 20 \log_{10} \left(\frac{40\pi d_{3D} f_c}{3} \right) + \min(0.03h^{1.72}, 10) \log_{10}(d_{3D})$ $- \min(0.044h^{1.72}, 14.77) + 0.002 \log_{10}(h) d_{3D}$ $PL_2 = PL_1(d_{BP}) + 40 \log_{10} \left(\frac{d_{3D}}{d_{BP}} \right)$ <p>see note 5</p>	$\sigma_{SF} = 4$ $\sigma_{SF} = 6$	$h_{BS} = 35 \text{ m}$ $h_{UT} = 1.5 \text{ m}$ $W = 20 \text{ m}$ $h = 5 \text{ m}$ $h = \text{avg. building height}$ $W = \text{avg. street width}$ $5 \text{ m} \leq h \leq 50 \text{ m}$ $5 \text{ m} \leq W \leq 50 \text{ m}$ $10 \text{ m} \leq h_{BS} \leq 150 \text{ m}$ $1 \text{ m} \leq h_{UT} \leq 10 \text{ m}$
RMa	NLOS	$PL'_{\text{RMa-NLOS}} = 161.04 - 7.1 \log_{10}(W) + 7.5 \log_{10}(h)$ $- (24.37 - 3.7(h/h_{BS})^2) \log_{10}(h_{BS})$ $+ (43.42 - 3.1 \log_{10}(h_{BS})) (\log_{10}(d_{3D}) - 3)$ $+ 20 \log_{10}(f_c) - (3.2(\log_{10}(11.75h_{UT}))^2 - 4.97)$ $PL_{\text{RMa-NLOS}} = \max(PL_{\text{RMa-LOS}}, PL'_{\text{RMa-NLOS}})$ $10 \text{ m} \leq d_{2D} \leq 5 \text{ km}$	8	$h = \text{avg. building height}$ $W = \text{avg. street width}$ The applicability ranges apply.
UMa	LOS	$PL_{\text{UMa-LOS}} = \begin{cases} PL_1, & 10 \text{ m} \leq d_{2D} \leq d'_{BP} \\ PL_2, & d'_{BP} \leq d_{2D} \leq 5 \text{ km} \end{cases}$ $PL_1 = 28.0 + 22 \log_{10}(d_{3D}) + 20 \log_{10}(f_c)$ $PL_2 = 28.0 + 40 \log_{10}(d_{3D}) + 20 \log_{10}(f_c)$ $- 9 \log_{10}((d'_{BP})^2 + (h_{BS} - h_{UT})^2)$ <p>see note 1</p>	4	$h_{BS} = 25 \text{ m}$ $h_{UT} = 1.5 \text{ m}$ $1.5 \text{ m} \leq h_{UT} \leq 22.5 \text{ m}$
UMa	NLOS	$PL'_{\text{UMa-NLOS}} = 13.54 + 39.08 \log_{10}(d_{3D})$ $+ 20 \log_{10}(f_c) - 0.6(h_{UT} - 1.5)$ $PL_{\text{UMa-NLOS}} = \max(PL_{\text{UMa-LOS}}, PL'_{\text{UMa-NLOS}})$ $10 \text{ m} \leq d_{2D} \leq 5 \text{ km}$	6	Explanations: see note 3
UMa	NLOS	Optional		
UMi – Street Canyon	LOS	$PL_{\text{UMi-LOS}} = \begin{cases} PL_1, & 10 \text{ m} \leq d_{2D} \leq d'_{BP} \\ PL_2, & d'_{BP} \leq d_{2D} \leq 5 \text{ km} \end{cases}$ $PL_1 = 32.4 + 21 \log_{10}(d_{3D}) + 20 \log_{10}(f_c)$ $PL_2 = 32.4 + 40 \log_{10}(d_{3D}) + 20 \log_{10}(f_c)$ $- 9.5 \log_{10}((d'_{BP})^2 + (h_{BS} - h_{UT})^2)$ <p>see note 1</p>	4	$h_{BS} = 10 \text{ m}$ $h_{UT} = 1.5 \text{ m}$ $1.5 \text{ m} \leq h_{UT} \leq 22.5 \text{ m}$
UMi – Street Canyon	NLOS	$PL'_{\text{UMi-NLOS}} = 22.4 + 35.3 \log_{10}(d_{3D})$ $+ 21.3 \log_{10}(f_c) - 0.3(h_{UT} - 1.5)$ $PL_{\text{UMi-NLOS}} = \max(PL_{\text{UMi-LOS}}, PL'_{\text{UMi-NLOS}})$ $10 \text{ m} \leq d_{2D} \leq 5 \text{ km}$	7.82	Explanations: see note 4
UMi – Street Canyon	NLOS	Optional		
InH – Office	LOS	$PL_{\text{InH-LOS}} = 32.4 + 17.3 \log_{10}(d_{3D}) + 20 \log_{10}(f_c)$ $1 \text{ m} \leq d_{3D} \leq 150 \text{ m}$	3	$h_{BS} = 3 \text{ m}$ $1 \text{ m} \leq h_{UT} \leq 2.5 \text{ m}$
InH – Office	NLOS	$PL_{\text{InH-NLOS}} = 17.30 + 38.3 \log_{10}(d_{3D}) + 24.9 \log_{10}(f_c) 8.03$ $1 \text{ m} \leq d_{3D} \leq 150 \text{ m}$		
InH – Office	NLOS	$PL_{\text{InH-NLOS}} = 32.4 + 31.9 \log_{10}(d_{3D}) + 20 \log_{10}(f_c)$ $1 \text{ m} \leq d_{3D} \leq 150 \text{ m}$	8.29	Optional

Note 1: Breakpoint distance $d'_{BP} = \frac{4 \times h'_{BS} \times h'_{UT} \times f_c}{c}$, where f_c is the centre frequency in Hz, $c = 3 \times 10^8$ m/s is the propagation velocity in free space, and h'_{BS} and h'_{UT} are the effective antenna heights at the BS and the UT, respectively. The effective antenna heights h'_{BS} and h'_{UT} are computed as follows: $h'_{BS} = h_{BS} - h_E$, $h'_{UT} = h_{UT} - h_E$, where h_{BS} and h_{UT} are the actual

antenna heights, and h_E is the effective environment height. For UMi $h_E = 1.0$ m. For UMa $h_E = 1$ m with a probability equal to $\frac{1}{1 + C(d_{2D}, h_{UT})}$ and chosen from a discrete uniform distribution uniform $(12, 15, \dots, (h_{UT} - 1.5))$ otherwise. With $C(d_{2D}, h_{UT})$ given by

$$C(d_{2D}, h_{UT}) = \begin{cases} 0 & , h_{UT} < 13 \text{ m} \\ \left(\frac{h_{UT} - 13}{10}\right)^{1.5} g(d_{2D}) & , 13 \text{ m} \leq h_{UT} \leq 23 \text{ m} \end{cases} \quad (44)$$

Where,

$$g(d_{2D}) = \begin{cases} 0 & , d_{2D} \leq 18 \text{ m} \\ \frac{5}{4} \left(\frac{d_{2D}}{100}\right)^3 \exp\left(\frac{-d_{2D}}{150}\right) & , 18 \text{ m} < d_{2D} \end{cases} \quad (45)$$

Note that h_E depends on d_{2D} and h_{UT} and thus needs to be independently determined for every link between BS sites and UTs. A BS site may be a single BS or multiple co-located BSs.

Note 2: The applicable frequency range of the PL formula in this table is $0.5 < f_c < f_H$ GHz, where $f_H = 30$ GHz for RMa and $f_H = 100$ GHz for all the other scenarios. It is noted that RMa pathloss model for > 7 GHz is validated based on a single measurement campaign conducted at 24 GHz.

Note 3: UMa NLOS pathloss is from TR 36.873 with simplified format and

$PL_{UMa-LOS}$ = Pathloss of UMa LOS outdoor scenario.

Note 4: $PL_{UMi-LOS}$ = Pathloss of UMi-Street Canyon LOS outdoor scenario.

Note 5: Break point distance $d_{BP} = \frac{2\pi \times h_{BS} \times h_{UT} \times f_c}{c}$, where f_c is the centre frequency in Hz, $c = 3 \times 10^8$ m/s is the propagation velocity in free space, and h_{BS} and h_{UT} are the antenna heights at the BS and the UT, respectively.

Note 6: f_c denotes the center frequency normalized by 1 GHz, all distance related values are normalized by 1 m, unless it is stated otherwise.

NetSim enforces the following:

RMa, UMa, UMi: If $d_{2D} < 10$ m then $d_{2D} = 10$ m

InH: If $d_{2D} < 1$ m then $d_{2D} = 1$ m

3.11.3 LOS Probability

The Line-Of-Sight (LOS) probabilities are given in the table below.

Table 3-31: LOS probability from Standards Table 7.4.2-1.

Scenario	LOS probability (distance is in meters)
RMa	$P_{LOS} = 1, \quad d_{2D} \leq 10$ $P_{LOS} = \exp\left(-\frac{d_{2D} - 10}{1000}\right), \quad d_{2D} > 10$

Scenario	LOS probability (distance is in meters)
UMi – Street canyon	$P_{LOS} = 1, \quad d_{2D} \leq 18$ $P_{LOS} = \frac{18}{d_{2D}} + \exp\left(-\frac{d_{2D}}{36}\right) \left(1 - \frac{18}{d_{2D}}\right), \quad d_{2D} > 18$
UMa	$P_{LOS} = 1, \quad d_{2D} \leq 18$ $P_{LOS} = \left(\frac{18}{d_{2D}} + \exp\left(-\frac{d_{2D}}{63}\right) \left(1 - \frac{18}{d_{2D}}\right)\right) \times \left(1 + C'(h_{UT}) \frac{5}{4} \left(\frac{d_{2D}}{100}\right)^3 \exp\left(-\frac{d_{2D}}{150}\right)\right), \quad d_{2D} > 18$
Indoor – Mixed office	$P_{LOS} = 1, \quad d_{2D} \leq 1.2$ $P_{LOS} = \exp\left(-\frac{d_{2D} - 1.2}{4.7}\right), \quad 1.2 < d_{2D} < 6.5$ $P_{LOS} = 0.32 \exp\left(-\frac{d_{2D} - 6.5}{32.6}\right), \quad d_{2D} \geq 6.5$
Indoor – Open office	$P_{LOS} = 1, \quad d_{2D} \leq 5$ $P_{LOS} = \exp\left(-\frac{d_{2D} - 5}{70.8}\right), \quad 5 < d_{2D} \leq 49$ $P_{LOS} = 0.54 \exp\left(-\frac{d_{2D} - 49}{211.7}\right), \quad d_{2D} > 49$

NOTE: The LOS probability is derived with assuming antenna heights of 3 m for indoor, 10 m for UMi, and 25 m for UMa. For UMa, $C'(h_{UT}) = 0$ when $h_{UT} \leq 13$ m and $C'(h_{UT}) = \left(\frac{h_{UT} - 13}{10}\right)^{1.5}$ when 13 m $< h_{UT} \leq 23$ m.

3.11.4 O2I Penetration Loss

3.11.4.1 O2I Building Penetration Loss

The pathloss incorporating O2I building penetration loss is modelled as in the following:

$$PL = PL_b + PL_{tw} + PL_{in} + N(0, \sigma_P^2) \quad (7.4-2) \quad (46)$$

where PL_b is the basic outdoor pathloss given in Sub Clause 7.4.1, where d_{3D} is replaced by $d_{3D-out} + d_{3D-in}$. PL_{tw} is the building penetration loss through the external wall, PL_{in} is the inside loss dependent on the depth into the building, and σ_P is the standard deviation for the penetration loss.

PL_{tw} is characterized as:

$$PL_{tw} = PL_{npi} - 10 \log_{10} \left(\sum_{i=1}^N \left(p_i \times 10^{\frac{L_{material,i}}{-10}} \right) \right) \quad (7.4-3) \quad (47)$$

PL_{npi} is an additional loss added to the external wall loss to account for non-perpendicular incidence; $L_{material,i} = a_{material,i} + b_{material,i}$, f is the penetration loss of material i example values of which can be found in the table below, p_i is proportion of i -th materials, where $\sum_{i=1}^N p_i = 1$; and N is the number of materials.

Table 3-32: Material penetration losses from Standards Table 7.4.3-1.

Material	Penetration loss [dB]
Standard multi-pane glass	$L_{\text{glass}} = 2 + 0.2f$
IRR glass	$L_{\text{IRRglass}} = 23 + 0.3f$
Concrete	$L_{\text{concrete}} = 5 + 4f$
Wood	$L_{\text{wood}} = 4.85 + 0.12f$

NOTE: f is in GHz

The following table gives PL_{tw} , PL_{in} , and σ_P for two O2I penetration loss models. The O2I penetration is UT-specifically generated and is added to the SF realization in the log domain.

Table 3-33: O2I building penetration loss model from Standards Table 7.4.3-2.

Model	Pathloss through external wall: PL_{tw} [dB]	Indoor loss: PL_{in} [dB]	Standard deviation: σ_P [dB]
Low-loss model	$5 - 10 \log_{10} (0.3 \times 10^{-L_{\text{glass}}/10} + 0.7 \times 10^{-L_{\text{concrete}}/10})$	$0.5 d_{2D\text{-in}}$	4.4
High-loss model	$5 - 10 \log_{10} (0.7 \times 10^{-L_{\text{IRRglass}}/10} + 0.3 \times 10^{-L_{\text{concrete}}/10})$	$0.5 d_{2D\text{-in}}$	6.5

$d_{2D\text{-in}}$ is minimum of two independently generated uniformly distributed variables between 0 and 25 m for UMa and UMi-Street Canyon, and between 0 and 10 m for RMa. $d_{2D\text{-in}}$ shall be UT-specifically generated.

Both low-loss and high-loss models are applicable to UMa and UMi-Street Canyon.

Only the low-loss model is applicable to RMa.

3.11.4.2 O2I Model Usage

The O2I Models such as Low Loss and High Loss are associated with the type of material used in the buildings and are used to calculate the penetration loss in case of an indoor scenario. In case of scenarios where UEs are not inside a building these parameters will not have any impact on the results. In an indoor scenario, users will be able to notice differences in the SNR.

3.12 Additional Loss Model

Apart from the channel losses per the 3GPP TR 38.900 specifications, NetSim allows modelling additional losses using MATLAB. This includes attenuation due to rain, fog, and gas.

Note that this implementation interfaces with MATLAB R2020(a/b). Lower versions of MATLAB are not directly supported.

The following is required to run these models:

- An installed version of MATLAB R2020(a/b) in the same system where NetSim is installed or in a different system in the same network.

- Registration of MATLAB as a COM server. Reference:
https://in.mathworks.com/help/matlab/matlab_external/register-matlab-as-automation-server.html

3.12.1 Configuration

Additional Loss Model can be configured in the gNB's 5G RAN interface properties under channel models section of Physical Layer as shown below.

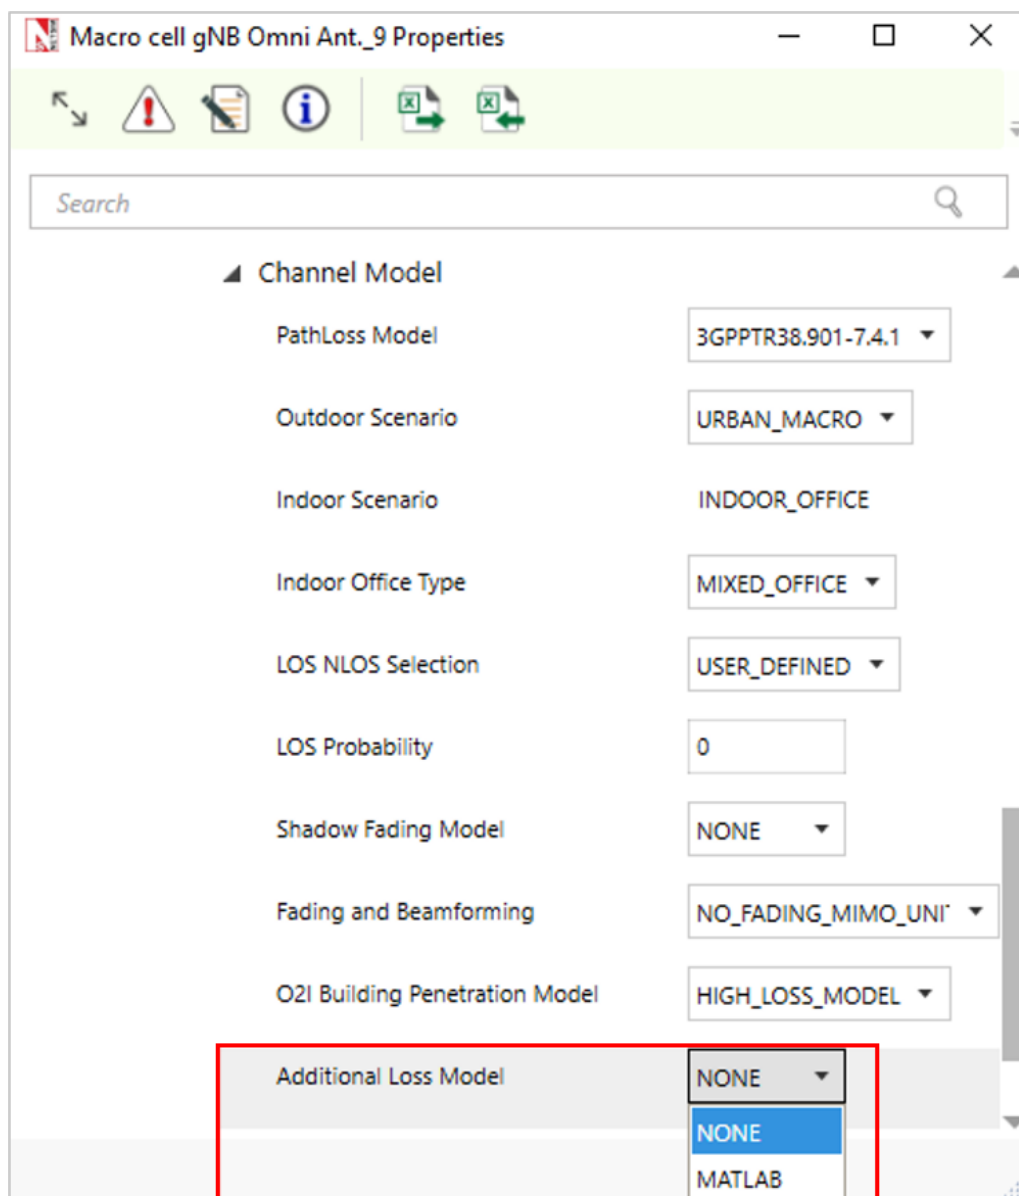


Figure 3-17: *gNB > Interface (5G_RAN) > Physical layer properties.*

Similarly, this can be configured in the eNB's LTE interface properties under channel models section of Physical Layer as shown below.

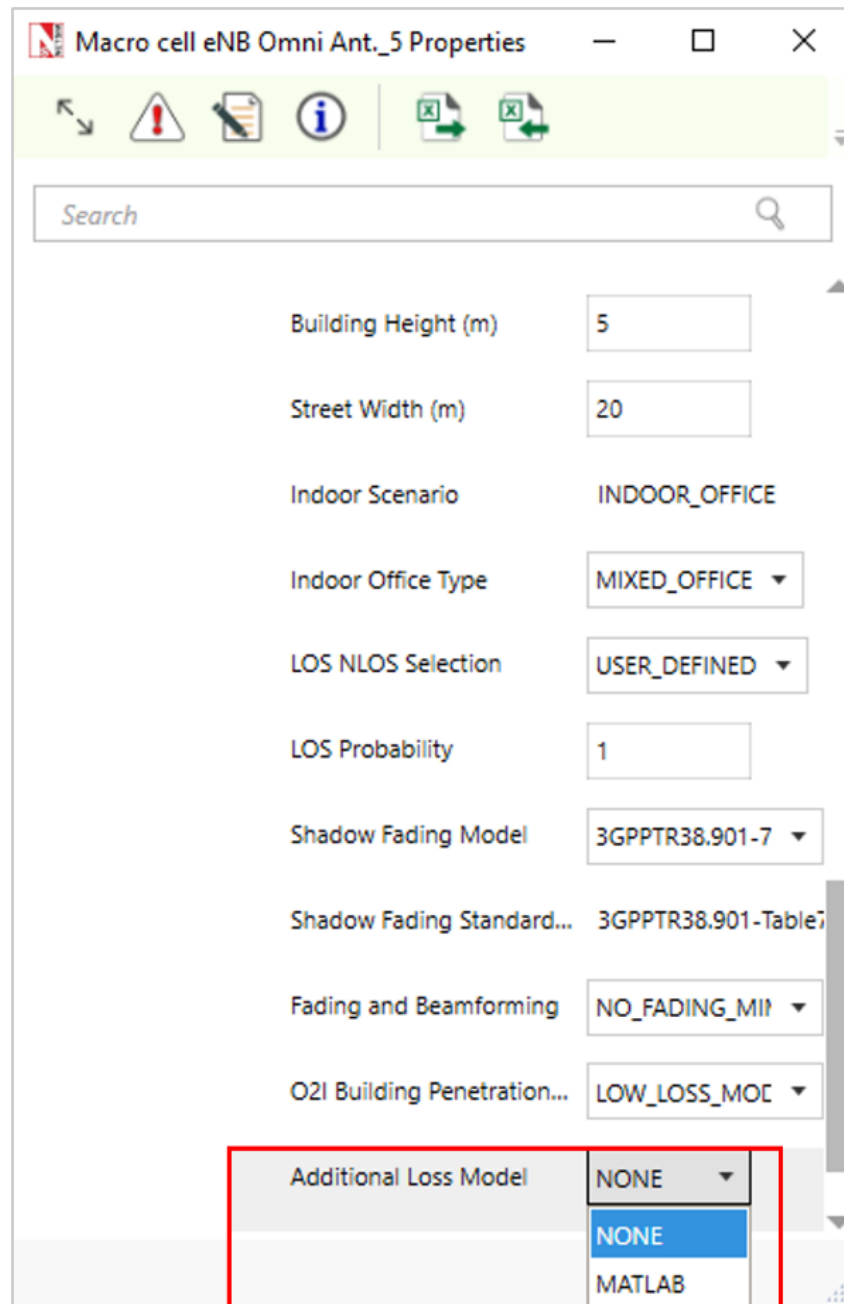


Figure 3-18: eNB > Interface (LTE) > Physical layer properties.

Additional Loss Model is set to NONE by default. When MATLAB is selected, MATLAB MODEL drop down with options GAS, FOG, and RAIN will appear along with associated parameters as shown below.

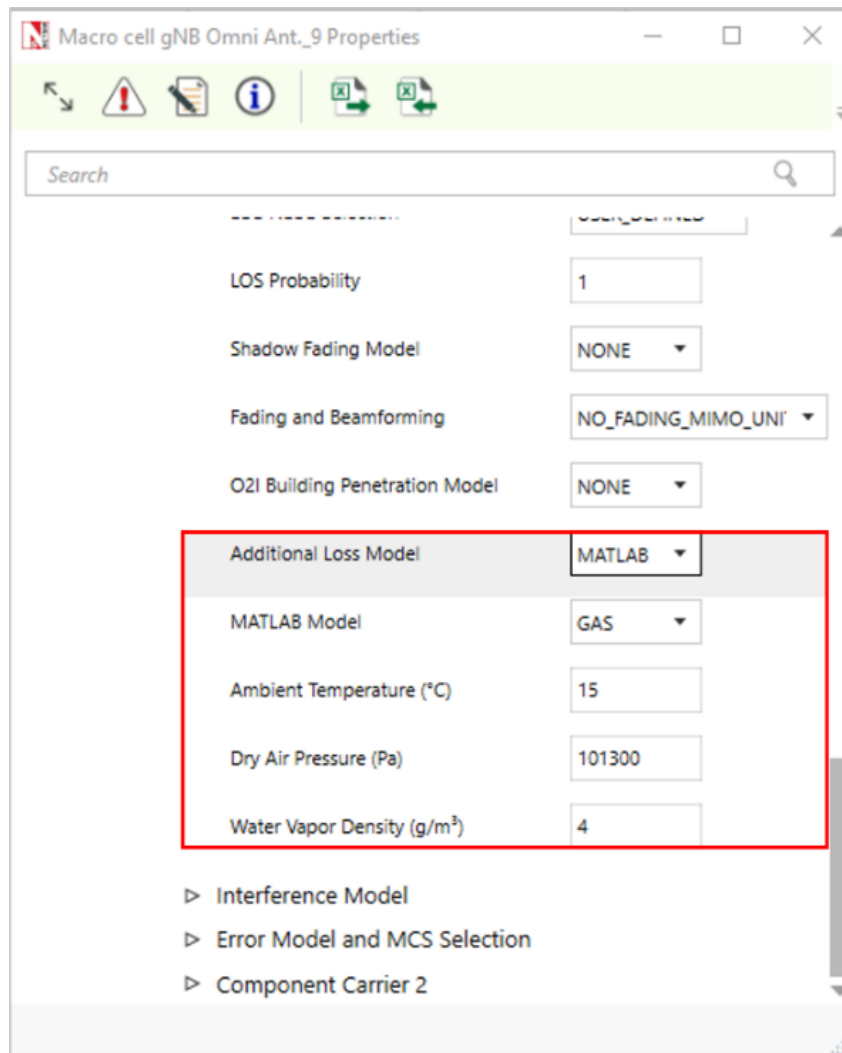


Figure 3-19: Additional Loss Model set to MATLAB in gNB > Interface (5G RAN) > Physical layer properties.

Each model has associated parameters that can be configured, which is listed in the table below.


Table 3-34: Parameters in the various MATLAB additional loss models.

Additional Loss Model	Associated Parameters	Value
RAIN	Rain Rate (mm/hr)	16 (default), Range 0 to 100
RAIN	Tilt Angle	0 (default), Range –90 to 90
RAIN	Elevation Angle	0 (default), Range –90 to 90
RAIN	Exceedance Rain (%)	0.01 (default), Range 0.001 to 1
GAS	Ambient Temperature (Celsius)	15 (default), Range –50 to 50
GAS	Dry Air Pressure (Pa)	101300 (default), Range 50000 to 300000
GAS	Water Vapor Density (g/m ³)	4 (default), Range 1 to 10
FOG	Ambient Temperature (Celsius)	15 (default), Range –50 to 50
FOG	Liquid Water Density (g/m ³)	0.5 (default), Range 0 to 5

NOTE: Rain and Gas models support frequencies from 1 to 1000 GHz and Fog model supports frequencies from 10 to 1000 GHz only.

3.12.2 Running Simulation

When Additional Loss Model option is set to MATLAB NetSim Simulation console waits for MATLAB Interface process to connect.

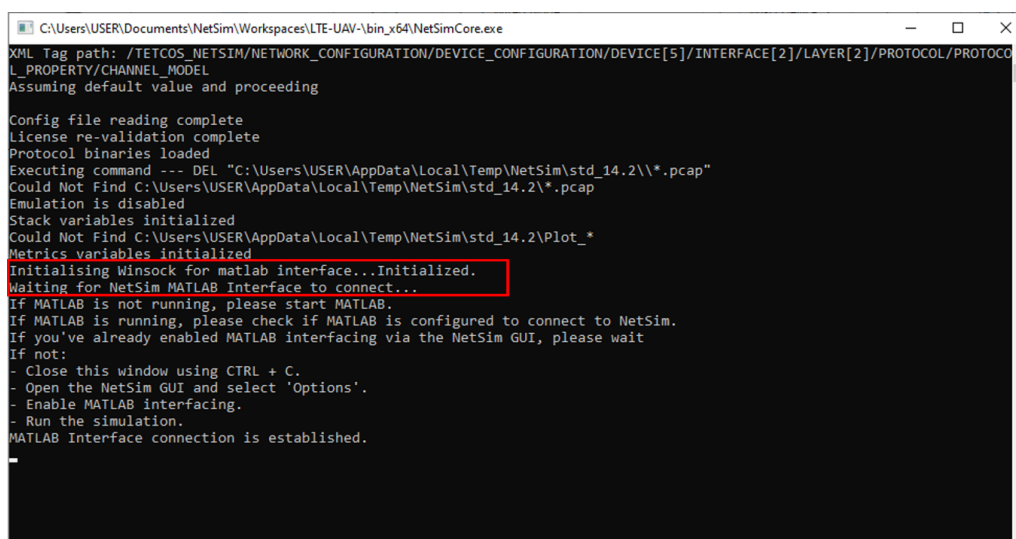

```

C:\Users\USER\Documents\NetSim\Workspaces\LTE-UAV\bin_x64\NetSimCore.exe
XML Tag path: /TETCOS_NETSIM/NETWORK_CONFIGURATION/DEVICE_CONFIGURATION/DEVICE[5]/INTERFACE[2]/LAYER[2]/PROTOCOL/PROTOCOL_PROPERTY/CHANNEL_MODEL
Assuming default value and proceeding

Config file reading complete
License re-validation complete
Protocol binaries loaded
Executing command -- DEL "C:\Users\USER\AppData\Local\Temp\NetSim\std_14.2\*.pcap"
Could Not Find C:\Users\USER\AppData\Local\Temp\NetSim\std_14.2\*.pcap
Emulation is disabled
Stack variables initialized
Could Not Find C:\Users\USER\AppData\Local\Temp\NetSim\std_14.2\Plot_*
Metrics variables initialized
Initialising Winsock for matlab interface...Initialized.
Waiting for NetSim MATLAB Interface to connect...
If MATLAB is not running, please start MATLAB.
If MATLAB is running, please check if MATLAB is configured to connect to NetSim.
If you've already enabled MATLAB interfacing via the NetSim GUI, please wait
If not:
- Close this window using CTRL + C.
- Open the NetSim GUI and select 'Options'.
- Enable MATLAB interfacing.
- Run the simulation.
MATLAB Interface connection is established.

```

Figure 3-20: NetSim Simulation console waits for MATLAB Interface process to connect.

MATLAB Interface process can be started and connected to the running instance of NetSim simulation using one of the following methods depending on where MATLAB is installed:

- If MATLAB is installed in the same system where NetSim is installed. MATLAB Interface

process can be launched directly from the design window of NetSim.

- Go to Options Menu and select the Open MATLAB Interface option as shown below:

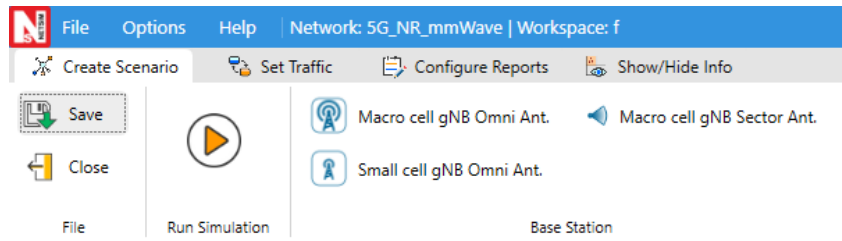


Figure 3-21: *Open MATLAB Window Options.*

- Click on the OK button when the following message is displayed.

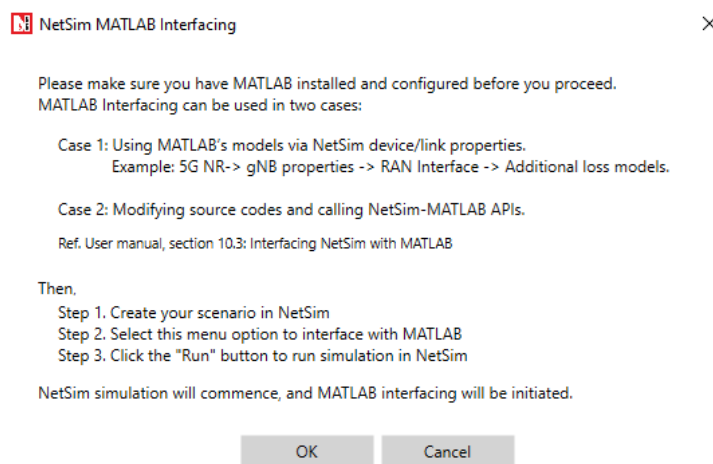


Figure 3-22: *MATLAB Interface warning message.*

- If MATLAB is installed in a different system in the same network, then MATLABInterface.exe (present in <NetSim Install Directory>/bin folder), can be started in that system, manually from command prompt and the IP address of the system where NetSim simulation has started can be passed as an argument as shown below:


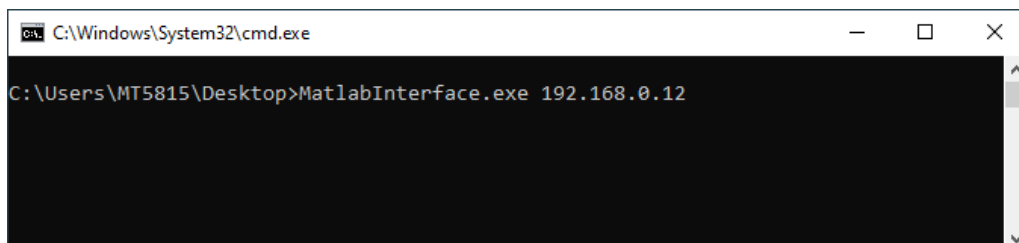


Figure 3-23: *MATLAB interface over an IP address.*

In both above cases, the MATLAB Interface process starts MATLAB process (MATLAB command window will open in minimized state) after which simulation in NetSim will start. During the simulation communication between NetSim and MATLAB is established to send inputs from

NetSim to MATLAB pathloss models and to receive pathloss from MATLAB to NetSim happens via the MATLAB Interface process as shown below:

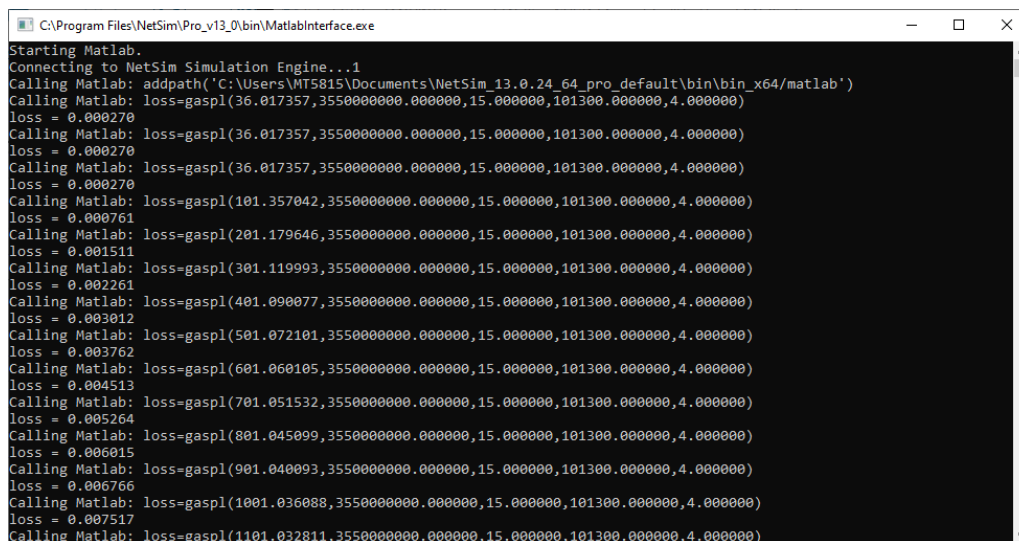

```

C:\Program Files\NetSim\Pro_v13_0\bin\MatlabInterface.exe
Starting Matlab.
Connecting to NetSim Simulation Engine...1
Calling Matlab: addpath('C:\Users\MT5815\Documents\NetSim_13.0.24_64_pro_default\bin\bin_x64\matlab')
Calling Matlab: loss=gaspl(36.017357,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.000270
Calling Matlab: loss=gaspl(36.017357,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.000270
Calling Matlab: loss=gaspl(36.017357,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.000270
Calling Matlab: loss=gaspl(101.357042,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.000761
Calling Matlab: loss=gaspl(201.179646,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.001511
Calling Matlab: loss=gaspl(301.119993,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.002261
Calling Matlab: loss=gaspl(401.090077,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.003012
Calling Matlab: loss=gaspl(501.072101,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.003762
Calling Matlab: loss=gaspl(601.060105,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.004513
Calling Matlab: loss=gaspl(701.051532,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.005264
Calling Matlab: loss=gaspl(801.045099,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.006015
Calling Matlab: loss=gaspl(901.040093,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.006766
Calling Matlab: loss=gaspl(1001.036088,3550000000.000000,15.000000,101300.000000,4.000000)
loss = 0.007517
Calling Matlab: loss=gaspl(1101.032811,3550000000.000000,15.000000,101300.000000,4.000000)

```

Figure 3-24: Runtime MATLAB interfacing window.

The pathloss value obtained from MATLAB is added to the total loss calculated as per the 3GPP TR 38.900 specifications. At simulation end the MATLAB Interface process closes the MATLAB process that it started.

3.13 Downlink Interference Model

3.13.1 Configuration

Downlink Interference Model can be configured in the gNB's 5G RAN interface properties under channel models section of Physical Layer as shown below.

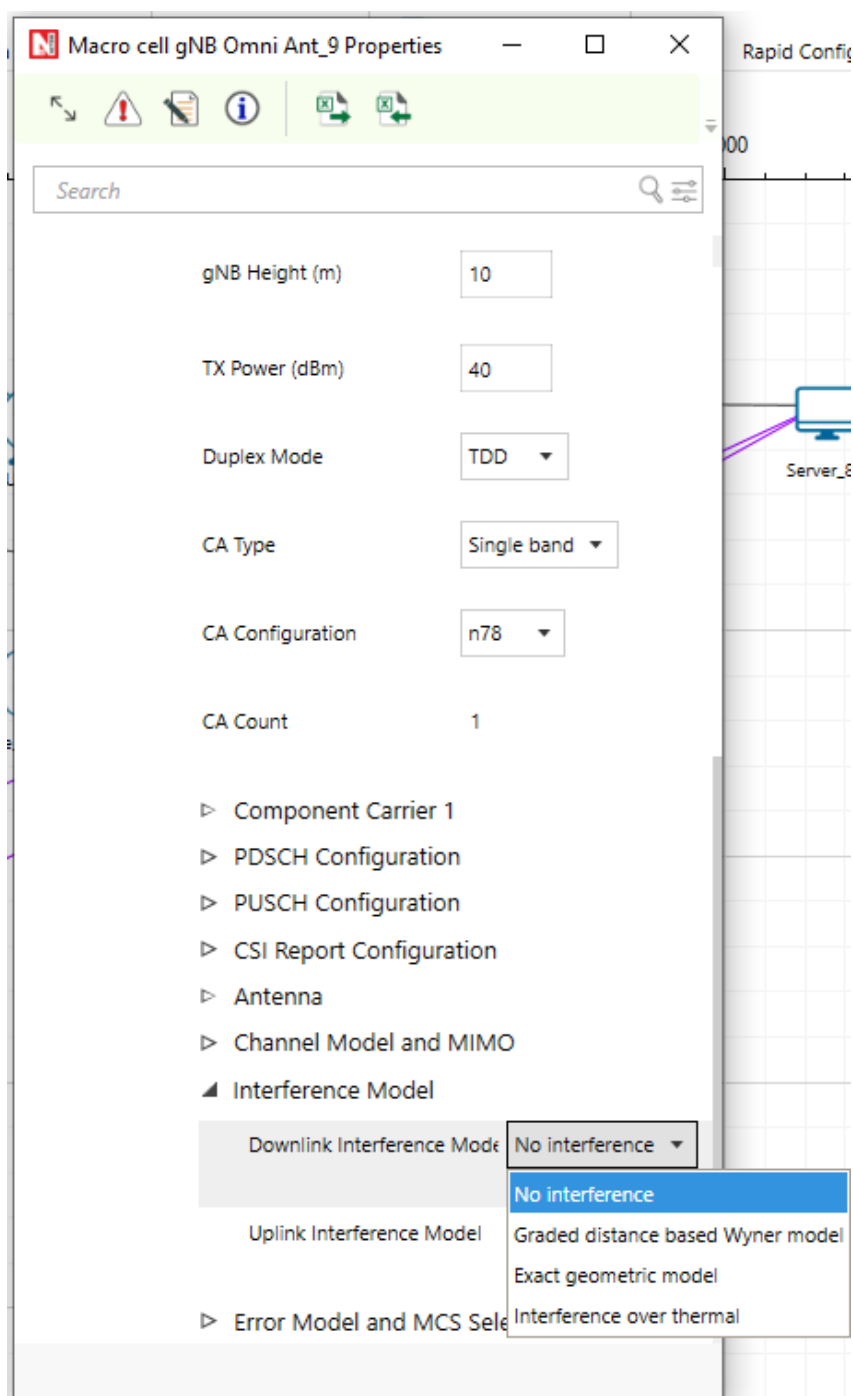


Figure 3-25: *gNB > Interface (5G RAN) > Physical layer properties.*

Downlink Interference Model is set to NO INTERFERENCE by default.

3.13.2 Graded Distance-Based Wyner Model

The Wyner model is widely used due to its simplicity and analytical tractability. In this model:

- Only interference from (two) adjacent cells is considered.
- Random user locations and pathloss variations are ignored, and

- The interference intensity from each neighbouring base station (BS) is characterized by a single fixed parameter ($0 \leq \alpha \leq 1$). The channel gain between BS and its home user is 1 and the intercell interference intensity is α . Thus, a user sees constant interference irrespective of its location.

These three simplifications lose a lot of information. We alter the Wyner model to address these flaws by:

- Considering interference from arbitrary number of BSs.
- Factoring in the user location. The UEs distance from the interfering BS is an obvious factor that determines the interference intensity since the amount of interference caused depends on the signal attenuation with distance, the pathloss law. Since the Wyner model uses relative interference, the ratio of a UEs distance from serving and interfering BSs is used as one of the interference parameters.
- Using a graded interference intensity model, whereby a UE will see a different value of α at different locations, thereby modelling the effect of interference more accurately.

3.13.2.1 Technical Description

- We model DL interference from any number of interfering BSs. Let BS_i be the serving BS to UE_k . Let BS_j be any other BS ($j \neq i$). Then the distance between UE_k and BS_i is denoted as $D_{UE_k}^{BS_i}$, while the distance between UE and BS_j is denoted as $D_{UE_k}^{BS_j}$.

- A UE sees interference if $\frac{(D_{UE_k}^{BS_j} - D_{UE_k}^{BS_i})}{D_{UE_k}^{BS_j}}$ is within a User Defined threshold (for example, 20%). This ratio is also equal to $1 - \frac{D_{UE_k}^{BS_i}}{D_{UE_k}^{BS_j}}$. When $D_{UE_k}^{BS_i} \leq D_{UE_k}^{BS_j}$, we see that

$$0 \leq \frac{(D_{UE_k}^{BS_j} - D_{UE_k}^{BS_i})}{D_{UE_k}^{BS_j}} \leq 1. \text{ The ratio is 0 when } D_{UE_k}^{BS_i} = D_{UE_k}^{BS_j} \text{ and is 1 when } D_{UE_k}^{BS_i} = 0.$$

When $D_{UE_k}^{BS_i} = D_{UE_k}^{BS_j}$ the UE is equidistant from both BS i.e., at the cell edge. When $D_{UE_k}^{BS_i} = 0$, the UE is at the centre of the serving BS, BS_i .

- Users at the cell-edge will see out of cell interference; as the user moves closer to the cell centre, it sees lesser interference.
- We call this User Defined threshold as differential distance ratio threshold and denote it by DDR_{th} . The DDR threshold is used to define K thresholds, which are in turn used to determine the out of cell interference experienced by UE_k , as explained below. First, we bin the DDR_{th} , conditional on $D_{UE_k}^{BS_i} \leq D_{UE_k}^{BS_j}$, into K steps, as follows:

$$0 \leq \frac{(D_{UE_k}^{BS_j} - D_{UE_k}^{BS_i})}{D_{UE_k}^{BS_j}} < \left(\frac{DDR_{th}}{K}\right) \times 1 \quad (48)$$

$$\left(\frac{DDR_{th}}{K}\right) \times 1 \leq \frac{(D_{UE_k}^{BS_j} - D_{UE_k}^{BS_i})}{D_{UE_k}^{BS_j}} < \left(\frac{DDR_{th}}{K}\right) \times 2 \quad (49)$$

$$\dots \quad (50)$$

$$\dots \left(\frac{DDR_{th}}{K} \right) \times (K - 1) \leq \frac{\left(D_{UE_K}^{BS_j} - D_{UE_K}^{BS_i} \right)}{D_{UE_K}^{BS_j}} < \left(\frac{DDR_{th}}{K} \right) \times K \quad (51)$$

$$\left(\frac{DDR_{th}}{K} \right) \times K \leq \frac{\left(D_{UE_K}^{BS_j} - D_{UE_K}^{BS_i} \right)}{D_{UE_K}^{BS_j}} \quad (52)$$

Where DDR_{th} , is a user input varying from 0.00 to 1.00 (default is 0.1 or 10%), and K , the number of steps, is a user input varying from 1 to 4 (default is 1). For example: if the given value for the DDR is 0.2 and nSteps is 4, then the range of the curves will be from 0 to $\frac{0.2}{4} = 0.05$, i.e 0 to 0.05, 0.05 to 0.10, 0.10 to 0.15, 0.15 to 0.2.

The relative interference for each of these steps would be I_n ($0 \leq n \leq K$) where K is the number of steps and n represents each individual step ($n = p$ if the p^{th} inequality in the above is satisfied, counting the first inequality as the zeroth inequality).

We specify the interference power relative to the power received from BS_i . Therefore, given the value of I_n , interference power is calculated as the received power from BS_i (excluding beamforming gain) less I_n . Thus

$$\text{InterferencePower from } BS_j \text{ (dB)} = \text{ReceivedPower from } BS_i \text{ (dBm)} - I_n^j \text{ (dB)} \quad (53)$$

Therefore, we have $I_n^i \text{ (dB)} = P_{\text{servicing}}^{BS} \text{ (dBm)} - P_{\text{Interfering}}^{BS} \text{ (dBm)}$. This is equivalent to the Wyner model with $\alpha = \frac{P_{\text{Interfering}}^{BS}}{P_{\text{servicing}}^{BS}}$ in the linear scale; however, note that in our interference model, α depends on the UE's location, because I_n depends on the distance.

This interference powers (linear) from all interfering BSs are added to the noise power (in linear scale) and then

$$SINR = \frac{\text{Received power from } BS_i + \text{BeamFormingGain}}{\text{NoisePower} + \sum \text{InterferencePower}} \quad (54)$$

- Each I_n is a user input. It is subject to the limits $0 \leq I_n \leq 20$ dB. NetSim will enforce the sanity check $20 \geq I_{K-1} \geq \dots \geq I_0 \geq 0$. Here I_K is the relative interference seen when the UE is near BS_i and I_0 is the relative interference seen when the UE is nearly equidistant from its two nearest BSs (and hence far from BS_i).
- In an ideal case, when the user is at the cell edge, the received power from BS_i will be roughly equal to the received power from BS_j (since it is equidistant from the two BSs), and so $SINR_{\text{CellEdge}}$ will necessarily be less than 0 dB.
- As the UE moves away from the cell edge and towards BS_i , the received power from BS_i increases and that from BS_j decreases, and so the SINR improves. For this reason, we have the limits on I_n as $0 \text{ dB} \leq I_n \leq 20 \text{ dB}$. If the user sets I_n to a large value, it will be equivalent to having no inter-cell interference.

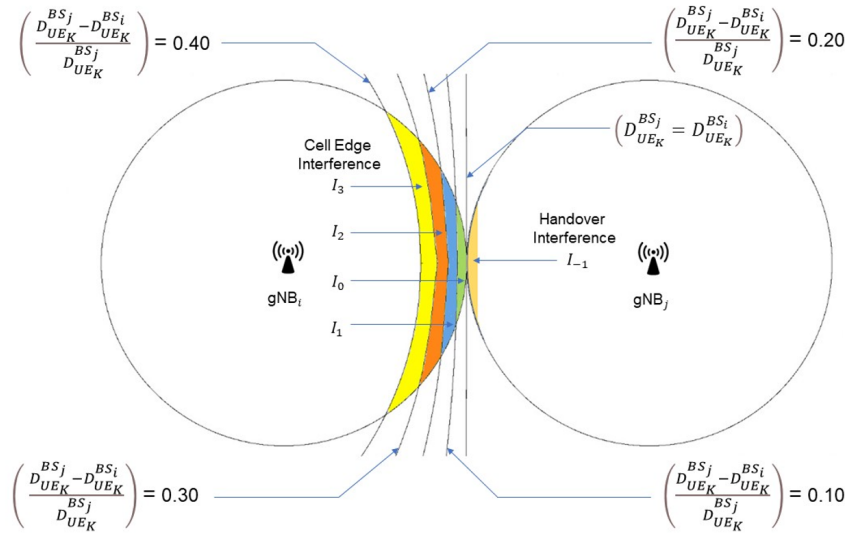


Figure 3-26: Interference zones are the regions within the four curves and the cell boundary of gNB_i. This example is for a case involving just 2 BSs with $DDR = 0.4$ and $K = 4$. The four curves are therefore the equations where $\frac{(D_{UE_K}^{BS_j} - D_{UE_K}^{BS_i})}{D_{UE_K}^{BS_j}}$ is equal to $\frac{k}{4} = 0.1, \frac{2k}{4} = 0.2, \frac{3k}{4} = 0.3,$ and $\frac{4k}{4} = 0.4$. The handover interference region is also shown.

- In case $\frac{(D_{UE_K}^{BS_j} - D_{UE_K}^{BS_i})}{D_{UE_K}^{BS_j}} > DDR_{th}$, the out of cell interference seen at the UE is set to I_K . The default value of I_K is 0, i.e., cell centre users do not see any out of cell interference. The default values of I_k for $k = 1, 2, \dots, K - 1$ is 10 dB.
- In NetSim, handover is triggered when the signal strength from BS_j is offset (3 dB by default) higher than signal strength from BS_i . A handover is not triggered when UE_k is equidistant from both BSs but only when it is slightly nearer to BS_j . Therefore, the short time when $D_{UE_K}^{BS_i} \geq D_{UE_K}^{BS_j}$ is a special case requiring a different interference power. We term this interference as “Handover interference” and is a separate user input. Handover interference is denoted as I_{-1} and $-3 \text{ dB} \leq I_{-1} \leq 0 \text{ dB}$.
- Sample interference file format and example:
 - `<gNB_i>, <gNB_j>, <DDRth>, <nSteps>, <i_{-1}>, <i_0>, <i_1>, <i_2> ... <i_{(n-1)}>`
 - `gNB_11, gNB_12, 0.2, 4, -1, 1, 2, 3, 4`

3.13.3 Exact Geometric Model

In this model NetSim computes interference from one or more interfering base-stations (BS or gNB) at a UE, based on (i) the gNB UE locations and (ii) the pathloss between the interfering gNB and the UE.

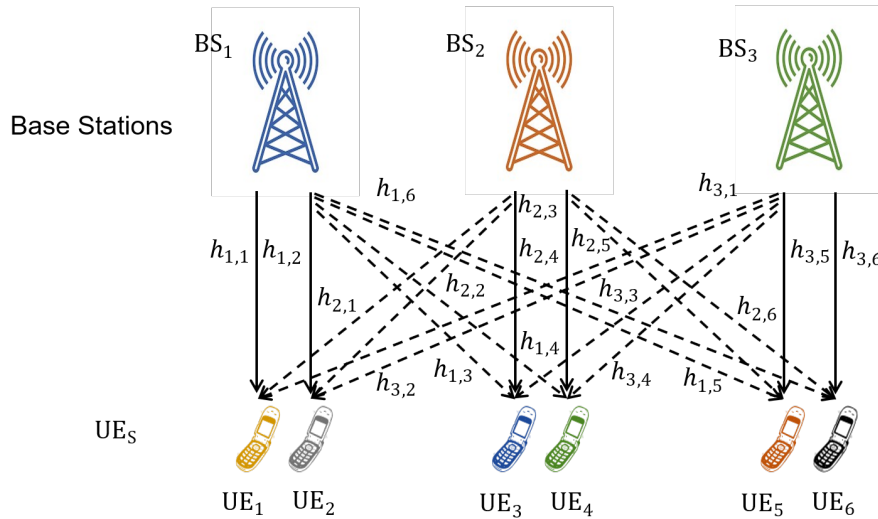


Figure 3-27: A simple scenario with 3 BSs and 6 UEs. The bold lines represent direct signals while the dashed lines represent interfering signals.

NetSim supports various 3GPP propagation models to calculate the pathloss between every BS (gNB) and every UE. One of the parameters in the pathloss equations is the distance between the BS and the UE. Some of the other user settable parameters used in the 3GPP models are (i) Centre frequency (chosen from the band selected) (ii) Rural or Urban environments (iii) UE-BS channel is in LOS or NLOS (iv) Shadow-fading in the UE-BS channel (v) Indoor or outdoor UE location, etc. Complete details of the 3GPP pathloss models supported in NetSim are given in 3.11.1.

Let BS_i be the serving BS to UE_k . Let BS_j be any other BS ($j \neq i$). UE_k communicates with BS_i while all other BSs ($j \neq i$) act as interferers. The distance between UE_k and BS_i is denoted as $D_{UE_k}^{BS_i}$, while the distance between UE and BS_j is denoted as $D_{UE_k}^{BS_j}$. The power of the interfering signal from any BS_j at any UE_k depends on (i) the transmit power of the interfering BS and (ii) pathloss between the interfering BS and the UE. It can therefore be expressed as

$$I_{UE_k}^{BS_j} = P^{BS_j} - PL_{UE_k}^{BS_j} \tag{55}$$

where P^{BS_j} is the transmit power of BS_j , $PL_{UE_k}^{BS_j}$ represents the 3GPP model based pathloss between BS_j and UE_k . This pathloss is dependent on $D_{UE_k}^{BS_j}$ and the channel between BS_j and UE_k . The interference powers (linear) from all interfering BSs (i.e., apart from the serving BS) are added to the noise power (in linear scale) and we get the expression

$$SINR_{UE_k} = \frac{\text{Received power from } BS_i + (\text{Eigen})\text{BeamFormingGain}}{\text{NoisePower} + \sum_j I_{UE_k}^{BS_j}} \tag{56}$$

SINR determines the 5G PHY rate (throughput) that the UE would get. This is because the PHY Rate depends on the CQI/MCS which in turn depends on SINR. Section 3.2 explains the details.

The Wyner model is approximate but is computationally faster, while the geometric model is precise but computationally slower due to the calculations involved.

3.13.4 Interference Modeling in OFDM in NetSim

NetSim doesn't model the allocation of specific subcarriers to individual users. The aggregate resources are divided amongst the UEs per UEs' requirements and the scheduling algorithm.

- The received power at UE_k from BS_i , with transmit power P_i is given (in the linear scale) as

$$P_{UE_k}^{BS_i} = \left(\frac{P_i}{PL_{UE_k}^{BS_i}} \right) \quad (57)$$

- I_{ik}^j or the interference in linear scale at a UE_k (associated with BS_i) from BS_j
- To normalize the power should we further multiply by the ratio given below

$$I_{ik} = \sum_j I_{ik}^j \times \left(\frac{RB_{UE_k}^{\text{slot}}}{RB_{\text{total}}^{\text{slot}}} \right) \quad (58)$$

- Assumptions:

The above formula assumes the interference seen by UE_k is proportional to the number of RBs allotted to UE_k .

Fast fading is not accounted for in the interfering signal calculations since it would require too much computational time, given that it needs to be re-calculated every coherence time, not just between BS and its associated UEs but between a BS and all the UEs in all cells. Hence NetSim calculates average interfering signal power and not instantaneous interfering signal power, which is a well-accepted assumption in multi-cell MIMO literature. Recall that NetSim accounts for fast fading in the direct signal power calculations.

- The total noise seen will be

$$k \times T \times RB_{UE_k}^{\text{slot}} \quad (59)$$

- The signal power $P_{UE_k}^{BS_i} \times \left(\frac{RB_{UE_k}^{\text{slot}}}{RB_{\text{total}}^{\text{slot}}} \right)$

Therefore,

$$SINR = \frac{P_{UE_k}^{BS_i} \times \left(\frac{RB_{UE_k}^{\text{slot}}}{RB_{\text{total}}^{\text{slot}}} \right)}{k \times T \times RB_{UE_k}^{\text{slot}} + \sum_j I_{ik}^j \times \left(\frac{RB_{UE_k}^{\text{slot}}}{RB_{\text{total}}^{\text{slot}}} \right)} = \frac{P_{UE_k}^{BS_i}}{k \times T \times RB_{\text{total}}^{\text{slot}} + \sum_j I_{ik}^j} \quad (60)$$

3.13.4.1 Interference in MIMO

If UE_k is receiving from BS_i in multiple layers, the interference power I_{ik}^j is the same for all layers.

$$SINR_L = \frac{P_{UE_k}^{BS_i} \times \lambda_L}{k \times T \times RB_{\text{total}}^{\text{slot}} + \sum_j I_{ik}^j} \quad (61)$$

Where L represents a MIMO layer. Note that neither the noise nor the interference is divided by the layer count, because the combining vector has unit norm.

3.13.4.2 Fast Fading Component of Interfering Signals

NetSim accounts for the Rx power from neighboring cells, in a statistical sense, as explained below. Let us consider an example of two BSs and two UEs with BS1 transmitting to UE1 and BS2 transmitting to UE2. The BSs employ digital (Eigen) beamforming to the UE they are transmitting to, so there is no channel-dependent beamforming between BS1 and UE2 or BS2 and UE1.

Due to this, the interference seen by UE2 due to BS1's transmission will depend on the inner product between the beamforming vector employed by BS1 (which depends only on the channel between BS1 and UE1) and the channel between BS1 and UE2 (which is independent of the channel between BS1 and UE1.)

Now, since we model the fast-fading component of the channel as having i.i.d. circularly symmetric complex Gaussian entries, the expected interference power at UE2 is simply the transmit power by BS1 times the pathloss between BS1 and UE2. This is because the long-term statistical average of the square of the magnitude of the inner product between the (unit-norm) beamforming vector employed by BS1 and the channel between BS1 and UE2 is unity.

3.13.4.3 Limitations

- In the above interference formula NetSim assumes that all interfering BSs transmit data in that slot.
- The interference calculations need to be done for each slot. Enabling interference will slow down the simulation.

3.14 Uplink Interference Model

NetSim uses Interference-over-thermal (IoT), to model uplink interference. Modeling uplink interference as IoT (also called as rise over thermal noise) allows for the calculation of the interference level relative to the thermal noise level. This can provide insight into the performance of the system and the impact of uplink interference on the signal-to-noise ratio (SNR). For example, if the uplink interference level is 10 dB higher than the thermal noise level, this indicates that the interference is significantly affecting the SNR and the performance of the system.

Users can input IoT in the NetSim GUI and it available in the eNB/gNB properties. The expression for the signal to interference noise ratio is given by

$$SINR \text{ (dB)} = SNR \text{ (dB)} - \text{IoT (dB)} \quad (62)$$

$$\text{IoT (dB)} = SNR \text{ (dB)} - SINR \text{ (dB)} \quad (63)$$

Converting to linear

$$10 \times \log_{10}(\text{IoT (linear)}) = 10 \times \log_{10}\left(\frac{SNR}{SINR}\right) = 10 \times \log_{10}\left(\frac{\frac{S}{N}}{\frac{S}{N+I}}\right) \quad (64)$$

$$\text{IoT (linear)} = \frac{I + N}{N} \quad (65)$$

Therefore, with N being the thermal noise, the interference power in linear scale is

$$I = N \times (\text{IoT (linear)} - 1) \tag{66}$$

We thus get the Interference power in dBm as

$$I \text{ (dBm)} = 10 \times \log_{10} \left(N \times \left(10^{\text{IoT(dB)}} - 1 \right) \right) \tag{67}$$

This value of I in dBm units is logged in the Radio Measurements csv file (if turned on). Example outputs are provided in the table below for various values of IoT and Bandwidth.

Table 3-35: Example table showing interference in dBm that will be logged in radio measurements file for different IoT (dB) and Bandwidth (MHz) settings.

Bandwidth (MHz)	Noise (dBm)	IoT (dB)	Interference (dBm)
100	-93.82	3	-63.83
100	-93.82	2	-73.87
50	-96.83	2	-76.88
50	-96.83	1	-87.29
10	-103.82	1	-94.28

3.15 5G Core

NetSim 5G core functionality was introduced in NetSim v13. This 5G core includes entities, which reside within the core devices (and partially within the gNB) such as Session Management Function (SMF), Access and Mobility Management Function (AMF) and User Plane Function (UPF) and the protocols these entities use for operation.

The NetSim 5G core model provides users the means to simulate the end-to-end IP connectivity. It supports interconnection of multiple UEs to the Internet/Cloud via the Radio Access Network or RAN. The RAN consists of multiple gNBs. These gNBs connect to the 5G core in the backhaul. In NetSim, the 5G core comprises a single AMF, SMF and UPF.

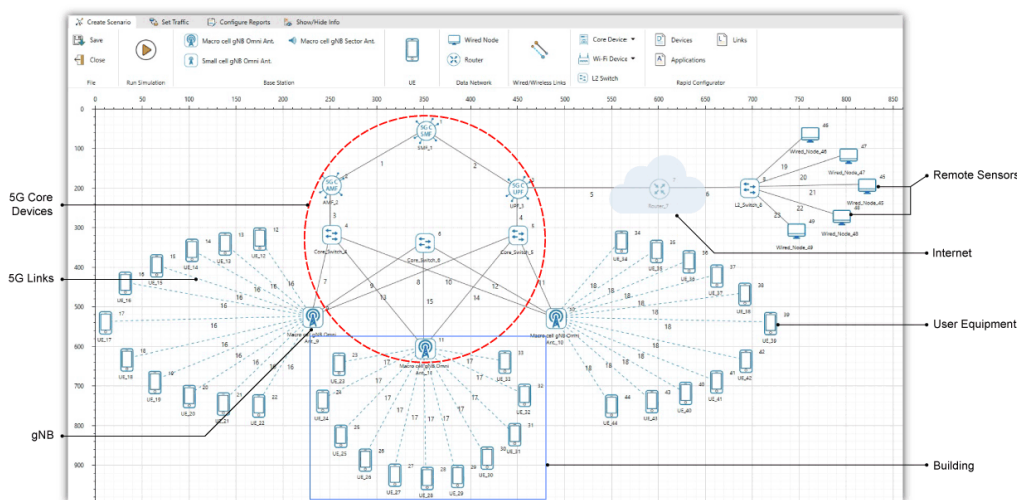


Figure 3-28: 5G Network scenario consisting of multiple UEs and gNBs connected to 5G Core — AMF, SMF and UPF. The UPF is connected to the Data Network/Internet.

NetSim 5G Core model has been designed as follows:

- The Packet type supported in NetSim 5G Core is IPv4.
- A single set of SMF/UPF/AMF entities are only available. Scenarios with inter SMF mobility / inter AMF mobility are not supported in NetSim.
- It is possible for a single UE to use different applications with different QoS models. Hence, multiple EPS Bearers are supported for each UE. This includes necessary classification of TCP/UDP traffic over IP done at the UE in the Uplink and at the UPF in the downlink.
- The NetSim 5G model allows users to perform an XN based handover between two gNBs.

In the 5G standalone architecture, the roles played by each of the entities are different.

- A UE has the following interactions:
 - The random-access procedure to initiate communication with the gNB.
 - Setup the RRC connection with the gNB.
 - Perform NAS level authentication.
 - Handle the RRC Reconfiguration from the gNB and this message sets up the default PDU session.
 - The UE concludes the registration procedure.
 - Data flow takes place in both the downlink and uplink directions.
- The gNB acts as a bridge between the UE and the 5G Core. The gNB:
 - Handles the random-access request from the UE and assigns resources for initiating the RRC connection.
 - Set up the RRC connection with the UE. SRB1 is set up at this point. Starting at this point the gNB starts assigning downlink and uplink resources to the UE.
 - Transports the Registration Request from the UE to the AMF.
 - Carries the NAS signalling between the UE and the gNB.
 - The 5G Core initiates the default PDU session setup. A Registration Accept is also received from the UE.
 - Activates the default PDU session via the RRC Reconfiguration message. It also transports the Registration Complete message to the AMF.
 - The downlink and uplink data flow takes place between the UE and the Internet.
- The AMF or Access Mobility Function coordinates the 5G Standalone registration procedure.
 - Handles the Initial UE Message from the gNB. This message carries the Registration Request from the UE.
 - On receiving the Registration Request, the AMF obtains the UE context.
 - AMF updates the SMF context and sends an Initial Context Setup Request to activate the default PDU session. The message also carries the Registration Accept message from the AMF.
 - When the gNB signals that the Initial Context setup has been completed, the AMF updates the SMF context.

- The AMF also notifies the SMF when the session is ready for uplink and downlink data transfer.
- All messages related to session management are forwarded over the N11 reference interface to the Session Management Function (SMF).
- The SMF or Session Management Function serves as a control plane entity and it is responsible for the session management.
 - The SMF assigns an IP address to be used for sending uplink data.
 - The SMF selects the UPF to be used for the session.
 - The SMF updates the UPF using PFCP messages via the N4 control-data plane interface.
- The UPF or User Plane function is a data plane component that handles user data.
 - The UPF is completely controlled from the SMF using the N4 interface. The SMF uses the Packet Forwarding Control Protocol (PFCP) to update the data plane.
 - The UPF is responsible for packet routing and forwarding, packet inspection, QoS handling, and external PDU session for interconnecting Data Network (DN), in the 5G architecture.
 - The UPF represents the data plane evolution of a Control and User Plane Separation (CUPS) strategy and is introduced as an extension to existing Evolved Packet Cores (EPCs).
 - The UPF identifies user plane traffic flow based on information received from the SMF over the N4 reference point. The N4 interface employs the Packet Forwarding Control Protocol (PFCP).

3.15.1 5G Interfaces

5G Interfaces present in NetSim are as follows:

- **5G_N1_N2:** N1-N2 is the reference point between the gNB (gNodeB) and the AMF.
- **5G_N3:** Interface between the RAN (gNB) and the (UPF).
- **5G_N4:** Interface between the Session Management Function (SMF) and the UPF.
- **5G_N6:** Interface between the Data Network (DN) and the UPF.
- **5G_N11:** Interface between the SMF and AMF.
- **5G_XN:** Interface between two RAN (gNB) nodes.

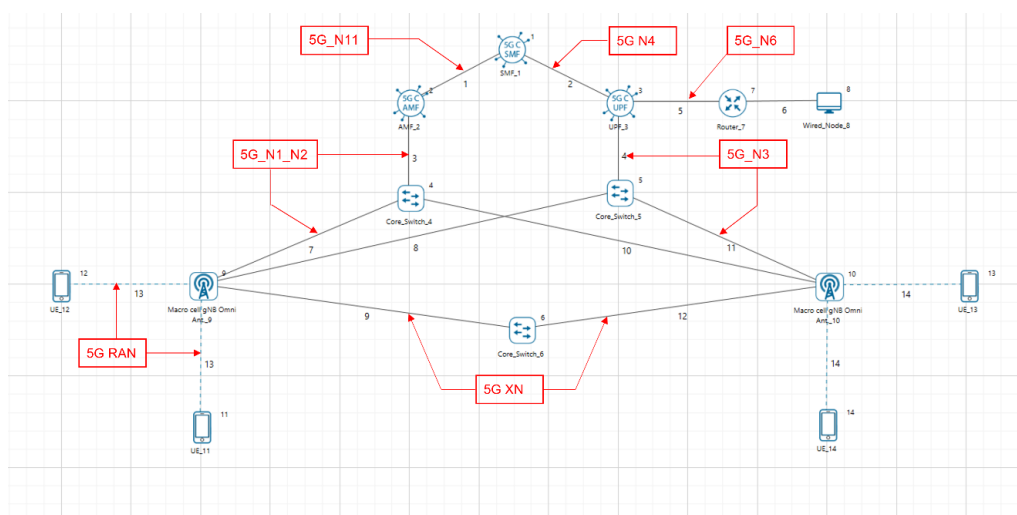


Figure 3-29: 5G Network scenario depicting the 5G Interfaces in NetSim.

The NG-AP interface (N2) provides control plane interaction between the gNB and the AMF. In NetSim, this interface is modelled in an abstract manner, with direct interaction between the gNB and the AMF. The encoding of NGAP messages and information elements specified in [TS36413] is not implemented.

The NG-AP primitives that are modelled are:

- INITIAL UE MESSAGE AND REGISTRATION REQUEST
- INITIAL CONTEXT SETUP REQUEST
- INITIAL CONTEXT SETUP RESPONSE AND REGISTRATION COMPLETE
- PATH SWITCH REQUEST
- PATH SWITCH REQUEST ACKNOWLEDGE

The N11 interface provides control plane interaction between the SMF and the AMF using the GTPv2-C protocol specified in [TS29274]. In NetSim, this interface is modelled with direct interaction between the SMF and the AMF objects, without implementing the encoding of the messages.

The N11 primitives that are modelled are:

- CREATE SESSION REQUEST
- CREATE SESSION RESPONSE
- MODIFY BEARER REQUEST
- MODIFY BEARER RESPONSE

Of these primitives, the first two are used during the initial UE attachment for the establishment of the N2-U bearers; the other two are used during handover to switch the N2-U bearers from the source gNB to the target gNB because of the reception by the AMF of a PATH SWITCH REQUEST NG-AP message.

3.15.2 Cell Selection and UE Attach Procedure

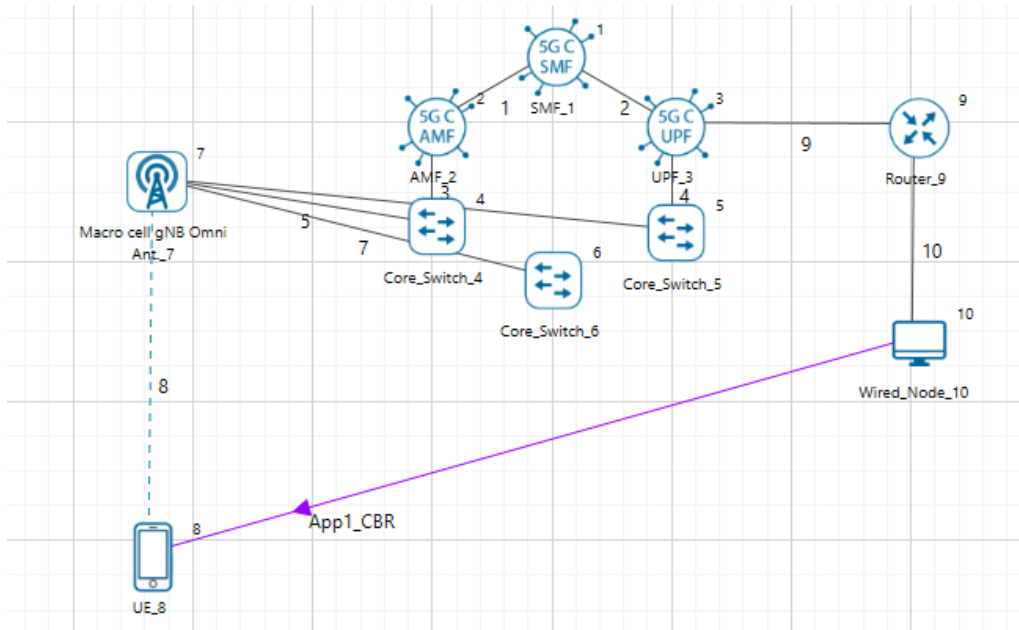


Figure 3-30: A 5G network scenario with a Single UE connected to a gNB which is connected to the 5G Core and the UE downloads data from the Server (Wired Node).

As an example, consider a 5G network scenario with 5G Core devices (which consists of AMF, SMF, UPF and three L2 Switches), a UE which is connected to a gNB, and in the server side, a Wired Node which is connected to a Router which is connected to the 5G core via UPF.

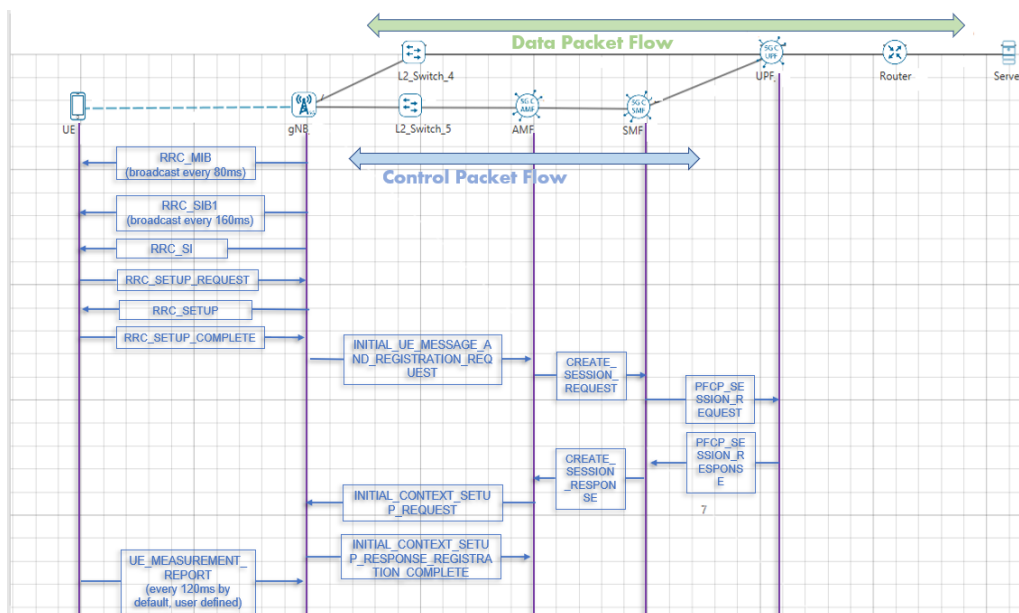


Figure 3-31: UE Attach Procedure.

The attachment process is as follows:

- Radio Resource Control (RRC) Master Information Block (MIB) packets are broadcast by each gNB to all the UEs. These packets are transmitted periodically every 80 ms.

- If the number of gNBs is ‘m’ and the number of UEs is ‘n’, then the number of MIB packets transmitted each time will be ‘m × n’.
- The transmission of MIB packets starts from the MAC Layer. The transmission time can be calculated from the MAC Layer Arrival Time in the packet trace.
- The size of each MIB packet is 8 Bytes and can be observed in the Phy Layer Payload field in the packet trace.
- RRC System Information Block 1 packets are broadcast by the gNBs to all the UEs. These packets are transmitted periodically every 160 ms.
 - The transmission of SIB1 packet starts from the MAC Layer. The transmission time can be calculated from the MAC Layer Arrival Time in the packet trace.
 - If the number of gNBs is ‘m’ and the number of UEs is ‘n’, then the number of SIB packets transmitted each time will be ‘m × n’.
 - The size of each SIB1 packet is 8 Bytes. This can be observed in the Phy Layer Payload field in the packet trace.
- After the first set of packets, the cell selection occurs as explained below.
 - The UE attaches itself initially to the gNB from which it receives the highest SSB SNR.
 - If SNRs from multiple gNBs are equal, the UE will attach to the gNB with the lowest ID.
 - The gNB to which the UE is connected by the user in NetSim GUI at the network design stage, is only for visual purposes. It plays no role in determining to which gNB the UE will eventually be attached.
- RRC System Information is broadcast by the selected gNBs to all UEs when the cell selection is complete.
 - The SI packet is sent only once during the simulation. It is not sent after every Handover.
 - It occurs at 160.9 ms.
 - The transmission of SI packet starts from the MAC Layer. The transmission time can be calculated from the MAC Layer Arrival Time in the packet trace.
 - The size of each SI packet is 8 Bytes. The size of the packet can be calculated from the Phy Layer Payload field in the packet trace.
- The RRC Setup Request will be sent by the UE to the connected gNB within 2.5 ms of receipt of RRC SI packet.
 - The RRC Setup Request is sent with the random UE-Identity and an establishment cause. This can be observed in the Headers column of the packet trace.
- The RRC Setup message is used to establish SRB1.
 - Selected gNB sends the setup to UE which contains RRCTransactionIdentifier, RRCResponseType, PDCP Properties: UEID and GNBID, DiscardDelayTimer, T_Reordering, Hdr Type, SN=0, dcBit.
 - RRC Setup Packet Size is 24 Bytes. The size of the packet can be calculated from the Phy Layer Payload field in the packet trace.
 - UE stops the timer (T300) when it receives the RRC Setup message.

- UE makes a transition to RRC connected mode.
- The RRC Setup Complete message is used to confirm the successful completion of an RRC connection establishment.
 - UE sends this message on receipt of the RRC Setup message.
 - Contains RRCTransactionIdentifier, SelectedPLMNIdentity, AMFIdentifier, Gaumi Type, Hdr Type, SN, dcBit.
- UE sends UE MEASUREMENT REPORT to the connected gNB. The measurement report is sent by each UE to its serving gNB and it contains SINR from all gNBs.

If the SNR from another gNB is offset greater than SNR from serving gNB, it leads to handover. After the handover procedure is completed RRC Reconfiguration would happen between target gNB and UE. The UE will then send the UE MEASUREMENT REPORT to this gNB.

These can be observed in the NetSim Packet Trace.

PACKET ID	SEGMENT ID	PACKET TYPE	CONTROL_PACKET	TYPE/APP NAME	SOURCE ID	DESTINATION ID	TRANSMITTER ID	RECEIVER ID	NW LAYER ARRIVAL TIME(US)	MAC LAYER ARRIVAL TIME(US)	PHY LAYER
0	N/A	Control_Packet	RRC_MIB		GNB-7	Broadcast-0	GNB-7	UE-8			80000
0	N/A	Control_Packet	RRC_SIB1		GNB-7	Broadcast-0	GNB-7	UE-8			160000
0	N/A	Control_Packet	RRC_MIB		GNB-7	Broadcast-0	GNB-7	UE-8			160000
0	N/A	Control_Packet	RRC_SI		GNB-7	UE-8	GNB-7	UE-8			160999
0	N/A	Control_Packet	RRC_SETUP_REQUEST		UE-8	GNB-7	UE-8	GNB-7			161999
0	N/A	Control_Packet	RRC_SETUP		GNB-7	UE-8	GNB-7	UE-8			162999
0	N/A	Control_Packet	RRC_SETUP_COMPLETE		UE-8	GNB-7	UE-8	GNB-7			163999
0	0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F		GNB-7	AMF-3	GNB-7	SWITCH-5		164999	164999
0	0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F		GNB-7	AMF-3	SWITCH-5	AMF-3		164999	164999

Figure 3-32: RRC connection establishment in Packet Trace.

3.15.3 5G Core Connection Management Process

This functionality is based on 3GPP 38.413.

- The gNB will introduce the UE to the 5G Core after the initial gNB-UE attachment process.
- The gNB will send Initial UE message and Registration request to the selected AMF (currently NetSim supports only one AMF). The message will be transmitted when gNB receives the first NAS message to be transmitted from the radio link after the RRC Setup Complete.
- Upon receiving the UE message and registration request, the AMF will send Create Session Request to the SMF in-order to create a session for the UE.
- The SMF will send the PFCP Session Request to UPF to denote that the UE is present in the network and the data packet flow may occur to UPF and to create/establish/modify PFCP session for UE.
- Further, AMF will send the Initial Context Setup Request to the gNB to confirm the setup of a UE context.
- The gNB will send Initial Context Setup and Registration Complete messages to the AMF and then the UE will be associated with the core.

These can be observed in NetSim Packet Trace file.

PACKET_ID	SEGMENT_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID	APP_LAYER_ARRIVAL_TIME(US)	TRX_LAYER_ARRIVAL_TIME(US)
0	N/A	Control_Packet	RRC_MIB	GNB-7	Broadcast-0	GNB-7	UE-8	N/A	N/A
0	N/A	Control_Packet	RRC_SIB1	GNB-7	Broadcast-0	GNB-7	UE-8	N/A	N/A
0	N/A	Control_Packet	RRC_MIB	GNB-7	Broadcast-0	GNB-7	UE-8	N/A	N/A
0	N/A	Control_Packet	RRC_SI	GNB-7	UE-8	GNB-7	UE-8	N/A	N/A
0	N/A	Control_Packet	RRC_SETUP_REQUEST	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	RRC_SETUP	GNB-7	UE-8	GNB-7	UE-8	N/A	N/A
0	N/A	Control_Packet	RRC_SETUP_COMPLETE	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_REQUEST	GNB-7	AMF-3	GNB-7	SWITCH-5	164999	164999
0	0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_REQUEST	GNB-7	AMF-3	SWITCH-5	AMF-3	164999	164999
0	0	Control_Packet	CREATE_SESSION_REQUEST	AMF-3	SMF-2	AMF-3	SMF-2	165035.24	165035.24
0	0	Control_Packet	PFCP_SESSION_REQUEST	SMF-2	UPF-1	SMF-2	UPF-1	165053.36	165053.36
0	0	Control_Packet	PFCP_SESSION_RESPONSE	UPF-1	SMF-2	UPF-1	SMF-2	165071.48	165071.48
0	0	Control_Packet	CREATE_SESSION_RESPONSE	SMF-2	AMF-3	SMF-2	AMF-3	165089.6	165089.6
0	0	Control_Packet	INITIAL_CONTEXT_SETUP_REQUEST	AMF-3	GNB-7	AMF-3	SWITCH-5	165107.72	165107.72
0	0	Control_Packet	INITIAL_CONTEXT_SETUP_REQUEST	AMF-3	GNB-7	SWITCH-5	GNB-7	165107.72	165107.72
0	0	Control_Packet	INITIAL_CONTEXT_SETUP_RESPONSE_REGISTRATION_COMPLETE	GNB-7	AMF-3	GNB-7	SWITCH-5	165148.12	165148.12
0	0	Control_Packet	INITIAL_CONTEXT_SETUP_RESPONSE_REGISTRATION_COMPLETE	GNB-7	AMF-3	SWITCH-5	AMF-3	165148.12	165148.12
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	UE_MEASUREMENT_REPORT	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	RRC_MIB	GNB-7	Broadcast-0	GNB-7	UE-8	N/A	N/A
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	STATUSPDU	UE-8	GNB-7	UE-8	GNB-7	N/A	N/A
0	N/A	Control_Packet	RRC_SIB1	GNB-7	Broadcast-0	GNB-7	UE-8	N/A	N/A

Figure 3-33: 5G Core connection management process.

When the UE attachment is completed, the data packets will be transmitted from the source to the destination via the UPF.

3.16 5G Non-Stand Alone (NSA)

3.16.1 Overview

NSA leverages the existing LTE radio access and core network (EPC) to anchor 5G NR using the Dual Connectivity feature. This solution provides a seamless option to deploy 5G services with very less disruption in the network. The eNB is connected to the EPC through the LTE S1 interface and to the gNB through the XN interface. The gNB can be connected to the EPC through the LTE_S1 interface and other gNBs through the XN interface. Similarly, the eNBs and gNBs will be connected to 5G Core through the N1-N2, and N3 interfaces and gNB-eNB and gNB-gNB connections through the XN interface. The control packets like RRC MIB, RRC SIB1, RRC SI in NSA modes will be transmitted from the master nodes to the UE. Similarly, the UE will send the UE MEASUREMENT REPORT and RRC SETUP messages to the master nodes. The master node will be selected according to the deployment option selected.

The NSA modes in NetSim 5G module includes:

- Option 4 where only 5G Core devices are present, and EPC is not available. Here, gNB is the Master Cell and eNB is the Secondary Cell. Option 4 is categorized into:
 - Option 4: Only gNB connects to all the 5G Core interfaces. eNB connects to the XN interface.
 - Option 4a: gNB connects to all 5G Core interfaces and eNB connects to AMF and UPF through respective interfaces.
- Option 7 where only 5G Core devices are present, and EPC is not available. Here, eNB is the Master Cell and gNB is the Secondary Cell. Option 7 is categorized into:
 - Option 7: eNB connects to all 5G Core interfaces. gNB connects only to the XN interface.
 - Option 7a: gNB connects to all the 5G Core interfaces. eNB connects to AMF and UPF through the respective interfaces.

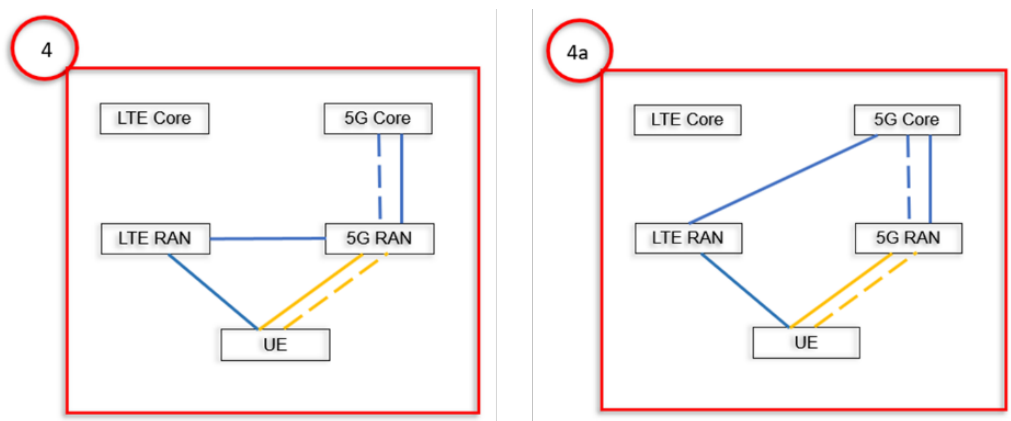


Figure 3-34: NSA deployment — Option 4, Option 4a Networking modes.

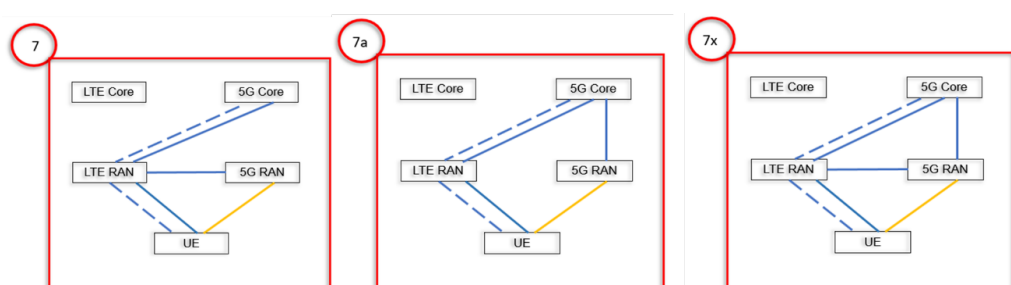


Figure 3-35: NSA deployment — Option 7, Option 7a Networking modes.

In Options 4 and 7, the secondary node is not directly connected with the LTE-EPC/5G-Core. On reception of a packet, the secondary node, transmits all packet to the master node via the XN interface for uplink cases and for downlink cases, the core/EPC transmits the packets to the master node and the master node splits the traffic between itself and the secondary node, since there is no connection between the core and secondary node. The master node also transmits the packets to the UE.

In options 4a and 7a, the split happens at the EPC/UPF.

3.16.2 Option 4/4a

Option 4 consists of a 5G Core. The master node is the LTE NR cell or gNB and the secondary node is LTE cell or eNB.

3.16.2.1 Option 4

In Option 4 of Non-Stand-alone mode, both LTE and 5G NR radio access technologies are deployed and controlled through only the 5G Core, i.e., AMF, SMF and UPF.

The gNB has both the NG-U and NG-C interfaces. Both eNB and gNB connect over the XN interface. The interface between gNB and AMF is called N2 interface and the interface between gNB and UPF is called N3 interface, So the control plane is over N2 interface and user plane is over N3 interface.

The eNB is not connected to 5G Core, hence data traffic is split over the XN interface. The gNB is connected to 5G Core with NG-U and NG-C.

In NetSim, the gNB is connected to the UPF via Switch_5 using the 5G_N3 interface and to

the AMF via Switch_4 using the 5G_N1_N2 interface, hence, gNB communicates directly with the 5G Core and eNB does not communicate directly with the 5G Core. The gNBs and eNBs are inter-connected using the XN interface via a Layer 2 Switch and the UEs present in the network consists of two interfaces, an LTE interface and a 5G_RAN interface.

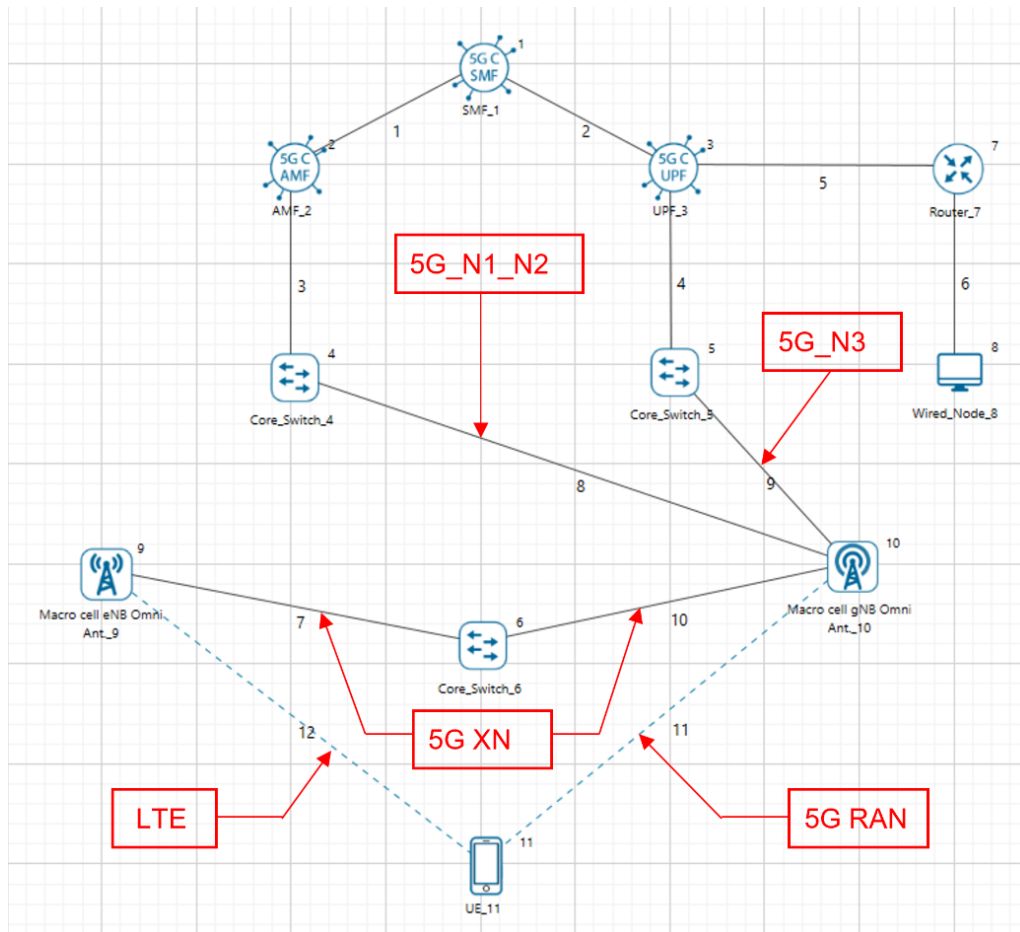


Figure 3-36: NSA deployment — Option 4 networking mode in NetSim.

3.16.2.2 Option-4a

In Option 4a, the eNB is not connected to gNB over XN interface, but it is connected to 5G Core over the NG-U interface.

The gNB has both NG-U and NG-C interfaces. Data traffic is split between 4G and 5G at the 5G Core, specifically the UPF.

In NetSim, the gNB and eNB are connected to the UPF via Switch 5 using the 5G N3 interface and to the AMF via Switch 4 using the 5G N1 N2 interface. The gNBs can be inter-connected using the XN interface and does not have XN interface for eNBs. Hence direct communication between eNB and gNB is not possible. The UEs present in the network consists of two interfaces, an LTE interface and a 5G RAN interface.

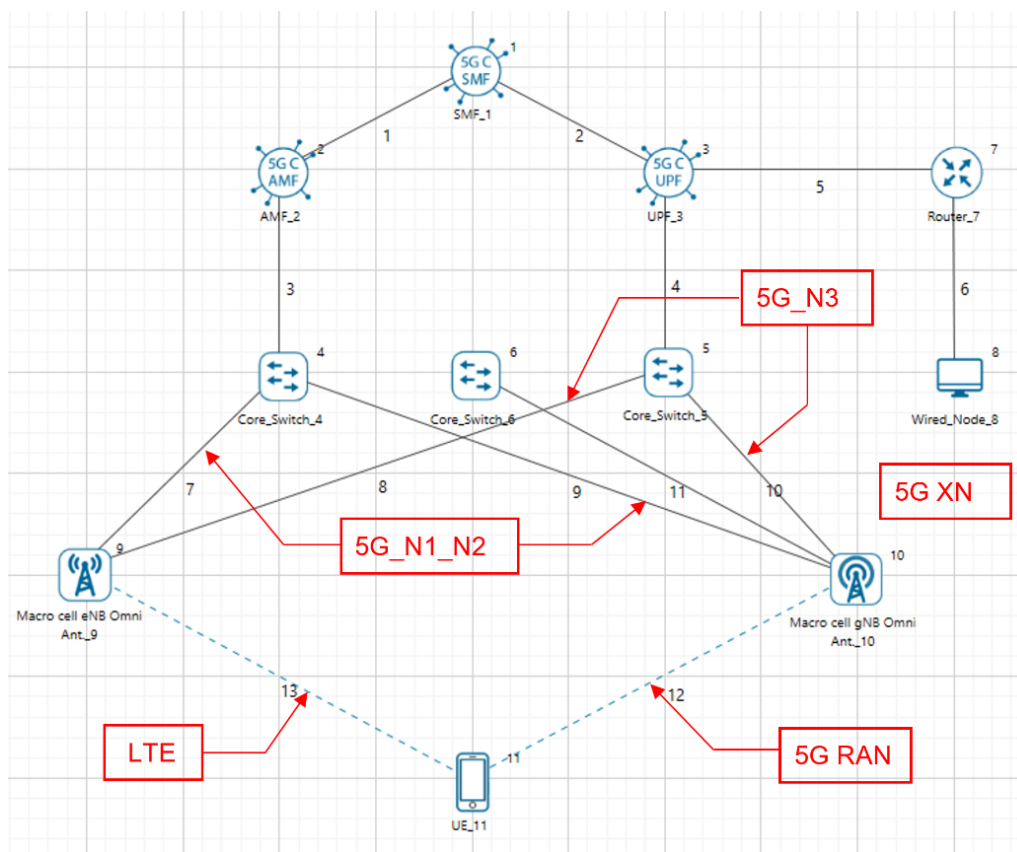


Figure 3-37: NSA deployment — Option 4a networking mode in NetSim.

3.16.3 Option 7/7a

The eNB has NG-U and NG-C interfaces to 5G Core and eNB connects with gNB over XN interface. The master node is the LTE cell or eNB and the secondary node is the LTE-NR cell or gNB in these deployment options.

3.16.3.1 Option-7

In Option 7, the gNB does not communicate to 5G Core. Data traffic flows through eNB communicating to and from the 5G Core. Some part of the data can be transferred through gNB over the XN interface.

In NetSim, the eNBs are connected to the UPF via Switch_5 using the 5G_N3 interface and to the AMF via Switch 4 using the 5G N1-N2 interface. The gNBs and eNBs are inter-connected using the XN interface and hence direct communication between eNB and gNB is possible. The UEs present in the network consists of two interfaces, an LTE interface and a 5G RAN interface. The data is delivered to the UE when it comes to the 5G NR through the LTE-RAN.

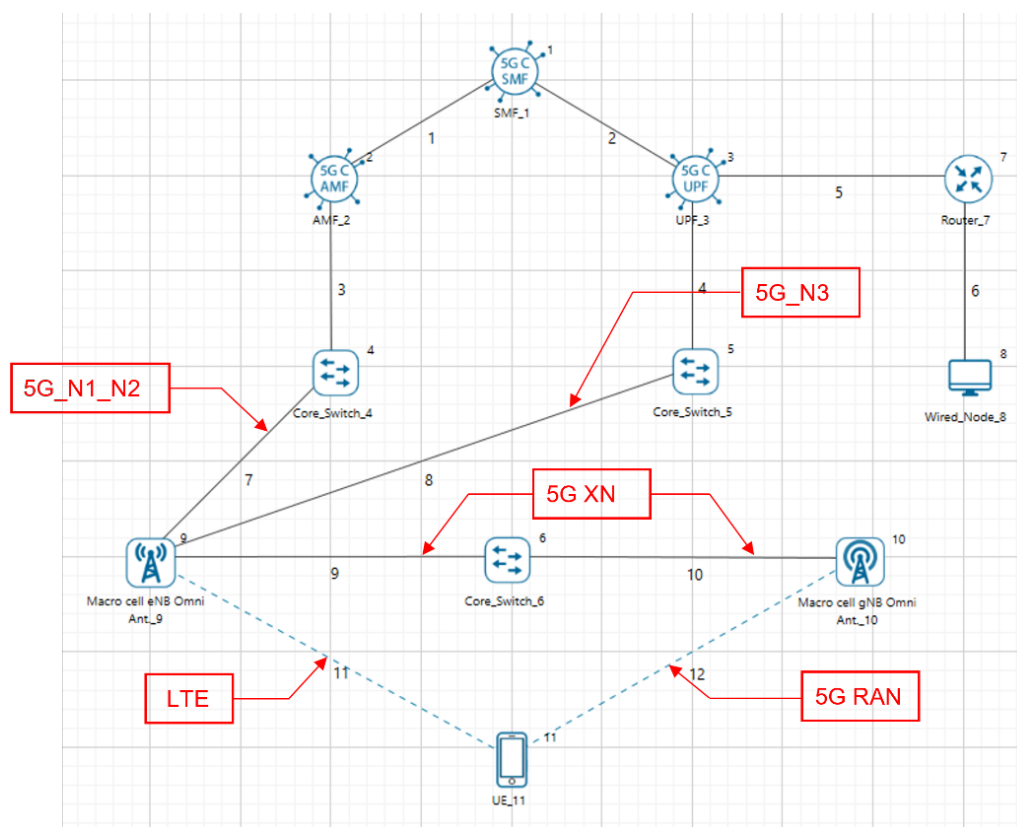


Figure 3-38: NSA deployment — Option 7 networking mode in NetSim.

3.16.3.2 Option-7a

In Option 7a, eNB and gNB are not connected via the XN interface and instead gNB is connected to 5G Core over NG-U. The eNB is connected to 5G Core over NG-C and NG-U. Data traffic is split at the 5GC (UPF).

In NetSim, the gNB and eNB are connected to the UPF via Switch 5 using the 5G N3 interface and to the AMF via Switch 4 using the 5G N1-N2 interface. The gNBs do not have an XN Interface and eNBs are inter-connected using the XN interface and hence direct communication between eNB and gNB is not possible. The UEs present in the network consists of two interfaces, an LTE interface and a 5G RAN interface.

The user data goes directly from the 5G Core to the gNB and then to the UE.

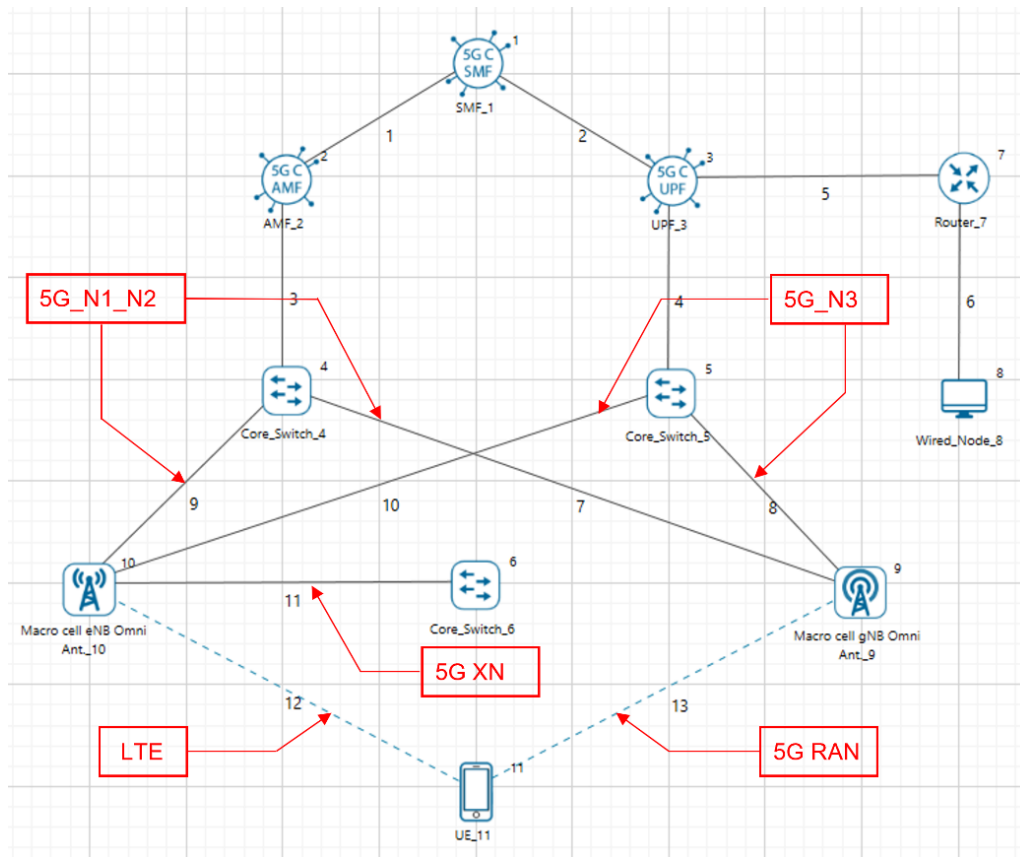


Figure 3-39: NSA deployment — Option 7a networking mode in NetSim.

3.17 NSA Packet Flow

3.17.1 Option 4

Consider the following network scenario:

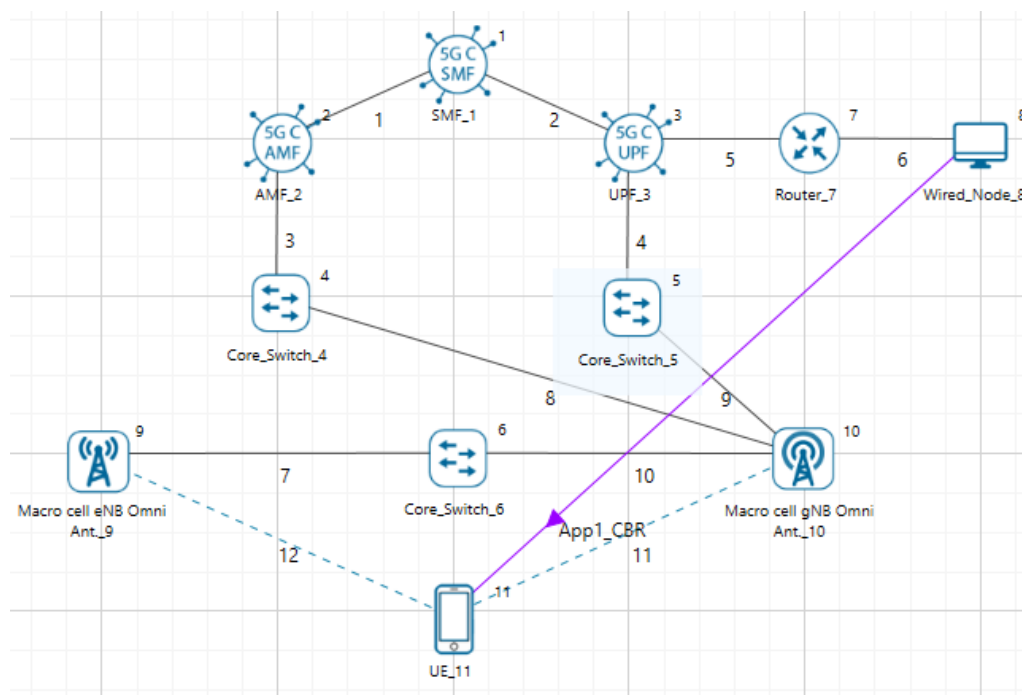


Figure 3-40: NSA deployment — Option 4 networking mode in NetSim.

All the devices have default properties, application start time was set to 1 s and scenario is simulated for 10 s.

gNB is the Master Node and eNB is the Secondary Node in Options 4 and 4a.

The packet flow in the network takes place as explained below:

- The MN, gNB will broadcast the RRC MIB packets to the UE every 80 ms and RRC SIB1 every 160 ms.
- After the transmission of the RRC MIB and RRC SIB1 packets, the gNB will send RRC SI packet to the UE.
- After reception of RRC SI packet, UE will send RRC Setup Request to the gNB.
- On receiving the RRC Setup Request packet, the gNB will acknowledge the request by transmitting RRC Setup packet to the UE.
- The UE will send back the RRC Setup Complete packet on the receipt of RRC Setup message.
- The gNB will send INITIAL UE MSG AND REGISTRATION REQUEST to the AMF via Core Switch 4 through the N1 N3 interface.
- AMF will send a CREATE SESSION REQUEST to SMF through N8 interface.
- SMF will send PFCP SESSION REQUEST to UPF through N5 interface.
- UPF will send back the response packet to SMF, i.e., PFCP SESSION RESPONSE.
- SMF will send back the response packet to AMF, i.e., CREATE SESSION RESPONSE.
- AMF will send the INITIAL CONTEXT SETUP REQUEST to the gNB via Core Switch 4.

- On the receipt of Context setup request, gNB will send INITIAL CONTEXT SETUP RESPONSE REGISTRATION COMPLETE packet to the AMF via Core Switch 4 through the N1-N3 interface.
- This marks the completion of UE registration process.
- The UE will now send the UE MEASUREMENT REPORT every 120 ms to the MN which contains the SNR information. The time interval at which the measurement report is to be transmitted can be set by the user in the eNB/gNB properties → Interface LTE/5G RAN → Data Link Layer.
- After the UE registration, the MN node will send DC SEC CELL ADDITION REQUEST to the SN via the Core Switch 6.
- On the receipt of this secondary cell addition request, the SN sends back the response packet, i.e. DC SEC CELL ADDITION RESPONSE.
- After the UE attachment procedure, the data packets will be transmitted from the server to the UE based on the splitting algorithm.
- As per the current splitting algorithm in NetSim, when application QoS is set to BE, RTPS, ERTPS, or NRTPS, the data packet will be transmitted to the UPF through the N6 interface. From the UPF, it goes to the gNB (MN) via Core Switch 5 through the N2 interface, and from the gNB, it will be transmitted to the UE through the RAN interface.
- When the application QoS is set to UGS, the data packet will flow from the UPF to the gNB via Core Switch 5. From the gNB, the packet gets transmitted to the eNB via Core Switch 6 through the XN interface, and then to the UE.

Packet flow can be analyzed using the Packet Trace log file as shown below:

A	C	D	E	F	G	H
PACKET_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	GNB-10	SWITCH-4
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	SWITCH-4	AMF-2
0	Control_Packet	CREATE_SESSION_REQUEST	AMF-2	SMF-1	AMF-2	SMF-1
0	Control_Packet	PFCP_SESSION_REQUSET	SMF-1	UPF-3	SMF-1	UPF-3
0	Control_Packet	PFCP_SESSION_RESPONSE	UPF-3	SMF-1	UPF-3	SMF-1
0	Control_Packet	CREATE_SESSION_RESPONSE	SMF-1	AMF-2	SMF-1	AMF-2
0	Control_Packet	INITIAL_CONTEXT_SETUP_REQUEST	AMF-2	GNB-10	AMF-2	SWITCH-4

Figure 3-41: Packet flow can be analyzed using the Packet Trace.

3.17.2 Option 4a

Consider the following network scenario:

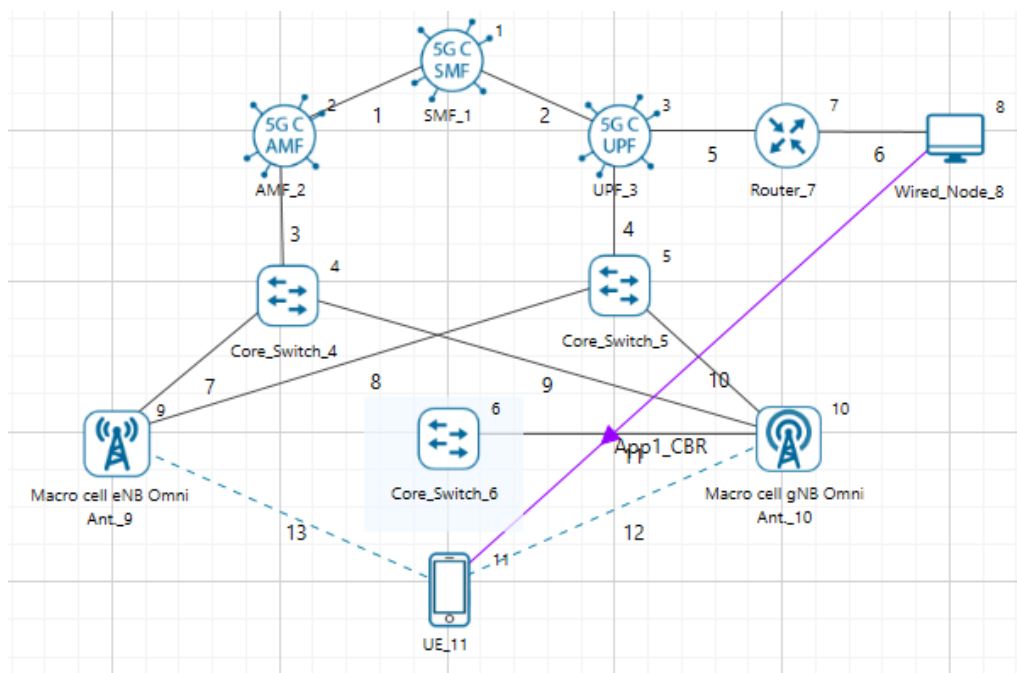


Figure 3-42: NSA deployment — Option 4a networking mode in NetSim.

All the devices have the default properties, application start time was set to 1 s and scenario is simulated for 10 s.

The packet flow in the network takes place as explained below:

- The MN, gNB will broadcast the RRC MIB packets to the UE every 80 ms and RRC SIB1 every 160 ms.
- After the transmission of the RRC MIB and RRC SIB1 packets, the gNB will send RRC SI packet to the UE.
- After reception of RRC SI packet, UE will send RRC Setup Request to the gNB.
- On receiving the RRC Setup Request packet, the gNB will acknowledge the request by transmitting RRC Setup packet to the UE.
- The UE will send back the RRC Setup Complete packet on the receipt of RRC Setup message.
- The gNB will send INITIAL UE MSG AND REGISTRATION REQUEST to the AMF via Core Switch 4 through the N1 N3 interface.
- AMF will send CREATE SESSION REQUEST to SMF through N8 interface.
- SMF will send PCFP SESSION REQUEST to UPF through N5 interface.
- UPF will send back the response packet to SMF, i.e., PCFP SESSION RESPONSE.
- SMF will send back the response packet to AMF, i.e., CREATE SESSION RESPONSE.
- AMF will send the INITIAL CONTEXT SETUP REQUEST to the gNB via Core Switch 4.

- On the receipt of Context setup request, gNB will send INITIAL CONTEXT SETUP RESPONSE REGISTRATION COMPLETE packet to the AMF via Core Switch 4 through the N1-N3 interface.
- This marks the completion of UE registration process.
- The UE will now send the UE MEASUREMENT REPORT every 120 ms to the MN which contains the SNR information. The time interval at which the measurement report is to be transmitted can be set by the user in the eNB/gNB properties → Interface LTE/5G RAN → Data Link Layer.
- After the UE registration, the MN node will send DC SEC CELL ADDITION REQUEST to the SN via the Core Switch 6.
- On the receipt of this secondary cell addition request, the SN sends back the response packet, i.e. DC SEC CELL ADDITION RESPONSE.
- After the UE attachment procedure, the data packets will be transmitted from the server to the UE based on the splitting algorithm.
- As per the current splitting algorithm in NetSim, the first data packet will be transmitted to the UPF through the N6 interface and from the UPF it goes to the MN, gNB via Core Switch 5 through the N2 interface, and from the gNB it will be transmitted to the UE through the RAN interface.
- The second data packet will flow from UPF to the gNB via Core Switch 5 and from the gNB, the packet gets transmitted to the eNB via Core Switch 6 through the XN interface and then to the UE.
- Similarly, the third packet will flow through the MN, fourth through the SN and so on.

Packet flow can be analyzed using the Packet Trace log file as shown below:

A	C	D	E	F	G	H
PACKET_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	GNB-10	SWITCH-4
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	SWITCH-4	AMF-2
0	Control_Packet	CREATE_SESSION_REQUEST	AMF-2	SMF-1	AMF-2	SMF-1
0	Control_Packet	PFCP_SESSION_REQUEST	SMF-1	UPF-3	SMF-1	UPF-3
0	Control_Packet	PFCP_SESSION_RESPONSE	UPF-3	SMF-1	UPF-3	SMF-1
0	Control_Packet	CREATE_SESSION_RESPONSE	SMF-1	AMF-2	SMF-1	AMF-2
0	Control_Packet	INITIAL_CONTEXT_SETUP_REQUEST	AMF-2	GNB-10	AMF-2	SWITCH-4

Figure 3-43: Packet flow can be analyzed using the Packet Trace.

3.17.3 Option 7

Consider the following network scenario:

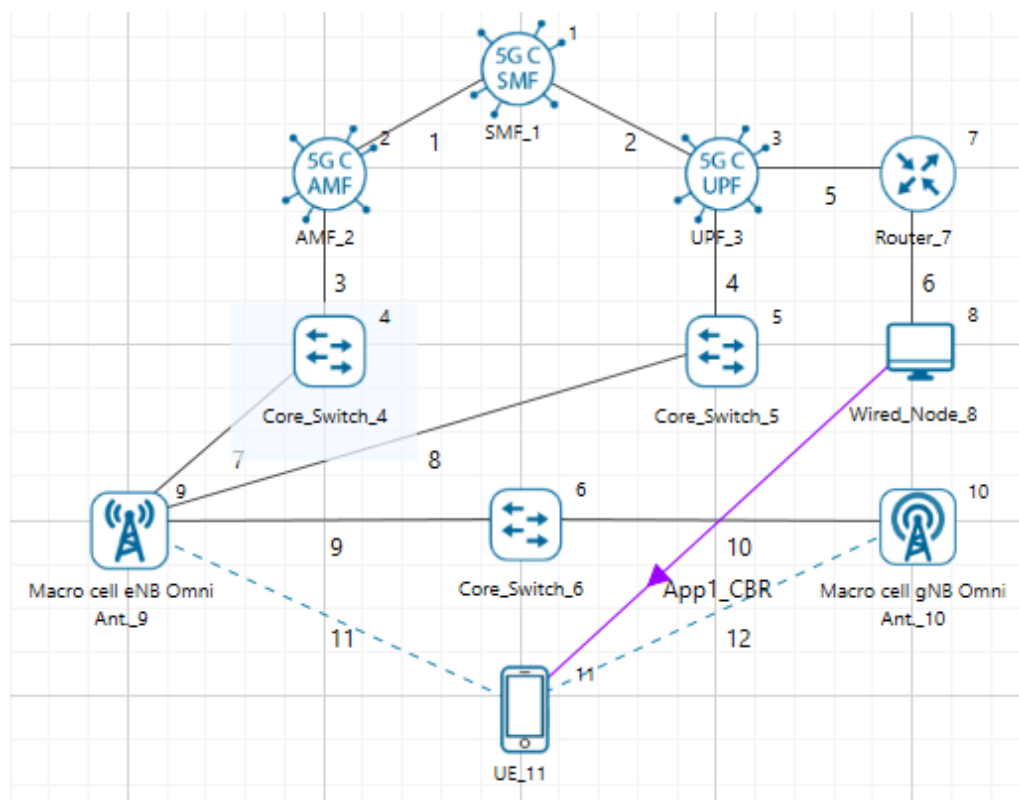


Figure 3-44: NSA deployment — Option 7 networking mode in NetSim.

All the devices have the default properties, application start time was set to 1 s and scenario is simulated for 10 s.

eNB is the MN and gNB is the SN in deployment options 7, 7a.

The packet flow in the network takes place as explained below:

- The MN, eNB will broadcast the RRC MIB packets to the UE every 40 ms and RRC SIB1 every 80 ms.
- After the transmission of the RRC MIB and RRC SIB1 packets, the eNB will send RRC SI packet to the UE.
- After reception of RRC SI packet, UE will send RRC Setup Request to the eNB.
- On receiving the RRC Setup Request packet, the eNB will acknowledge the request by transmitting RRC Setup packet to the UE.
- The UE will send back the RRC Setup Complete packet on the receipt of RRC Setup message.
- The eNB will send INITIAL UE message AND REGISTRATION REQUEST to the AMF via Core Switch 4 through the N1-N3 interface.
- AMF will send CREATE SESSION REQUEST to SMF through N8 interface.

- SMF will send PFCP SESSION REQUEST to UPF through N5 interface.
- UPF will send back the response packet to SMF, i.e., PFCP SESSION RESPONSE.
- SMF will send back the response packet to AMF, i.e., CREATE SESSION RESPONSE.
- AMF will send the INITIAL CONTEXT SETUP REQUEST to the eNB via Core Switch 4.
- On the receipt of Context setup request, eNB will send INITIAL CONTEXT SETUP RESPONSE REGISTRATION COMPLETE packet to the AMF via Core Switch 4 through the N1-N3 interface.
- This marks the completion of UE registration process.
- The UE will now send the UE MEASUREMENT REPORT every 120 ms to the MN which contains the SNR information. The time interval at which the measurement report is to be transmitted can be set by the user in the eNB/gNB properties → Interface LTE/5G RAN → Data Link Layer.
- After the UE registration, the MN node will send DC SEC CELL ADDITION REQUEST to the SN via the Core Switch 6.
- On the receipt of this secondary cell addition request, the SN sends back the response packet, i.e., DC SEC CELL ADDITION RESPONSE.
- After the UE attachment procedure, the data packets will be transmitted from the server to the UE based on the splitting algorithm.
- As per the current splitting algorithm in NetSim, when application QoS is set to BE, RTPS, ERTPS, or NRTPS, the data packet will flow from UPF to the eNB via Core Switch 5 and then from eNB to the gNB via Core Switch 6 through XN interface and then to the UE.
- When the application QoS is set to UGS, the data packet will be transmitted to the UPF through the N6 interface and from the UPF it goes to the MN, eNB via Core Switch 5 through the N2 interface, and from the eNB it will be transmitted to the UE through the LTE interface.

Packet flow can be analyzed using the Packet Trace log file as shown below:

A	C	D	E	F	G	H
PACKET_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	GNB-10	SWITCH-4
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	SWITCH-4	AMF-2
0	Control_Packet	CREATE_SESSION_REQUEST	AMF-2	SMF-1	AMF-2	SMF-1
0	Control_Packet	PFCP_SESSION_REQUEST	SMF-1	UPF-3	SMF-1	UPF-3
0	Control_Packet	PFCP_SESSION_RESPONSE	UPF-3	SMF-1	UPF-3	SMF-1
0	Control_Packet	CREATE_SESSION_RESPONSE	SMF-1	AMF-2	SMF-1	AMF-2
0	Control_Packet	INITIAL_CONTEXT_SETUP_REQUEST	AMF-2	GNB-10	AMF-2	SWITCH-4

Figure 3-45: Packet flow can be analyzed using the Packet Trace.

3.17.4 Option 7a

Consider the following network scenario:

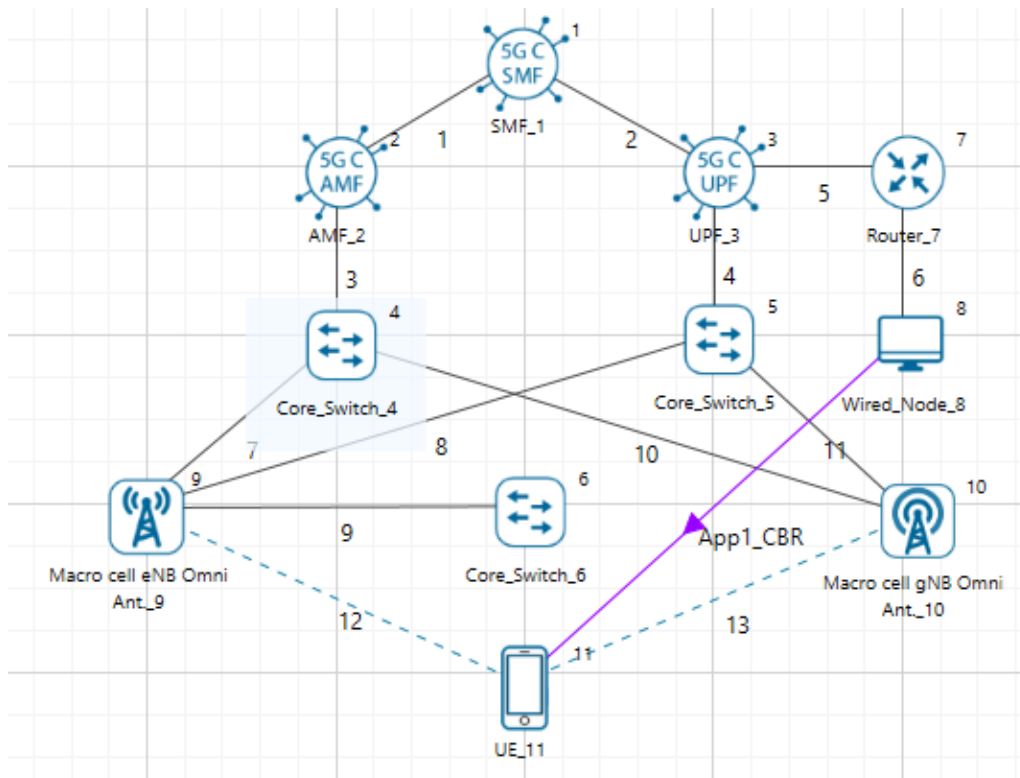


Figure 3-46: NSA deployment — Option 7a networking mode in NetSim.

All the devices have the default properties, application start time was set to 1 s and scenario is simulated for 10 s.

The packet flow in the network takes place as explained below:

- The MN, eNB will broadcast the RRC MIB packets to the UE every 40 ms and RRC SIB1 every 80 ms.
- After the transmission of the RRC MIB and RRC SIB1 packets, the eNB will send RRC SI packet to the UE.
- After reception of RRC SI packet, UE will send RRC Setup Request to the eNB.
- On receiving the RRC Setup Request packet, the eNB will acknowledge the request by transmitting RRC Setup packet to the UE.
- The UE will send back the RRC Setup Complete packet on the receipt of RRC Setup message.
- The eNB will send INITIAL UE MSG AND REGISTRATION REQUEST to the AMF via Core Switch 4 through the N1-N3 interface.
- AMF will send CREATE SESSION REQUEST to SMF through N8 interface.
- SMF will send PFCP SESSION REQUEST to UPF through N5 interface.
- UPF will send back the response packet to SMF, i.e., PFCP SESSION RESPONSE.
- SMF will send back the response packet to AMF, i.e., CREATE SESSION RESPONSE.
- AMF will send the INITIAL CONTEXT SETUP REQUEST to the eNB via Core Switch 4.
- On the receipt of Context setup request, eNB will send INITIAL CONTEXT SETUP RESPONSE REGISTRATION COMPLETE packet to the AMF via Core Switch 4 through the N1 N3 interface.
- This marks the completion of UE registration process.
- The UE will now send the UE MEASUREMENT REPORT every 120 ms to the MN which contains the SNR information. The time interval at which the measurement report is to be transmitted can be set by the user in the eNB/gNB properties → Interface LTE/5G RAN → Data Link Layer.
- DC SEC CELL ADDITION REQUEST to the SN via the Core Switch 5.
- On the receipt of this secondary cell addition request, the SN sends back the response packet, i.e. DC SEC CELL ADDITION RESPONSE.
- After the UE attachment procedure, the data packets will be transmitted from the server to the UE based on the splitting algorithm.
- As per the current splitting algorithm in NetSim, the first data packet will be transmitted to the UPF through the N6 interface and from the UPF it goes to the MN, eNB via Core Switch 5 through the N2 interface, and from the eNB it will be transmitted to the UE through the LTE interface.
- The second data packet will flow from UPF to the gNB via Core Switch 5 and then from gNB to the UE.
- Similarly, the third packet will flow through the MN, fourth through the SN and so on.

Packet flow can be analyzed using the Packet Trace log file as shown below:

A	C	D	E	F	G	H
PACKET_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SIB1	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_MIB	GNB-10	Broadcast-0	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SI	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_REQUEST	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP	GNB-10	UE-11	GNB-10	UE-11
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	RRC_SETUP_COMPLETE	UE-11	GNB-10	UE-11	GNB-10
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	GNB-10	SWITCH-4
0	Control_Packet	INITIAL_UE_MSG_AND_REGISTRATION_F	GNB-10	AMF-2	SWITCH-4	AMF-2
0	Control_Packet	CREATE_SESSION_REQUEST	AMF-2	SMF-1	AMF-2	SMF-1
0	Control_Packet	PFCP_SESSION_REQUEST	SMF-1	UPF-3	SMF-1	UPF-3
0	Control_Packet	PFCP_SESSION_RESPONSE	UPF-3	SMF-1	UPF-3	SMF-1
0	Control_Packet	CREATE_SESSION_RESPONSE	SMF-1	AMF-2	SMF-1	AMF-2
0	Control_Packet	INITIAL_CONTEXT_SETUP_REQUEST	AMF-2	GNB-10	AMF-2	SWITCH-4

Figure 3-47: Packet flow can be analyzed using the Packet Trace.

3.18 Handover

3.18.1 Use of SNR Instead of RSRP

NetSim is a packet-level simulator for simulating the performance of end-to-end applications over various packet transport technologies. NetSim can scale to simulating networks with 100s of UEs, gNBs, routers, switches, etc. In order to achieve a scalable simulation that can execute in reasonable time on desktop-level computers, many details of the physical layer techniques have been abstracted.

In keeping with the above, in NetSim’s 5G model, there are no pilots/reference/synchronization signals. The channel matrix H is assumed to be known perfectly and instantaneously at the transmitter and receiver, respectively. The only difference between the SSB and PDSCH is the beamforming gain calculations. The hand-over decision is based on the SSB-SNR measured at UE from the serving-gNB and the target-gNB. Since the noise power would typically be the same for the s-gNB and t-gNB signals, in effect the handover is based on received signal level on the SSB.

3.18.2 Handover Algorithm

The handover logic of NetSim 5G library is based on the Strongest Adjacent Cell Handover Algorithm (Ref: Handover within 3GPP LTE: Design Principles and Performance. Konstantinos Dimou. Ericsson Research). The algorithm enables each UE to connect to that gNB which provides the highest SNR. Therefore, a handover occurs the moment a better gNB — adjacent cell has offset stronger RSRP (measured as SNR in NetSim) — is detected. If there is more than one gNB with offset higher signal strength, then the gNB with the highest signal strength becomes the target gNB. If carrier aggregation and MIMO is enabled then the SNR is averaged over all carriers and over all layers.

This algorithm is similar to 38.331, 5.5.4.4 Event A3 wherein Neighbor cell's RSRP becomes Offset better than serving cell's RSRP. Note that in NetSim report-type is periodical and not eventTriggered since NetSim is a discrete event simulator and not a continuous time simulator. Therefore, the signal strength comparisons between source-gNB and all other gNBs is done every time a UE Measurement report is received at the source gNB. Note that:

- The signal strength compared is the average of all layers across all carriers.
- NetSim assumes that admission control during handover is always successful. Hence there are no handover failures on this count.

3.18.3 Ping Pong Handovers

The above algorithm is susceptible to ping-pong handovers; continuous handovers between the serving and adjacent cells on account of changes in SNR due mobility and shadow-fading. At one instant the adjacent cell's SNR could be higher and the very next it could be the original serving cell's RSRP, and so on. To solve this problem the algorithm uses:

- Hysteresis (Hand-over-margin, HOM) which adds a SNR threshold (Adjacent cell SNR – Serving cell SNR > Hand-over-margin or hysteresis), and
- Time-to-trigger (TTT) or hysteresis which adds a time threshold.

This HOM is part of NetSim implementation while TTT can be implemented as a custom project in NetSim.

Users may also be interested in measuring Ping pong handovers. For this, users should log the gNB to which the UE is attached. Users can then simulate scenarios where UE would attach to gNB1 then to gNB2, back to gNB1, again to gNB2 ... and so on, within a short time frame. Ping pong handovers can then be calculated per some (user-defined) criteria. Such scenarios can be simulated by enabling shadow-fading and fading-and-beamforming (fast fading). These phenomena would cause SINR to fluctuate over short distances and even over time at the same location.

Custom coding is required to log the “attached gNB” for each UE. NetSim radio measurements workspace (available in file-exchange/GitHub) can serve as the base for this development effort.

3.18.4 Packet Flow During Handover

NetSim implements those aspects of the 5G handover procedure that directly affects network performance. Other aspects of the handover, for example security, are either not implemented or abstracted since they do not affect network performance. Handovers can occur in RRC CONNECTED (during active Tx or Rx) or in RRC IDLE states (no Tx or Rx).

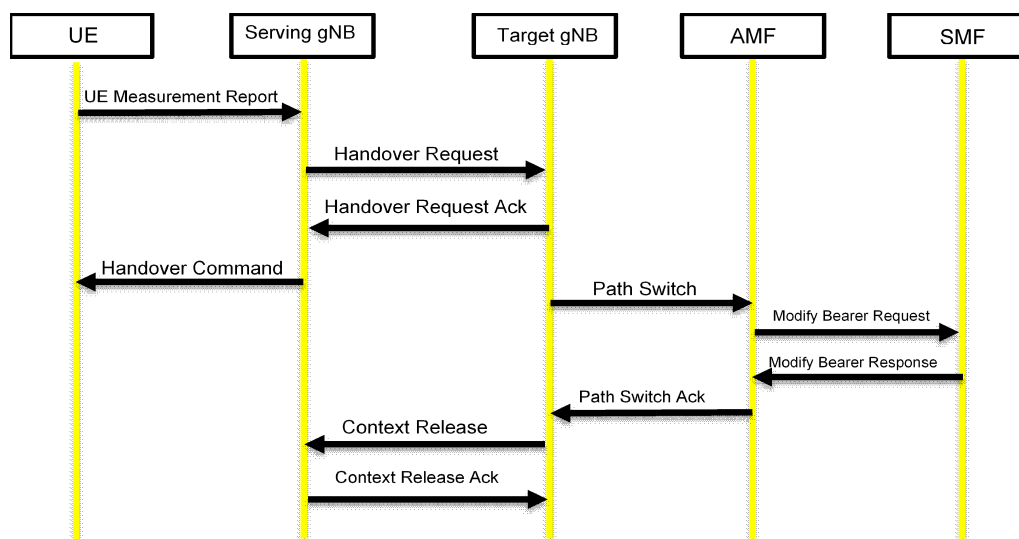


Figure 3-48: Control packet flow in the 5G handover process.

The packet flow (which can be observed from the packet trace) is as follows:

- Once the UE connection and association procedures are completed, the UE sends a UE MEASUREMENT REPORT every UE Measurement Report Interval to the connected gNB. UE Measurement Report Interval is by default set as 5 ms in NetSim and is a user configurable parameter.
- At some time, neighbor cell RSRP (measured as SNR in NetSim) becomes offset higher than serving cell RSRP.
- Immediately after receiving the next UE MEASUREMENT REPORT, source gNB (also sometimes called serving gNB) sends a HANDOVER REQUEST to the target (neighbor) gNB. This packet is sent through the Xn interface via a 5G-Core Switch. All the links in the 5G Core are by default 10 Gbps.
- The Target gNB sends back HANDOVER REQUEST ACK to serving gNB, again via the Xn interface. If the HANDOVER REQUEST or the HANDOVER REQUEST ACK are errored then if the target gNB signal strength continues to be offset higher than source gNB signal strength, step 1 is repeated at the next UE MEASUREMENT REPORT.
- After receiving HANDOVER REQUEST ACK the serving gNB sends the HANDOVER COMMAND to UE.
- Then the HANDOVER COMMAND packet is sent by source gNB to the UE.
- The target gNB then sends RRC Reconfiguration message to UE. If UE is in RRC Connected mode then the target gNB is assigned as new source gNB for the UE.
- The target gNB will send the PATH SWITCH packet to the AMF through the N1-N2 interface (via a core switch).
- When the AMF receives the PATH SWITCH packet, it sends MODIFY BEARER REQUEST to the SMF. This is over the N11 interface.
- The SMF on receiving the MODIFY BEARER REQUEST sends back the MODIFY BEARER RESPONSE to the AMF.

- On receiving the MODIFY BEARER RESPONSE from the SMF, AMF acknowledges the Path switch request sent by the target gNB by sending the PATH SWITCH ACK packet back to the target gNB. This is over the N1-N2 interface, via a 5GC switch.
- The target gNB then sends a UE CONTEXT RELEASE to source gNB, and the source gNB sends back UE CONTEXT RELEASE ACK to target gNB. The context release request and ack packets are sent between the source and target gNB via the Xn interface.
- Then RRC Reconfiguration takes place between target gNB and UE.
- UE starts sending the UE MEASUREMENT REPORT to the new source gNB.

PACKET_ID	SEGMENT_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID	NW_LAYER_ARRIVAL_TIME(US)	MAC_LAYER_ARRIVAL_TIME(US)	PHY_LAYER_ARRIVAL_TIME(US)
0	N/A	Control_Packet	RRC_MIB	GNB-7	Broadcast-0	GNB-7	UE-10	N/A		18560000
0	N/A	Control_Packet	RRC_SIB1	GNB-8	Broadcast-0	GNB-8	UE-9	N/A		18560000
0	N/A	Control_Packet	RRC_SIB1	GNB-8	Broadcast-0	GNB-8	UE-10	N/A		18560000
0	N/A	Control_Packet	RRC_MIB	GNB-8	Broadcast-0	GNB-8	UE-9	N/A		18560000
0	N/A	Control_Packet	RRC_MIB	GNB-8	Broadcast-0	GNB-8	UE-10	N/A		18560000
0	N/A	Control_Packet	UE_MEASUREMENT_REPORT	UE-9	GNB-7	UE-9	GNB-7	N/A		18600000
0	N/A	Control_Packet	UE_MEASUREMENT_REPORT	UE-10	GNB-8	UE-10	GNB-8	N/A		18600000
0	N/A	Control_Packet	HANDOVER_REQUEST	GNB-7	GNB-8	GNB-7	SWITCH-6	18600999		18600999
0	N/A	Control_Packet	HANDOVER_REQUEST	GNB-7	GNB-8	SWITCH-6	GNB-8	18600999		18600999
0	N/A	Control_Packet	HANDOVER_REQUEST_ACK	GNB-8	GNB-7	GNB-8	SWITCH-6	18601027.88		18601027.88
0	N/A	Control_Packet	HANDOVER_REQUEST_ACK	GNB-8	GNB-7	SWITCH-6	GNB-7	18601027.88		18601027.88
0	N/A	Control_Packet	HANDOVER_COMMAND	GNB-7	UE-9	GNB-7	UE-9	N/A		18601056.76
0	0	Control_Packet	PATH_SWITCH	GNB-8	AMF-3	GNB-8	SWITCH-5	18602999		18602999
0	0	Control_Packet	PATH_SWITCH	GNB-8	AMF-3	SWITCH-5	AMF-3	18602999		18602999
0	0	Control_Packet	MODIFY_BEARER_REQUEST	AMF-3	SMF-2	AMF-3	SMF-2	18603035.24		18603035.24
0	0	Control_Packet	MODIFY_BEARER_RESPONSE	SMF-2	AMF-3	SMF-2	AMF-3	18603053.36		18603053.36
0	0	Control_Packet	PATH_SWITCH_ACK	AMF-3	GNB-8	AMF-3	SWITCH-5	18603071.48		18603071.48
0	0	Control_Packet	PATH_SWITCH_ACK	AMF-3	GNB-8	SWITCH-5	GNB-8	18603071.48		18603071.48
0	N/A	Control_Packet	UE_CONTEXT_RELEASE	GNB-8	GNB-7	GNB-8	SWITCH-6	18603111.88		18603111.88
0	N/A	Control_Packet	UE_CONTEXT_RELEASE	GNB-8	GNB-7	SWITCH-6	GNB-7	18603111.88		18603111.88
0	N/A	Control_Packet	UE_CONTEXT_RELEASE_ACK	GNB-7	GNB-8	GNB-7	SWITCH-6	18603140.76		18603140.76
0	N/A	Control_Packet	UE_CONTEXT_RELEASE_ACK	GNB-7	GNB-8	SWITCH-6	GNB-8	18603140.76		18603140.76
0	N/A	Control_Packet	RRC_RECONFIGURATION	GNB-8	UE-9	GNB-8	UE-9	N/A		18602999
0	N/A	Control_Packet	UE_MEASUREMENT_REPORT	UE-10	GNB-8	UE-10	GNB-8	N/A		18720000
0	N/A	Control_Packet	UE_MEASUREMENT_REPORT	UE-9	GNB-8	UE-9	GNB-8	N/A		18720000

Figure 3-49: Screenshot of NetSim packet trace file showing the control packets involved in handover. Some columns have been hidden before the last column.

3.18.5 Handover Interruption Time

During this period the UE can neither transmit or receive user data. Handover Interruption time can be configured in the Data Link layer properties of the gNB as shown below.

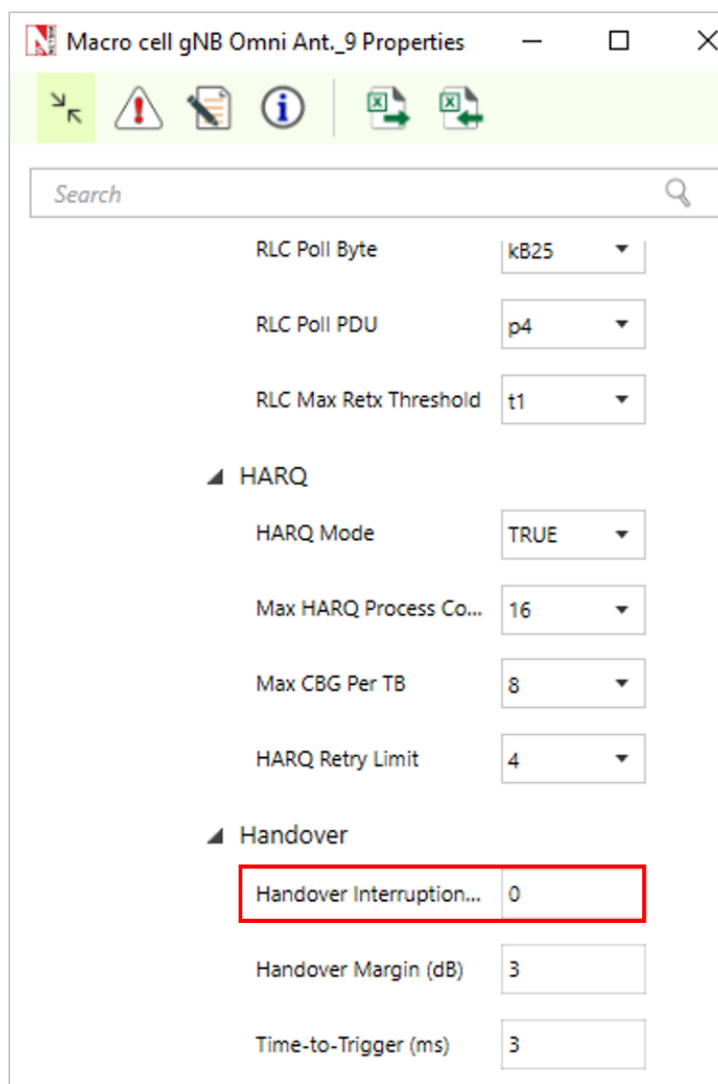


Figure 3-50: Screenshot showing handover interruption time in gNB properties.

The value can range from 0.0 to 500.0 milliseconds. The handover process in NetSim is based on event A3 i.e., the target signal strength is offset (3 dB) higher than the source signal strength. Handover interruption time (HIT) is added at the time of handover command is delivered to the UE. During this time there is no data plane traffic flow to the UE from the source/target. The time at which the path switch is sent from the target cell to the AMF will get delayed by the Handover interruption time. This can be observed in the packet trace log file.

3.18.6 Time-to-Trigger

Cellular networks can suffer from Ping-pong (or rapid) handovers. In such handovers one successful handover is followed by a handover back to the original cell within short rapid handover time, T_{RH} , e.g., within 3 seconds. Both handovers could potentially have been saved. Equivalently, if a successful handover is followed by another successful handover to a third cell within T_{RH} , one could argue a single handover directly to this third cell would have served the purpose.

In the current version of NetSim, A3 based handover event is triggered the instant received SNR (on the downlink in the SSB) from target gNB, $SNR_{UE(SSB)}^{t-gNB}$ is offset, Δ , higher than received signal strength (on the downlink in the SSB) from serving gNB $SNR_{UE(SSB)}^{s-gNB}$. This offset, Δ ,

is also known as the Hand Over Margin (HOM). Thus, A3 event is triggered when, in dB scale,

$$SNR_{UE(SSB)}^{t\text{-gNB}}(t) - SNR_{UE(SSB)}^{s\text{-gNB}}(t) \geq \Delta \quad (1) \quad (68)$$

where t is a discrete time instant.

Given the way NetSim measures power, SNR is used to account for differences in the bandwidth between serving and target gNBs. If their bandwidths are equal, then, in dB scale

$$SNR_{UE(SSB)}^{t\text{-gNB}}(t) - SNR_{UE(SSB)}^{s\text{-gNB}}(t) = RSRP_{UE(SSB)}^{t\text{-gNB}}(t) - RSRP_{UE(SSB)}^{s\text{-gNB}}(t) \quad (69)$$

In NetSim, SSB power between all UE-gNB pairs are computed.

- when a measurement report is sent, which is every measurement interval T_{MI} (default 5 ms), and
- at every mobility event i.e., whenever a UE moves. Recall here that in NetSim mobility is discretised over instants of time and movement is not continuous over time i.e., a UE moves to (x_1, y_1) at time t_1 , remains at (x_1, y_1) till just before time t_2 , and then instantly moves to (x_2, y_2) at t_2 .

Hence, the A3 trigger occurs at the instant power levels at t-gNB and s-gNB satisfies (68). This could occur at a measurement report event or at a mobility event.

By definition of time to trigger, T_{TTT} , a handover event should only be triggered if (68) holds true for a duration equal to T_{TTT} .

Since NetSim is a discrete event simulator its internal virtual clock progresses (virtual) time at events. Therefore, NetSim cannot check for (68) continuously over time. The test of whether (68) would continue to hold true can only be carried out at subsequent measurement report events and mobility events.

TTT condition will be successfully met only if powers from t-gNB and s-gNB meet condition (68) at all mobility and measurement events within the TTT period. If condition (68) fails to hold at any event during TTT, then TTT condition will have failed. The A3 trigger will be removed.

NetSim does not (recursively) average, or filter, $SNR_{UE(SSB)}^{t\text{-gNB}}$, or $SNR_{UE(SSB)}^{s\text{-gNB}}$ within the T_{TTT} window and (68) is evaluated on instantaneous powers at all events.

NetSim Time-to-trigger variable

- is global scope; it remains the constant across the network, and
- can be set by the user in the range [0 ms, 5120 ms] as defined in the standards.

Algorithm

- When A3 condition is met AddTrigger event is added.
- Check (68) at all measurement report events and mobility events.
- If at any event (68) doesn't hold remove the AddTrigger event.

- Else, if (68) holds at all events within the TTT, initiate H/O trigger upon expiry of TTT interval.

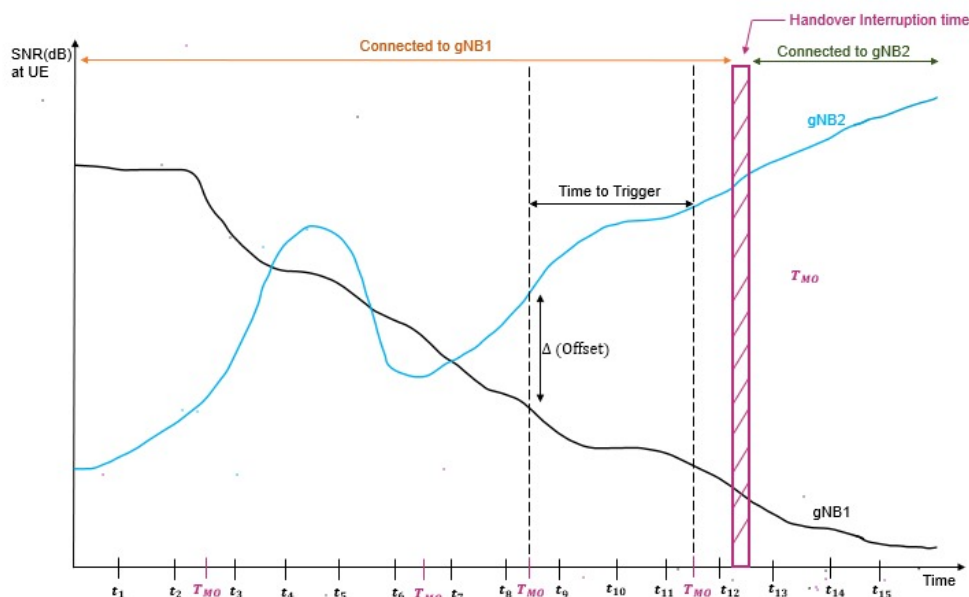


Figure 3-51: We see the SNR variation with time measured by UE from gNB1 (black) and gNB2 (blue). Time to trigger starts the instant $SNR_{UE}^{gNB2} - SNR_{UE}^{gNB1} > \Delta$. Once this condition holds for a duration equal to time-to-trigger, handover is initiated. Users can also configure a handover interruption time during which the UE is not connected to either gNB. Post this the UE gets associated with gNB2.

3.18.6.1 Assumptions and Limitations

- Time to trigger (T_{TTT}) will be implemented for 5G Standalone (SA) mode. NetSim assumes non failure of:
 - Measurement reports
 - Handover messages
- Handovers are always successful. There are no handover failures on account of admission control at t-gNB.
- In NetSim, UEs can be handed over to gNBs of different frequencies as long as (68) is met. There is no difference in handover functionality when the t-gNB and s-gNB operate in (i) the same frequency (say s-gNB and t-gNB in C-band) and (ii) different frequencies (say s-gNB in C-band and t-gNB in mmWave).
- Time-to-trigger implementation is based on Rel 15. Enhancements added in Rel 16 namely (i) Dual active protocol stack (DAPS) and (ii) Conditional handovers, are not yet supported in NetSim.

3.18.6.2 Algorithm for Implementation in NetSim

- Each gNB maintains a matrix named as the Conditional HO TTT Matrix.
- The rows are the associated UEs, and the columns are all other gNBs in the scenario.
- Whenever a UE_i associates with a gNB:

- Initialize all the matrix entries for all j (i.e., for all gNBs) for the given row i as follows:
 - * T_{trigger}^j to -1 for all j // #define TTT_not_set = -1
- Whenever a measurement report from an associated UE_i is received:
 - If the condition $(SNR_{UE(SSB)}^{gNB} - SNR_{UE(SSB)}^{s-gNB} > \Delta)$ is met:
 - * If matrix entry T_{trigger}^j is currently -1 , then update $T_{\text{trigger}}^j = T_{\text{current}}$, where T_{current} is current simulation time.
 - * Else (matrix entry is not -1): If $T_{\text{current}} - T_{\text{trigger}}^j \geq TTT$, initiate handover procedure.
 - Else: If the matrix entry T_{trigger}^j is not -1 , set it equal to -1 .
- Whenever a UE_i disassociates with a gNB, delete the row i .

3.18.6.3 Configuring Time-to-Trigger

The desired TTT value in milliseconds can be configured in the Data Link layer properties of the gNB as shown below.

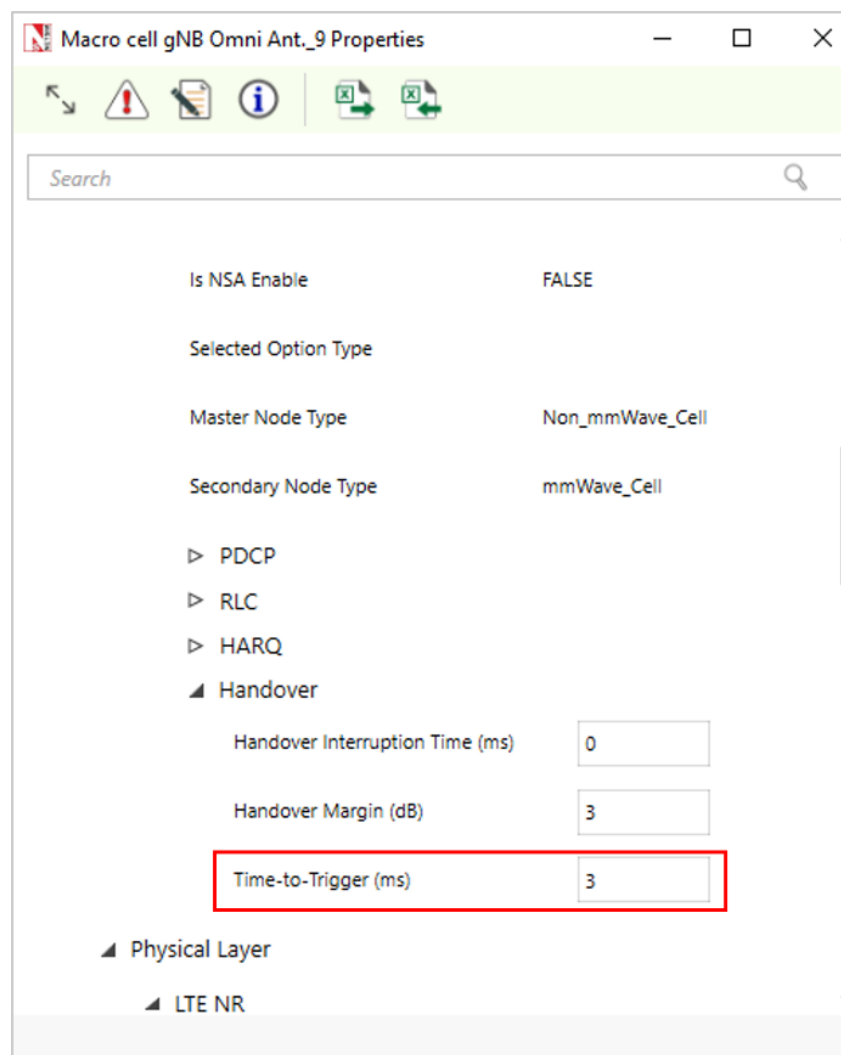


Figure 3-52: Time-to-Trigger configuration in gNB/eNB Data Link layer properties.

This value is common for all gNBs in a network i.e., TTT parameters are global in scope. Setting TTT to 0 is equivalent to disabling Time-to-Trigger.

3.18.6.4 Enabling the LTENR Handover Log

The LTENR Handover log can be enabled by clicking on configure reports in top ribbon > Plots > Select LTENR Handover log under Network Logs as shown below.

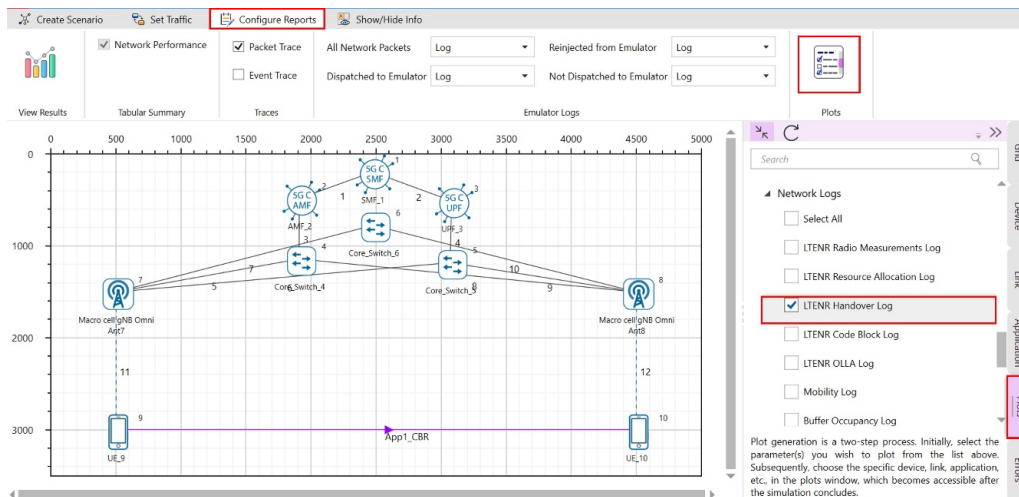


Figure 3-53: Enabling the LTENR Handover log.

Upon running simulations with this log enabled, a LTENR Handover Log.csv file is written and can be accessed from the results dashboard as shown below:


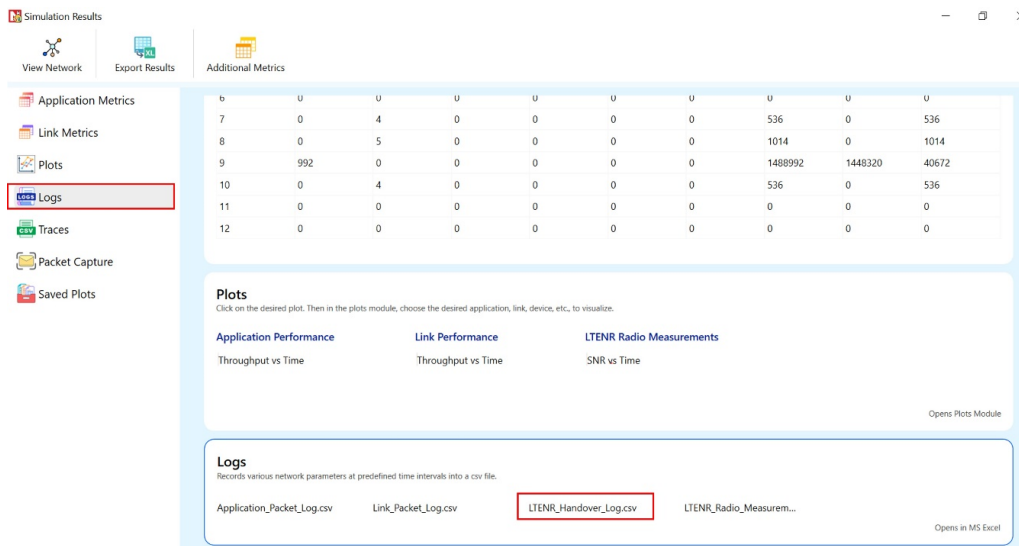


Figure 3-54: Accessing Handover log from NetSim results dashboard.

The log file consists of timestamps in Milliseconds, associated UE name, the serving cell name, target cell name, serving SSB SNR, Target SSB SNR and the Remarks.

Entries are written to the file when a handover condition is met. For example, when running the 5G-Handover scenario with the Time-To-Trigger (TTT) set to 2560 milliseconds (or 2.56 seconds) and mobility configured such that the User Equipment (UE) moves toward the target gNB and then returns to the serving gNB, handovers typically occur in a ping-pong manner.

The following entries are logged in the Handover log:

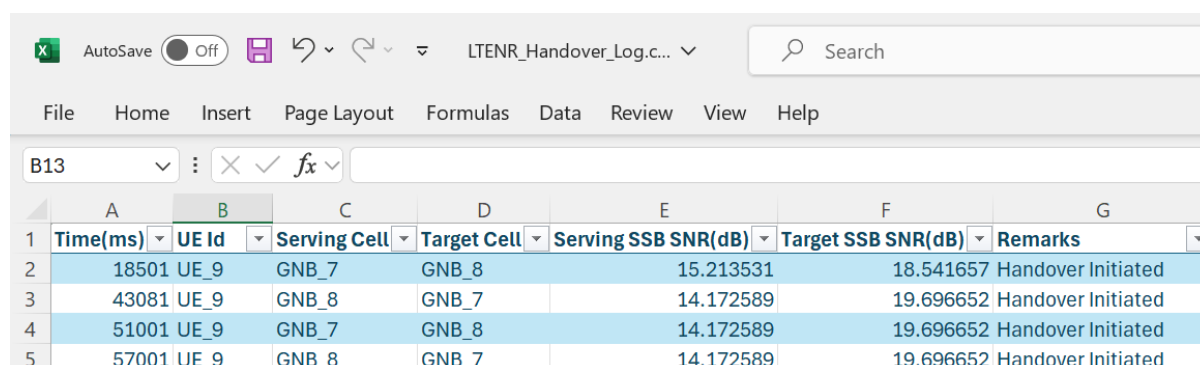

	A	B	C	D	E	F	G
	Time(ms)	UE Id	Serving Cell	Target Cell	Serving SSB SNR(dB)	Target SSB SNR(dB)	Remarks
1	18501	UE_9	GNB_7	GNB_8	15.213531	18.541657	Handover Initiated
2	43081	UE_9	GNB_8	GNB_7	14.172589	19.696652	Handover Initiated
3	51001	UE_9	GNB_7	GNB_8	14.172589	19.696652	Handover Initiated
4	57001	UE_9	GNB_8	GNB_7	14.172589	19.696652	Handover Initiated

Figure 3-55: TTT log showing entries with handover conditions met at different time intervals.

- From the log file we can see that initially the UE is associated with gNB7. Around 18.5 seconds, the handover is initiated when $SNR_{UE(SSB)}^{gNB} - SNR_{UE(SSB)}^{s-gNB} > \Delta$ (3 dB).
- Since UE 9 is configured with mobility, it moves back to gNB 7 from gNB 8.
- Again, at 43.8 seconds, the handover condition is met when the SNR from gNB 7 is greater than from gNB 8 as UE 9 moves towards gNB 7.
- Similarly, you can observe that the handover conditions are met again at 51 and 57 seconds.

3.18.7 Buffer Transfer and Timers

During handover buffer is transferred from s-gNB to t-gNB, and active timers such as t-poll retransmit are stopped in the s-gNB.

3.19 Network Slicing

NetSim supports network slicing in 5G from v14.1 onwards.

3.19.1 RAN Slicing

RAN slicing in 5G involves dividing the Radio Access Network into multiple virtual slices, each tailored to serve specific service requirements. The RAN slicing implementation in NetSim is explained below:

- **Scope:** Network slicing in NetSim focuses solely on RAN slicing and does not cover Core and Transport slicing.
- **Identification:** Each network slice is identified by a single Network Slice Selection Assistance Information (S-NSSAI) or a Slice ID, consisting of a Slice Service Type (SST) and a Slice Differentiator (SD).
- **Slice Type and Differentiator:** The Slice Type (SST) signifies the expected behaviour of the network slice in terms of features and services. The Slice Differentiator (SD) distinguishes multiple instances of the same slice type.

- **Resource Sharing Options:** Two resource sharing options are defined: (a) Static slicing (or hard slicing) and (b) Dynamic slicing (or soft slicing).
- **Static Slicing:** Supported Slice Types are eMBB, URLLC, MIoT, and V2X. Slices are allocated a fixed percentage of resources.
- **Dynamic Slicing:** The supported Slice Type is eMBB. A proprietary algorithm uses PFS (Proportional Fair Scheduling) with Rate Guarantee employing stochastic online learning. The dynamic slicing algorithm is derived from Non-linear Optimization Theory.

3.19.2 Slice Configuration

Network Slicing can be configured in the gNB RAN interface, Datalink layer properties. Depending on the Scheduling Type selection the available Resource Allocation Techniques to choose from will vary.

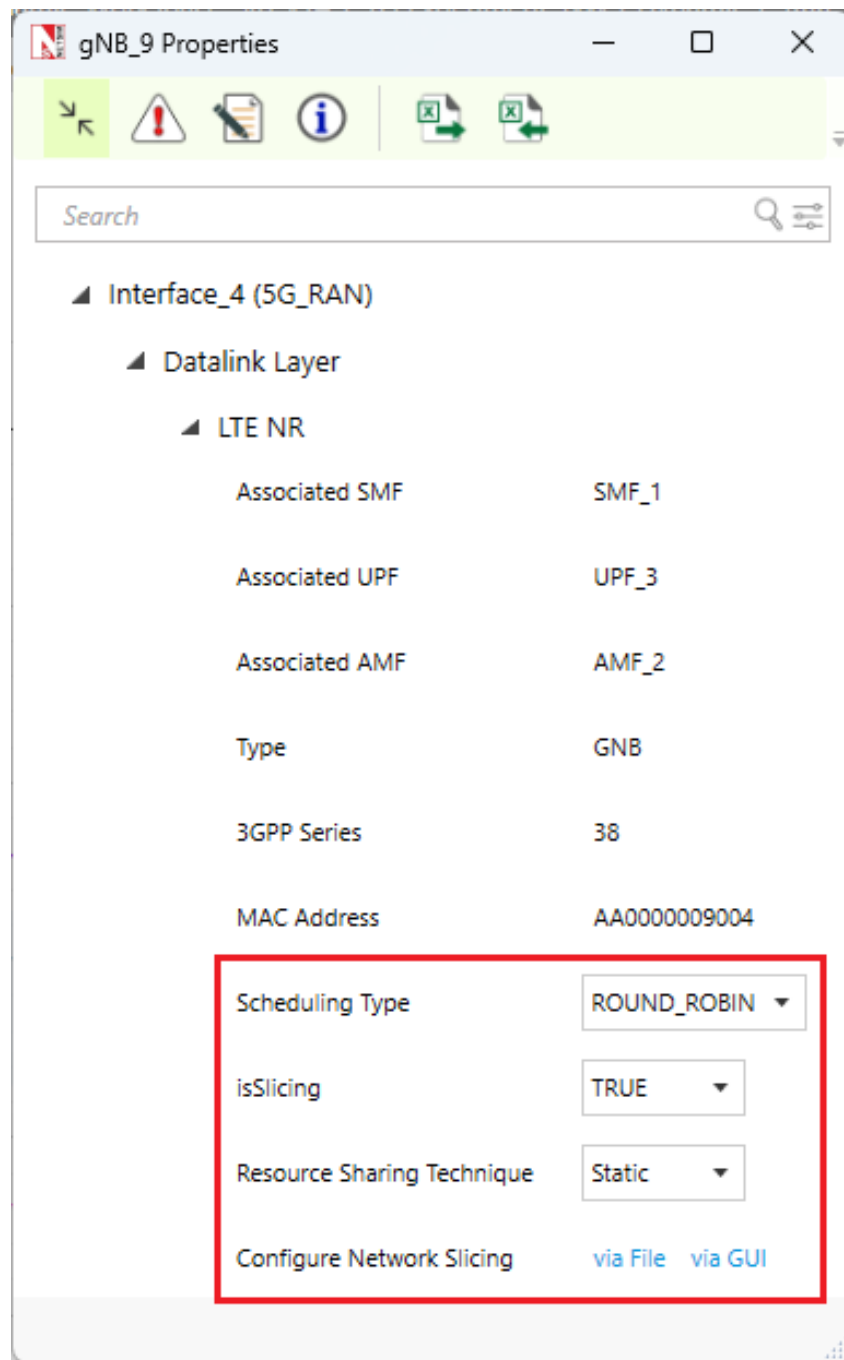


Figure 3-56: *gNB RAN Interface Datalink Layer properties with slice configuration options.*

The following table contains a list of scheduling types supported in the gNBs and the corresponding resource allocation techniques that can be selected.


Table 3-36: Resource Allocation Techniques based on the Scheduling type selection.

Scheduling Type	Network Slicing – Resource Allocation Technique
Round Robin	Static
Max Throughput	Static
Proportional Fair	Static
PFS with rate guarantee	Dynamic

Network Slicing can be configured in NetSim using the Slice Configurator GUI or via a CSV input file. When the configuration is done via the GUI, a CSV file will be automatically generated. Network Slicing is global to all the gNBs in a 5G network and hence if enabled and configured in a gNB, will be applicable to all the gNBs.

3.19.2.1 Slice Configurator GUI

The slice configurator allows users to select the Number of slices initially, and based on the Resource Sharing Technique selected, the slice table gets populated automatically, where users can configure the properties and map UEs to different slices.

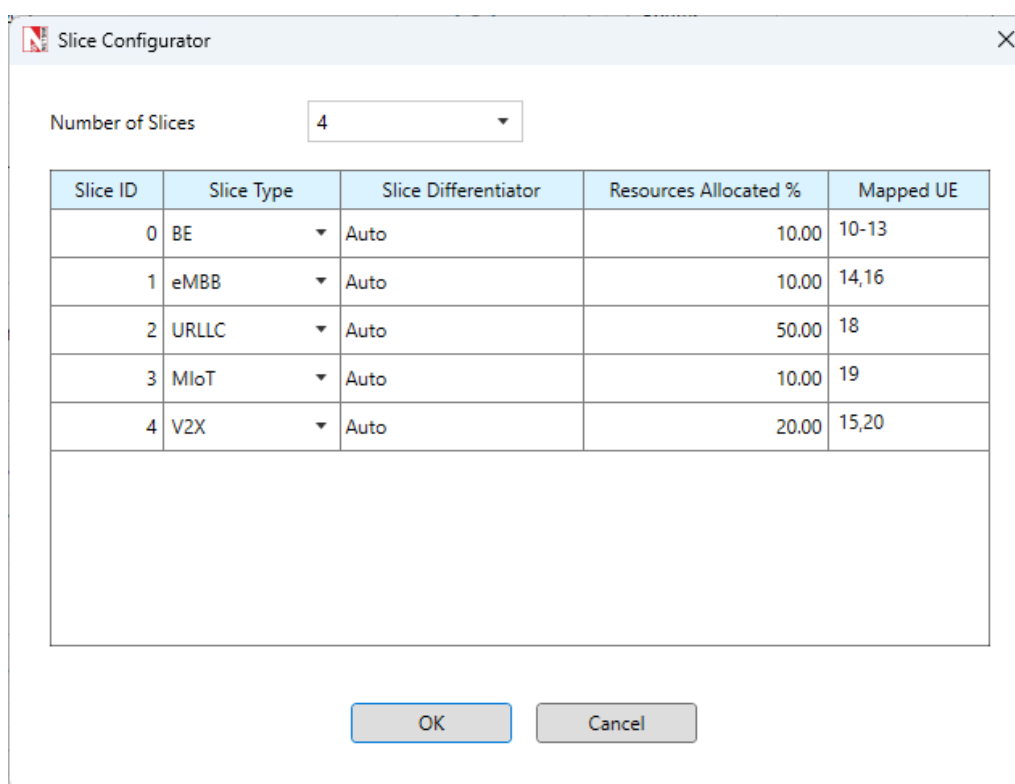**Figure 3-57:** Static Network Slicing Configurator GUI.

Static Slice Configurator:

- Slice ID 0 is the default slice with Slice Type BE.
- For all rows, the parameters, Slice ID and Slice Differentiator are non-editable.
- Slice Type can be modified and set to one of the following values:

- BE
- eMBB
- URLLC
- MIoT
- V2X
- The resource allocation column should be configured such that the sum of resource allocation percentage is exactly equal to 100.

Slice ID	Slice Type	Slice Differentiator	UpLink Resource Share		DownLink Resource Share		Mapped UE(s)
			Min (%)	Max (%)	Min (%)	Max (%)	
0	BE	Auto	0.00	100.00	0.00	100.00	10-11,15
1	eMBB	Auto	0.00	100.00	10.00	20.00	12-13
2	eMBB	Auto	0.00	100.00	20.00	70.00	14,16
3	eMBB	Auto	0.00	100.00	40.00	90.00	17-18
4	eMBB	Auto	0.00	100.00	50.00	100.00	19-20

Figure 3-58: *Dynamic Network Slicing Configurator GUI.*

Dynamic Slice Configurator:

- Slice ID 0 is the default slice with Slice Type BE. All the other slices are eMBB.
- For all rows, the parameters, Slice ID and Slice Differentiator are non-editable.
- Min and Max percentage of resource share can be specified individually for DL and UL in Mbps, for each slice.

Slice – UE Mapping:

- Mapped UE column accepts UE IDs as input which can be:
 - Comma separated (‘,’)
 - Range: specified by starting ID and ending ID separated by ‘-’. For e.g.: 10-20 includes all UEs starting from ID 10 to 20.
 - This column can also be left blank without any UE assigned.

Network Slicing CSV input file:

- o Based on the configuration done in the slicing configurator GUI, a networkslicing.csv file is automatically generated as shown below:

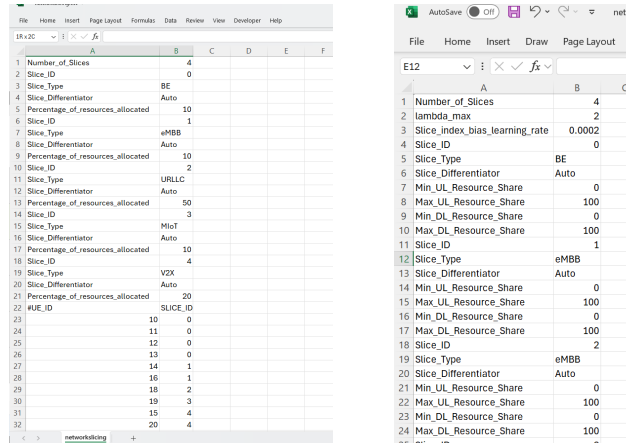


Figure 3-59: Left: Network Slicing CSV log showing the Static slice configuration. Right: Network Slicing CSV log showing the Dynamic slice configuration.

- o The UE to Slice ID mapping is written individually for each UE in the CSV file which is read and used for simulations.

3.19.3 Recording Slice-Based Resource Allocation

The LTENR Resource Allocation log can be enabled by clicking on configure reports in top ribbon > Plots > Select LTENR Resource Allocation log as shown below. Refer to section 3.22 for further information.

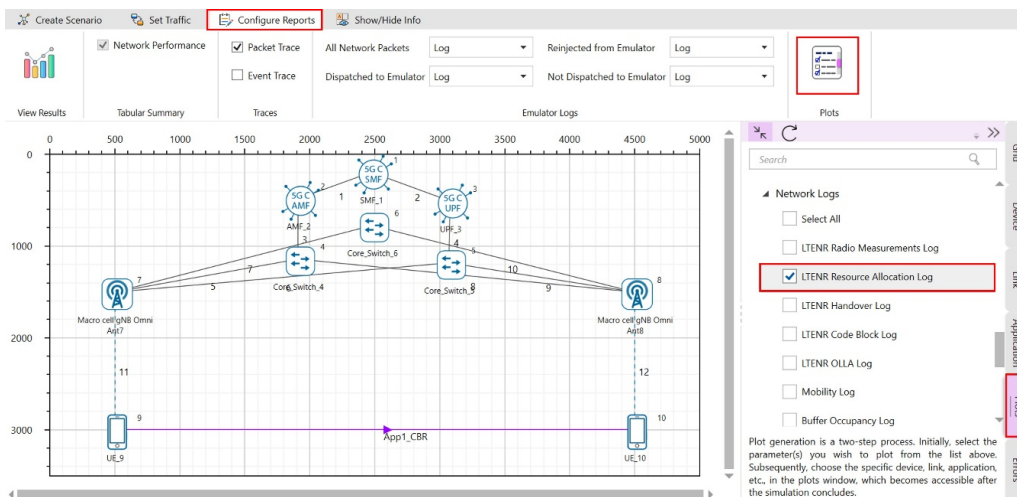


Figure 3-60: Enabling LTENR Resource Allocation log.

When network slicing is enabled, the log will include additional columns such as the Slice ID, Slice Type and Slice Differentiator.

Slot Start Time(ms)	Slot End Time(ms)	UE ID	BitsPerPRB	BufferFill(B)	Allocated PRBs	Rank	EWMA MAC Throughput (Mbps)	Index Bias	Slice ID	Slice Type	Slice Differentiator
166	166.5	12	528	49750	234	528	1	0.001175	2	EMBB	2
166	166.5	10	528	49750	0	528	1	0	0	BE	1
166.5	167	12	528	84038	234	528.0924	0.123552	0.001175	2	EMBB	2
166.5	167	10	528	99500	0	528	1	0	0	BE	1
167	167.5	12	528	116326	234	4273.597	0.247042	0.000349	2	EMBB	2
167	167.5	10	528	149250	0	528	1	0	0	BE	1
168	168.5	12	528	202364	234	2137.471	0.370471	0.000522	2	EMBB	2
168	168.5	10	528	248750	0	528	1	0	0	BE	1
168.5	169	12	528	236652	234	1425.489	0.493837	0.000694	2	EMBB	2
168.5	169	10	528	298500	0	528	1	0	0	BE	1
169	169.5	12	528	270940	234	1069.544	0.617143	0.000866	2	EMBB	2
169	169.5	10	528	348250	0	528	1	0	0	BE	1
169.5	170	12	528	305228	234	856.0134	0.740386	0.001038	2	EMBB	2
169.5	170	10	528	398000	0	528	1	0	0	BE	1
170.5	171	12	528	389266	234	713.6894	0.863568	0.001208	2	EMBB	2
170.5	171	10	528	497500	0	528	1	0	0	BE	1
171	171.5	12	528	423554	234	612.055	0.986688	0.001378	2	EMBB	2
171	171.5	10	528	547250	0	528	1	0	0	BE	1
171.5	172	12	528	457842	234	535.8514	1.109747	0.001548	2	EMBB	2
171.5	172	10	528	597000	0	528	1	0	0	BE	1
172	172.5	10	528	646750	234	528	1	0	0	BE	1
172	172.5	12	528	492130	0	476.6015	1.232744	0.001548	2	EMBB	2
173	173.5	10	528	730788	234	528	0.123552	0	0	BE	1
173	173.5	12	528	591630	0	429.1301	1.232127	0.001548	2	EMBB	2
173.5	174	10	528	765076	234	4273.504	0.247042	0	0	BE	1

Figure 3-61: LTE NR Radio Resource Allocation log with entries associated with Network Slicing.

This log can be used to identify the resource allocation on a per slice basis based on the network configuration. Based on the resource allocation percentage of a slice, a fraction of PRBs will be available to be allocated to the UEs belonging to that slice. The PRBs allocated to the UEs can be found in the Allocated PRBs column.

Consider the following network with 1 gNB and 2 UEs downloading data from a server.

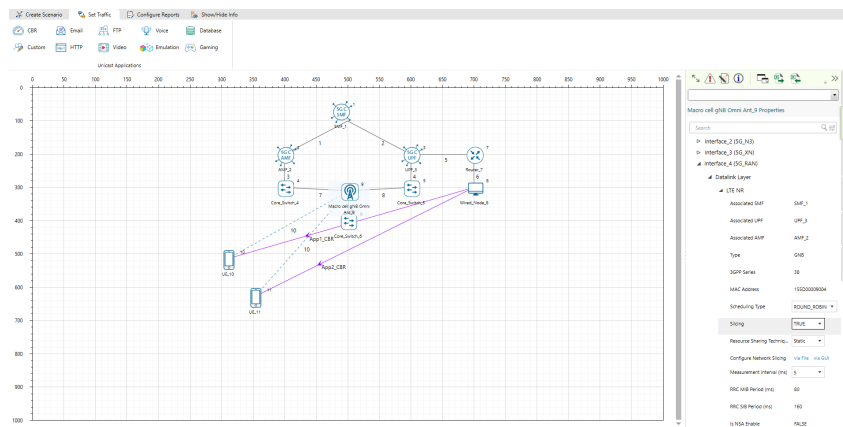


Figure 3-62: 5G network configuration with a gNB and 2 UEs performing download from a server.

Network Slicing is enabled and configured such that UE 10 gets 55% of the resources and UE 11 gets 45% of the resources as shown below:

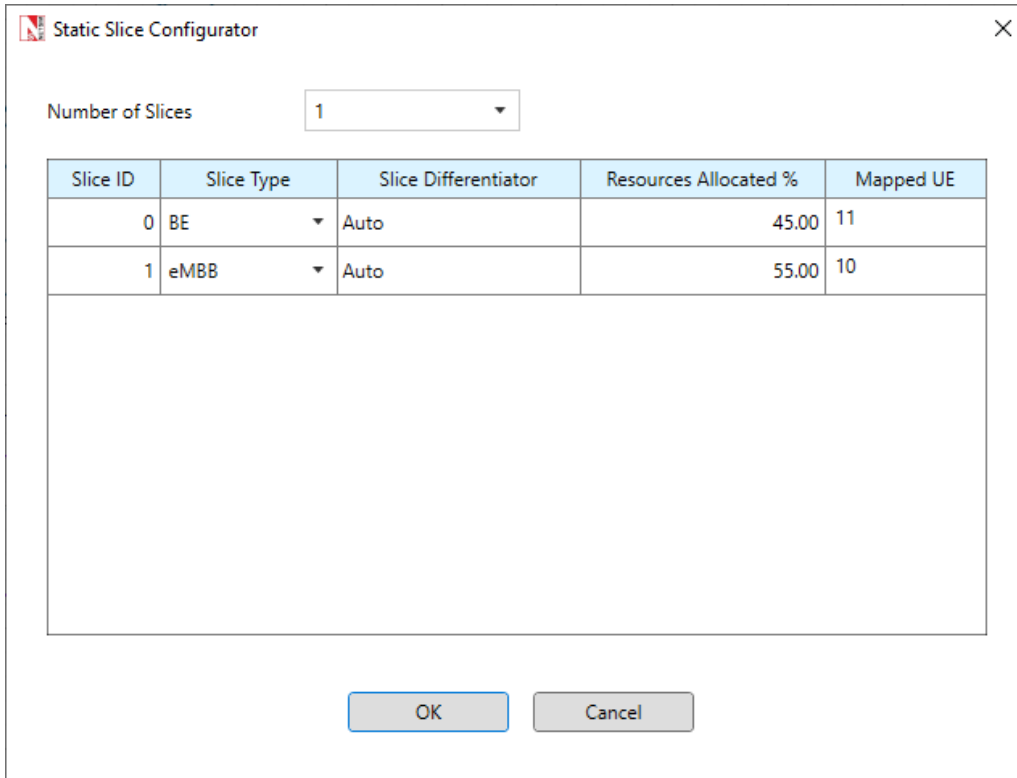


Figure 3-63: Slice Configurator showing BE and eMBB slices configured with 45% and 55% of resources.

For example, in the Pivot table (Custom) sheet, by adding Slice Type to Rows and Allocated PRBs to Values, and setting the Allocated PRBs property to show value as % of grand total, we can obtain the percentage of resources allocated on a per slice type basis as shown below:

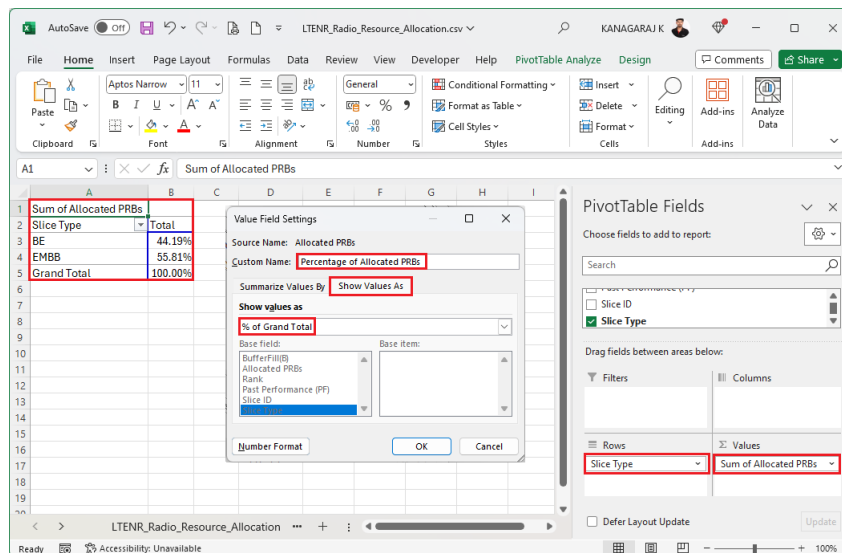


Figure 3-64: Pivot table showing the percentage of resources allocated to each Slice Type.

The pivot table shows the resource allocation to slice types as per the configuration done in the slice configurator.

3.19.4 Plotting Slicing Parameters

NetSim allows users to generate time series plots for EWMA MAC throughput and the Dynamic slicing Index Bias parameters. These plots can be enabled prior to running the simulation.

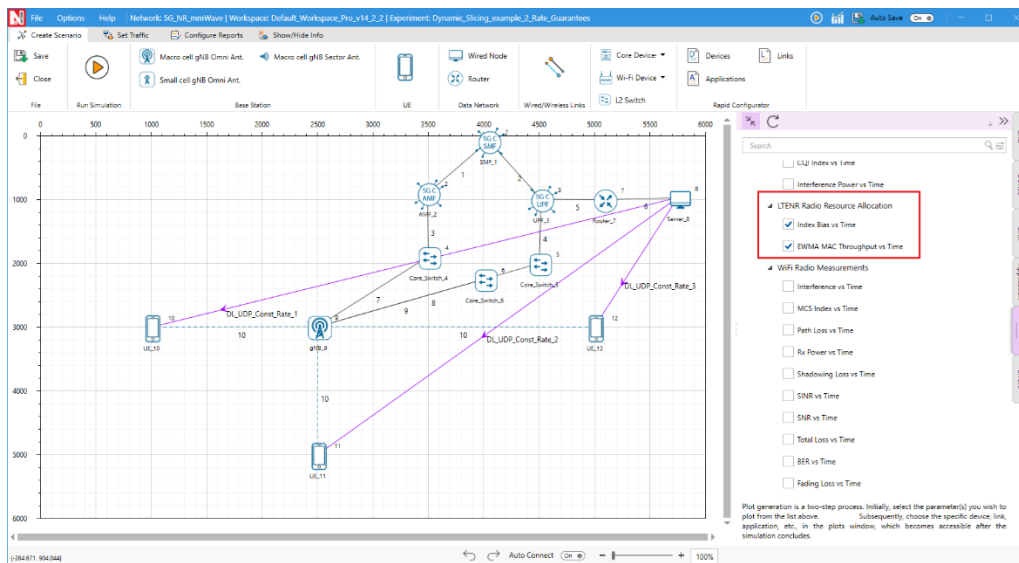


Figure 3-65: Enabling Index Bias and EWMA MAC throughput plots.

After the Simulation the plots can be accessed from the results dashboard under the plots section.

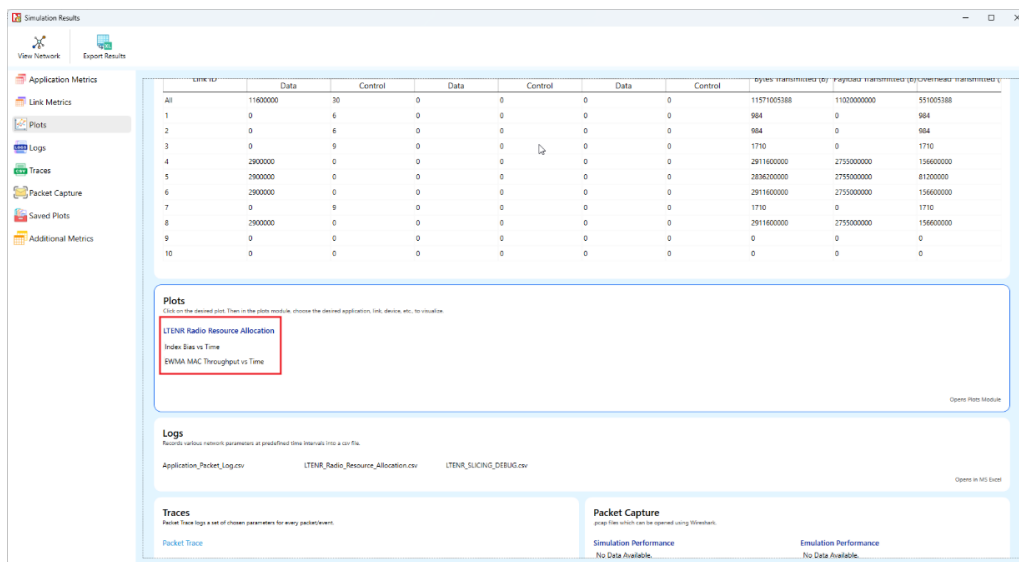


Figure 3-66: Accessing Index Bias and EWMA MAC throughput plots from results dashboard.

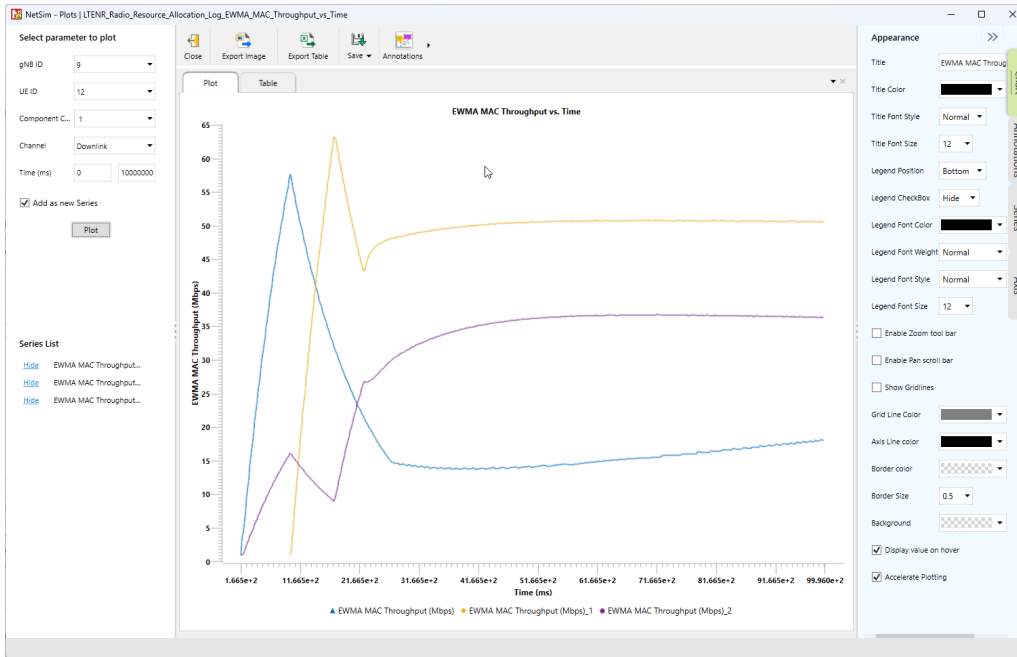


Figure 3-67: EWMA MAC Throughput vs Time.

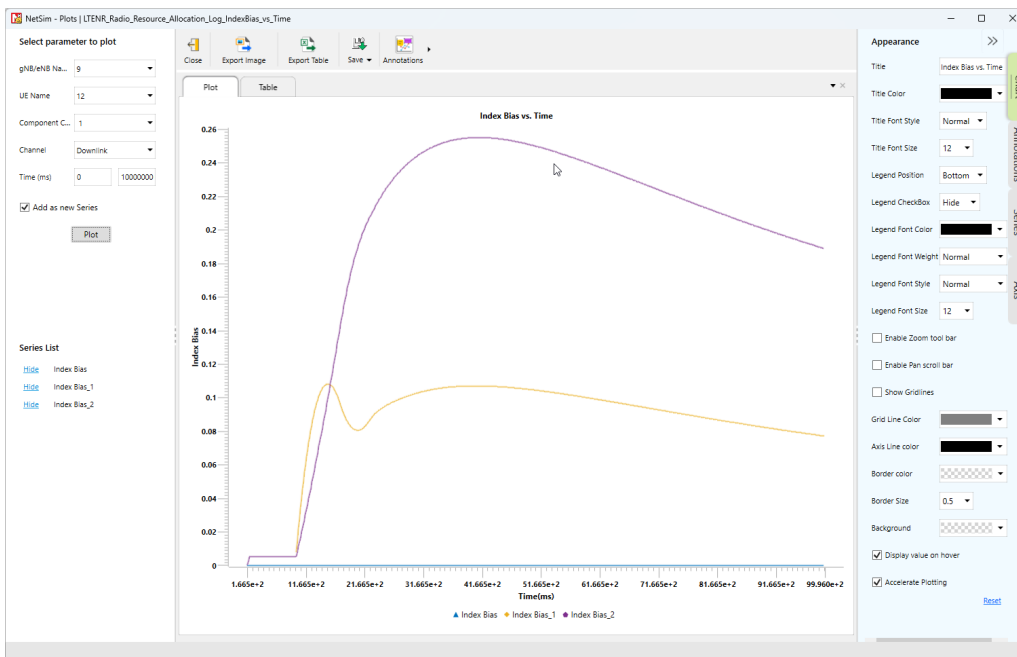


Figure 3-68: Index Bias vs Time.

Detailed information about Network Slicing is provided in the link below:

<https://support.tetcos.com/en/support/solutions/articles/14000159642-network-slicing-in-5g>

3.19.5 Limitations

- Core slicing and transport slicing are not supported.
- A slice will cover the “entire” network i.e., it will apply to all gNBs. This is known as

horizontal slicing. “Vertical slicing” by which only a certain subset of gNBs (also called area) implement network slicing is not supported.

- Assumptions in the working of 5G Core:
- Any UE can connect to any slice. No frequency restriction.
- Currently, there is no RAN-core signaling; hence NSSF, PCF functions are not part of the 5G core.
- Single SMF, AMF and UPF. Multiple SMFs and UPFs will be made available when implementing core slicing.
- NetSim’s focus is network performance; hence NSI, NSMF, NSSMF, CSMF are abstracted.
- NetSim assumes that the control packet flow between the UE, AMF and NSSF for slice selection is instantaneous and successful.
- All traffic from the UE uses the same slice type.
- Users must take care to map the UE to the right slice type. For example: if a voice application is set at some UE, then that UE must be mapped to a URLLC slice.
- Slicing is supported only in 5G SA mode.

3.20 LTENR Results, Packet Trace and Plots

Table 3-37: *LTENR results Packet trace parameter descriptions.*

Parameter	Description
AppID	Application ID
QFI	QOS Flow ID
SDAP Entity	SDAP Entity
SrcID	Source ID
DestID	Destination ID
SrcIP:Port	Tuple of Source IP and Port Number
DestIP:Port	Tuple of Destination IP and Port Number
Packet Tx	Total packets transmitted for a QFI
Packet Rx	Total packets received for a QFI
Delay	Average delay of all received packets within an average window
PER (Packet Error Rate)	Packet Error Rate Plot
PDB (Packet Delay Budget)	Packet Delay Budget Plot

3.20.1 LTE NR Log

The LTE NR packet trace file has in its last column the field LTENR PACKET INFO. This field has information relating to PDCP header and RLC header. The packet trace file can be opened from results dashboard.

Time(Milliseconds)	gNB/eNB Name	UE Name	Distance(m)	isAssociated	CA_ID	Channel	Layer ID	Tx_Power(dBm)	LoS State	TotalLoss(dB)	PathLoss(dB)	ShadowFadingLoss(dB)	O21_Loss(dBm)
81	GNB_7	UE_8	250	FALSE		1 SSB	N/A		40 LOS	86.775281	86.775281	N/A	0
81	GNB_7	UE_8	250	FALSE		2 SSB	N/A		40 LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	FALSE		1 SSB	N/A		40 LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	FALSE		2 SSB	N/A		40 LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PDSCH	1	36.9897	LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PDSCH	2	36.9897	LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PUSCH	1		23 LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 SSB	N/A		40 LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		2 PDSCH	1	36.9897	LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		2 PDSCH	2	36.9897	LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		2 SSB	N/A		40 LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PDSCH	1	36.9897	LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PDSCH	2	36.9897	LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PUSCH	1		23 LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		2 PDSCH	1	36.9897	LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		2 PDSCH	2	36.9897	LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PDSCH	1	36.9897	LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PDSCH	2	36.9897	LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		1 PUSCH	1		23 LOS	86.775281	86.775281	N/A	0
161	GNB_7	UE_8	250	TRUE		2 PDSCH	1	36.9897	LOS	89.476259	89.476259	N/A	0
161	GNB_7	UE_8	250	TRUE		2 PDSCH	2	36.9897	LOS	89.476259	89.476259	N/A	0
162	GNB_7	UE_8	250	TRUE		1 PDSCH	1	36.9897	LOS	86.775281	86.775281	N/A	0
162	GNB_7	UE_8	250	TRUE		1 PDSCH	2	36.9897	LOS	86.775281	86.775281	N/A	0

Figure 3-69: LTE NR Packet Trace. Depending on Excel settings in some cases the entire header may not be displayed. Users can do Ctrl + A (Select All) → Right Click → Format Cells → Alignment → Wrap Text to view the complete header.

3.20.2 PDCP and RLC Headers Logged in Packet Trace

The PDCP and RLC header fields are logged in the LTENR PACKET INFO field of NetSim’s packet trace.

The PDCP header fields are:

- D/C field termed as dCBit in NetSim. This is 0 for control PDU and 1 for Data PDU.
- SN field is termed SN in NetSim. This provides the sequence number of the PDCP PDU.

The RLC header fields are:

- Header Type: If the packet is TMD, UMD or AMD PDU.
- Segment Information (SI) field: The meaning of each possible SI field value is defined in the table below.

Table 3-38: RLC header fields.

Value	Description
SI=ALL	Data field contains all bytes of RLC SDU
SI=FIRST	Data field contains first segment of an RLC SDU
SI=LAST	Data field contains last segment of an RLC SDU
SI=MIDDLE	Data field contains neither the first nor the last segment of RLC SDU

- SN: The SN field indicates the sequence number of the corresponding RLC SDU. For RLC AM, the sequence number is incremented by one for every RLC SDU. For RLC UM, the sequence number is incremented by one for every segmented RLC SDU. RLC service data units (SDUs) coming from the upper layer are segmented or concatenated to RLC protocol data units (PDUs) which have predefined size. Each PDU is assigned its own sequence number (SN). RLC AM on receiver side will reassemble these PDUs into SDUs using the sequence number.

- **SO:** The SO field indicates the position of the RLC SDU segment in bytes within the original RLC SDU. Specifically, the SO field indicates the position within the original RLC SDU to which the first byte of the RLC SDU segment in the Data field corresponds.
- **Pollbit:** The P field indicates whether or not the transmitting side of an AM RLC entity requests a STATUS report from its peer AM RLC entity. 0 indicates that the Status report is not requested, while 1 indicates that the Status report is requested.

3.20.3 LTENR Event Trace

3.20.3.1 Sub Event Types

- **LTENR StartFrame**
 - Downlink and uplink transmissions are organized into frames.
 - There is one set of frames in the uplink and one set of frames in the downlink on a carrier.
 - This event is triggered when a frame is formed.
 - As frame length is 10 ms, the event gets triggered every 10 ms.
 - (LTENR->LTENR Phy.c-> LTENR addStartFrameEvent())
- **LTENR Start Subframe**
 - Each frame consists of 10 subframes.
 - Event gets triggered every 1 ms.
 - (LTENR->LTENR Phy.c-> LTENR addStartSubFrameEvent())
- **LTENR StartSlot**
 - Sub frames are divided into slots.
 - Slot size depends on Numerology (μ).
 - Event gets triggered every $\frac{1}{2^\mu}$ ms.
 - (LTENR->LTENR Phy.c-> LTENR addStartSlotEvent())
- **LTENR Generate RRC MIB**
 - The timer event triggered every 80 ms to generate and broadcast MIB packets from gNBs to all UEs.
 - (LTE-NR->LTENR GNBRRRC.c->fn_NetSim_LTENR_GNBRRRC_GenerateMIB())
- **LTENR Generate RRC SIB1**
 - The timer event triggered every 160 ms to generate and broadcast SIB1 packets from gNB to all UEs.
 - (LTE-NR-> LTENR GNBRRRC.c-> fn_NetSim_LTENR_GNBRRRC_GenerateSIB1())
- **LTENR Generate RRC SI**
 - Timer event triggered when the selected gNB broadcasts RRC SI packets to all the UEs.
 - This event is triggered only once, at 160.9 ms, during the initial attachment process.
 - (LTE-NR->LTENR GNBRRRC.c->fn_NETSIM_LTENR_SUBEVENT_GENERATE_SI())

- **LTENR Generate RRC Setup Request**
 - Triggered when RRC setup request gets transmitted by UE to connected gNB.
- **LTENR RRC T300**
 - The timer event triggered when RRC Setup Request is sent by UE to gNB.
 - The timer T300 stops when the RRC setup message is received by the UE.
 - (LTENR->LTEGNBRRRC.c->LTENR RRC START T300()
and LTENR_RRC_STOP_T300() (line #1290))
- **LTENR Generate RRC Setup**
 - Event triggered when RRC Setup message is sent by the selected gNB to the UE.
 - The RRC Setup message is generated to establish the RRC connection between the UE and the gNB.
 - (LTENR->LTEGNBRRRC.c->fn_NetSIM_LTENR_RRC_GENERATE_RRCSETUP())
- **LTENR Generate RRC Setup Complete**
 - Timer event triggered during the successful establishment of RRC connection.
- **LTENR Generate RRC UE Measurement Report Request**
 - Timer event triggered every 120 ms, when the gNB sends a measurement report request to UE.
- **LTENR Generate RRC UE Measurement Report**
 - Timer event triggered when UE sends measurement report to the serving gNB which contains SINR information from all the gNBs.
 - Triggered at 240 ms after RRC connection establishment and then triggered every 120 ms.
- **PDCP DiscardTimer**
 - When the discardTimer expires for a PDCP SDU, or the successful delivery of a PDCP SDU is confirmed by PDCP status report, the transmitting PDCP entity shall discard the PDCP SDU along with the corresponding PDCP Data PDU.
 - Discarding a PDCP SDU already associated with a PDCP SN causes a SN gap in the transmitted PDCP Data PDUs, which increases PDCP reordering delay in the receiving PDCP entity.
 - (LTENR->LTENR_PDCP.c-LTENR_PDCP START DISCARDTIMER())
- **LTENR Generate NAS Handover Request**
 - Timer event triggered when the initial Handover Request is sent by the serving gNB. The handover request is triggered when the SNR from target gNB exceeds the serving gNB by a margin of 3 dB.
- **Handover Request Ack**
 - Timer event triggered when the target gNB receives a handover request from the serving gNB and sends back an acknowledgement for the handover request.
- **Handover Request Command**

- Triggered when gNB sends Handover Command to UE after receipt of Handover Request Ack.
- **Handover Request Command Handle**
 - Event triggered when UE dissociates from interface of serving gNB and associates with interface of target gNB during a handover.
 - Functions like FindInterface(), pathswitch() and RRC_Reconfiguration() are called in this function.
 - (LTENR->LTENR_NAS.c->fn_NetSim_LTENR_NAS_GENERATE_HANDOVER_COMMAND_HANDLE())
- **Path Switch**
 - Triggered when the target gNB sends the path switch packet to the EPC in order to transfer the data path from serving gNB to target gNB.
- **Path Switch Ack**
 - Triggered when EPC sends acknowledgement to the target gNB on the receipt of the path-switch request.
- **UE Context Release**
 - Event triggered after successful handover procedure.
 - Triggered when target gNB sends context release packet to the serving gNB.
- **UE Context Release Ack**
 - Triggered when acknowledgement is provided by serving gNB to the target gNB on receipt of context release packet.

3.21 Radio Measurements Log File

NetSim LTENR Radio measurements csv log file records pathloss, shadow fading loss, received power, SNR, Interference Power, SINR, MCS, CQI, and Beamforming gain.

The LTENR Radio Measurements log can be enabled by clicking on configure reports in top ribbon > Plots > Select LTENR Radio Measurements log under Network Logs as shown below.

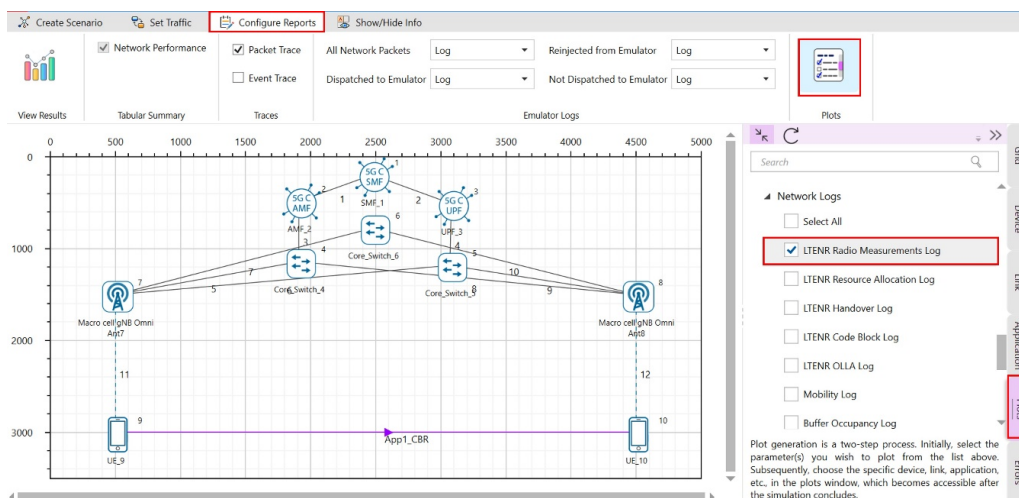


Figure 3-70: Enabling LTENR Radio Measurement log.

The LTENR Radio Measurement Log.csv file will contain the following information:

- Time in Milliseconds
- gNB/eNB Name
- UE Name
- Distance between the gNB/eNB and the UE in meters
- Association Status (True/False)
- Carrier ID (CC ID)
- Channel Type (PDSCH/PUSCH/SSB)
- MIMO Layer ID
- Transmitter Power in dBm
- LoS State
- Total Loss in dB
- Pathloss in dB
- Shadow Fading Loss in dB
- Additional loss dB
- Received Power in dBm
- SNR in dB
- SINR in dB
- O2I (Outdoor to indoor) penetration loss in dBm
- Interference Power in dBm
- Beamforming gain in dB
- CQI Index
- MCS Index

The log file can be accessed from the Simulations Results Window under the log file drop down in the left pane.

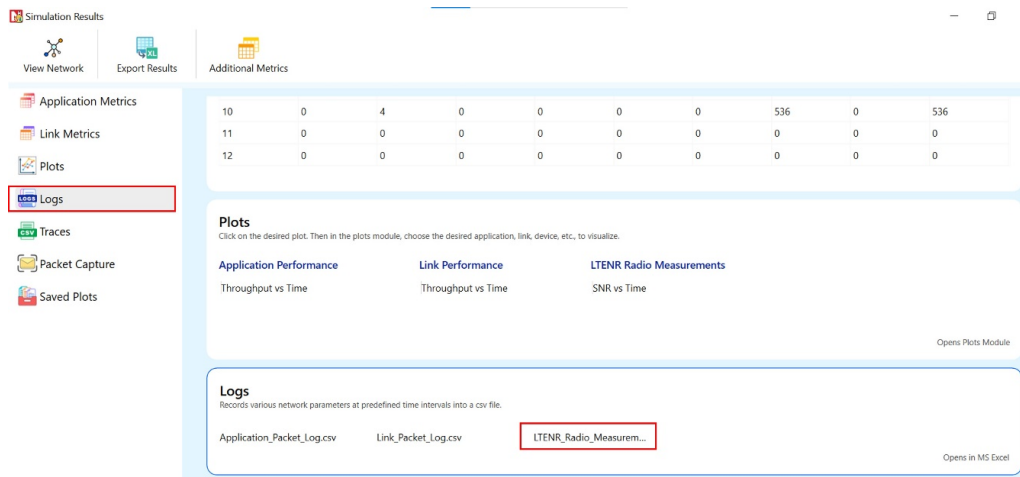


Figure 3-71: LTENR Radio Measurement Log file highlighted in the Results window.

The screenshot shows an Excel spreadsheet titled 'LTENR_Radio_Measurements_Log.csv'. The spreadsheet contains a table with the following columns: Time(ms), gNB/eNB Name, UE Name, Distance(m), isAssociated, CC_ID, Channel, Layer ID, Tx_Power(dBm), LoS State, TotalLoss(dB), PathLoss(dB), ShadowFadingLoss(dB), and O2I Loss. The data rows show measurements for various gNB-UE pairs (e.g., 81 GNB_7 UE_8, 161 GNB_7 UE_8) across different channels (SSB, PDSCH, PUSCH) and states (LOS, N/A).

Figure 3-72: LTENR Radio Measurement Log.csv file.

Implementation details and Assumptions:

- The PDSCH channel corresponds to downlink.
- The PUSCH channel corresponds to uplink.
- The SSB channel corresponds to the control channel.
- Parameters associated with PDSCH and PUSCH channels are logged at every slot only for associated gNB-UE pairs.
- Parameters associated with SSB channel are logged once at initialization and further during each mobility event.
- Initially only SSB channel entries will be found in the log since gNB-UE association takes time.

- The SSB control channel transmission is over a single layer. Analog Beamforming gain is logged for this channel and is used for SSB received power computation.
- Interference is not modelled for the SSB channel and hence SINR and Interference Power parameters are not logged.
- The SNR computed for SSB channel is used for control decisions such as Association and Handover. It is not used to calculate the MCS/CQI Index which is used to determine PDSCH/PUSCH rate.

3.22 Radio Resource Allocation Log File

NetSim 5G Radio Resource Allocation csv log file records information related to physical resource block allocation such as the Total PRBs, Slot Start Time(ms), Slot End, BitsPerPRB, BufferFill, Allocated PRBs, etc.

The LTENR Resource Allocation log can be enabled by clicking on configure reports in top ribbon > Plots > Select LTENR Resource Allocation as shown below.

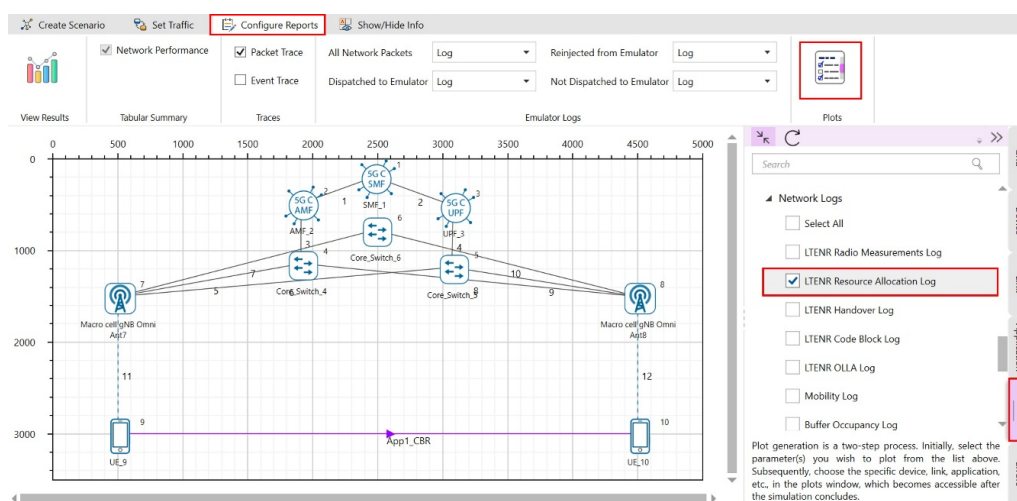


Figure 3-73: Enabling LTENR Resource Allocation log.

The LTE Radio Resource Allocation.csv file will contain the following information:

- gNB ID
- Component Carrier ID
- Slot ID
- Slot
- Total PRBs
- Slot Start Time(ms)
- Slot End Time(ms)
- UE ID
- BitsPerPRB

- BufferFill(B)
- Rank
- Allocated PRBs

The log file can be accessed from the Simulations Results Window under the log file drop down in the left pane.

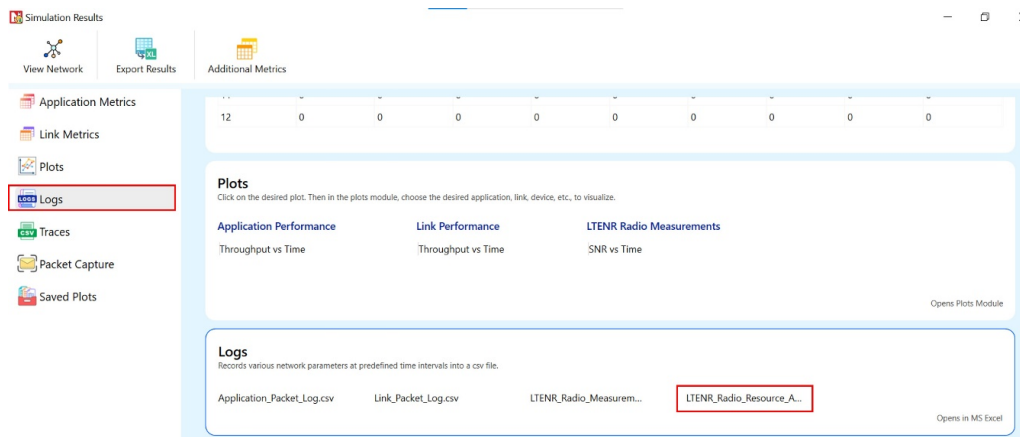


Figure 3-74: LTENR_Radio Resource Allocation Log file highlighted in the Results window.

The screenshot shows an Excel spreadsheet with the following columns: gNB ID, CC ID, Slot ID, Slot, Total PRBs, Slot Start Time(ms), Slot End Time(ms), UE ID, BitsPerPRB, BufferFill(B), Allocated PRBs, Rank, EWMA MAC Throughput, and Index B. The data consists of 25 rows of simulation results for a 5G NR network.

gNB ID	CC ID	Slot ID	Slot	Total PRBs	Slot Start Time(ms)	Slot End Time(ms)	UE ID	BitsPerPRB	BufferFill(B)	Allocated PRBs	Rank	EWMA MAC Throughput	Index B
8	1	1	Uplink	52	40005	40006	9	176	1505	47	0.096154	0	
8	1	1	Uplink	52	40010	40011	9	176	453	21	0.692308	0	
8	1	1	Uplink	52	40025	40026	9	176	1505	47	0.788462	0	
8	1	1	Downlink	52	40027	40028	10	1408	1505	9	1.826923	0	
8	1	1	Uplink	52	40030	40031	9	176	453	21	0.384615	0	
8	1	1	Uplink	52	40045	40046	9	176	1505	47	0.480769	0	
8	1	1	Downlink	52	40047	40048	10	1408	1505	9	1.653846	0	
8	1	1	Uplink	52	40050	40051	9	176	453	21	0.076923	0	
8	1	1	Uplink	52	40065	40066	9	176	1505	47	0.173077	0	
8	1	1	Downlink	52	40067	40068	10	1408	1505	9	1.480769	0	
8	1	1	Uplink	52	40070	40071	9	176	453	21	0.769231	0	
8	1	1	Uplink	52	40085	40086	9	176	1505	47	0.865385	0	
8	1	1	Downlink	52	40087	40088	10	1408	1505	9	1.307692	0	
8	1	1	Uplink	52	40090	40091	9	176	453	21	0.461538	0	
8	1	1	Uplink	52	40105	40106	9	176	1505	47	0.557692	0	
8	1	1	Downlink	52	40107	40108	10	1408	1505	9	1.134615	0	
8	1	1	Uplink	52	40110	40111	9	176	453	21	0.153846	0	
8	1	1	Uplink	52	40125	40126	9	176	1505	47	0.25	0	
8	1	1	Downlink	52	40127	40128	10	1408	1505	9	0.961538	0	
8	1	1	Uplink	52	40130	40131	9	176	453	21	0.846154	0	
8	1	1	Uplink	52	40145	40146	9	176	1505	47	0.942308	0	
8	1	1	Downlink	52	40147	40148	10	1408	1505	9	0.788462	0	
8	1	1	Uplink	52	40150	40151	9	176	453	21	0.538462	0	
8	1	1	Uplink	52	40165	40166	9	176	1505	47	0.634615	0	

Figure 3-75: LTENR Radio Resource Allocation Log.csv file.

Implementation details and assumptions:

- In the case of scheduling algorithms such as Max Throughput when all PRBs are allocated to one UE, the entries for the other UEs for which allocation did not happen is not written to the log file.
- Rank is a metric used for resource allocation.

3.23 Handover Log File

NetSim Handover Log records the events that occur during a handover. This contains the timestamp, UE ID, serving cell ID, target cell ID, Serving SSB SNR(dB), Target SSB SNR(dB) and Remarks (time at which the handover initiation and handover offset was met) — when the TTT parameter is enabled. The log can be used to identify handover attempts and the impact of TTT on handovers.

The LTENR Handover log can be enabled by clicking on configure reports in top ribbon > Plots > Select LTENR Handover log under Network Logs as shown below.

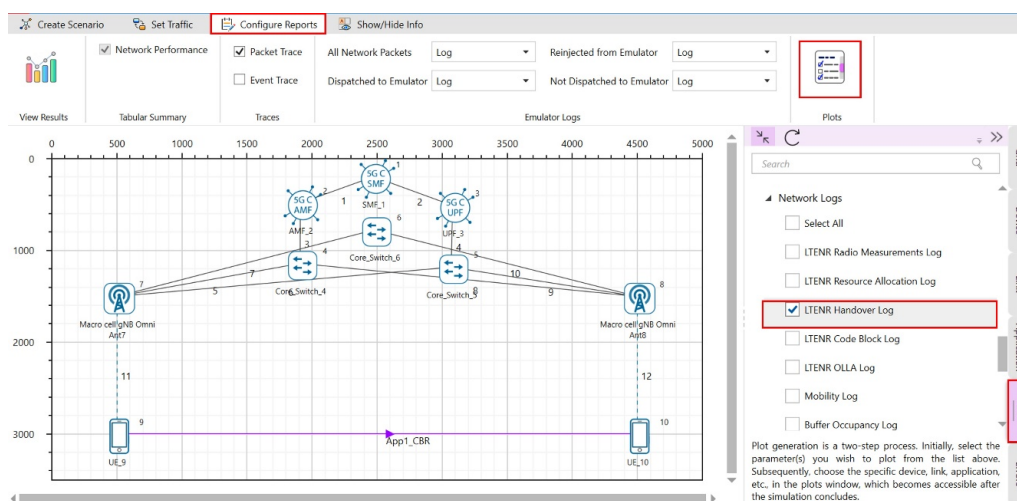


Figure 3-76: Enabling LTENR Handover Log.

The LTE Handover Log.csv file will contain the following information:

- Time in microseconds
- UE ID
- Serving cell
- Target cell
- Serving SSB SNR (dB)
- Target SSB SNR (dB)
- Remarks
- The log file can be accessed from the Simulations Results Window under the log file drop down in the left pane.

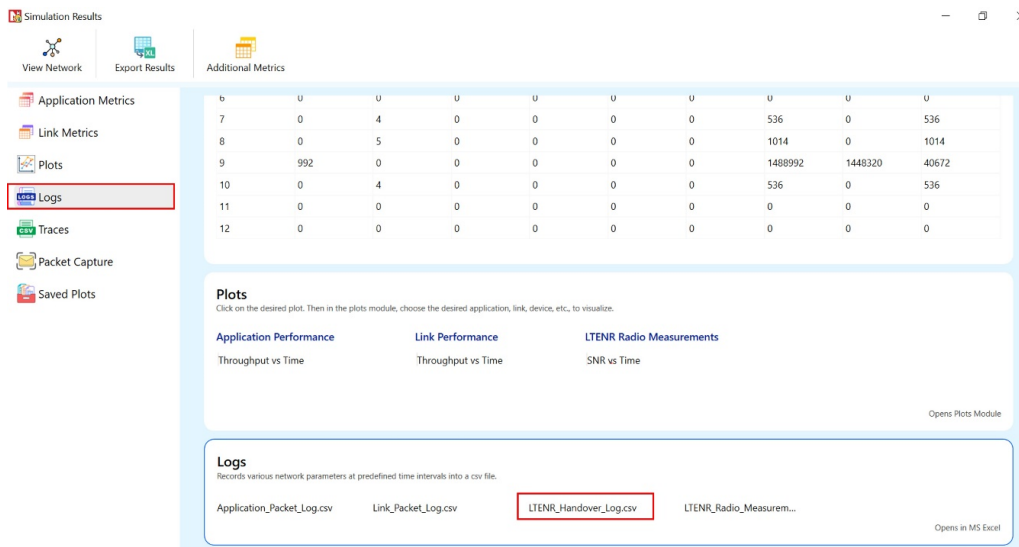


Figure 3-77: *LTENR_Handover_Log.csv* file highlighted in the Results window.

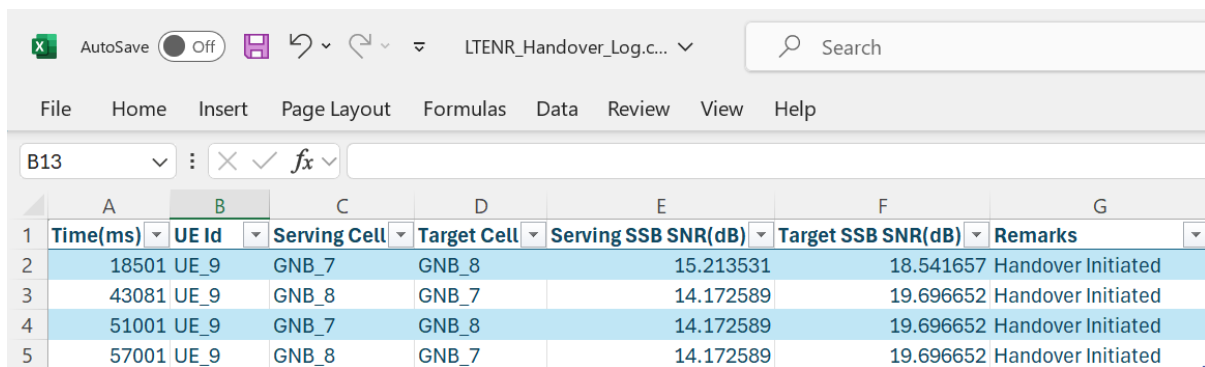


Figure 3-78: *LTENR Handover Log.csv* file.

3.24 Code Block Log File

NetSim Code Block Log Records parameters associated with Code Block segmentation such as Process ID, TB size, Modulation, Code Rate, CBS, BLER, CBG ID, etc. along with remarks on events associated with HARQ and PRB allocation. This will be useful to understand BLER model and Code Block segmentation in 5G.

The LTENR Code Block log can be enabled by clicking on configure reports in top ribbon > Plots > Select Code Block log under Network Logs as shown below.

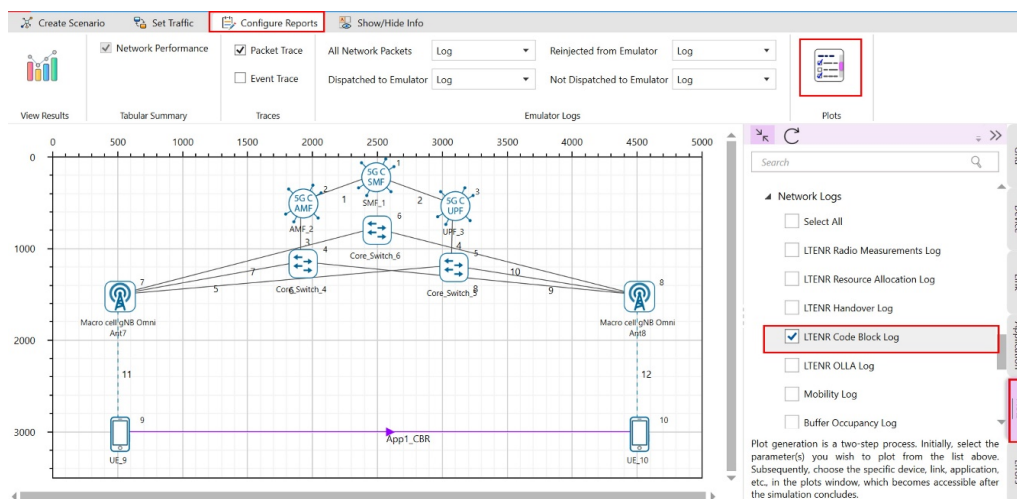


Figure 3-79: Enabling LTE NR Code Block Log.

The LTE_CodeBlock_Log.csv file will contain the following information:

- Time in milliseconds
- gNB/eNB ID
- gNB/eNB I/F (Interface)
- UE ID
- UE I/F (Interface)
- Channel Type (PDSCH/PUSCH)
- Carrier ID (CC ID)
- Frame ID
- Subframe ID
- Slot ID
- Layer ID
- Process ID
- Remarks
- Transport Block Size
- Modulation
- Code Rate
- Code Blocks
- SINR
- BLER
- CBG ID

- CB ID
- NDI
- Transmission Number
- Status
- The log file can be accessed from the Simulations Results Window under the log file drop down in the left pane.

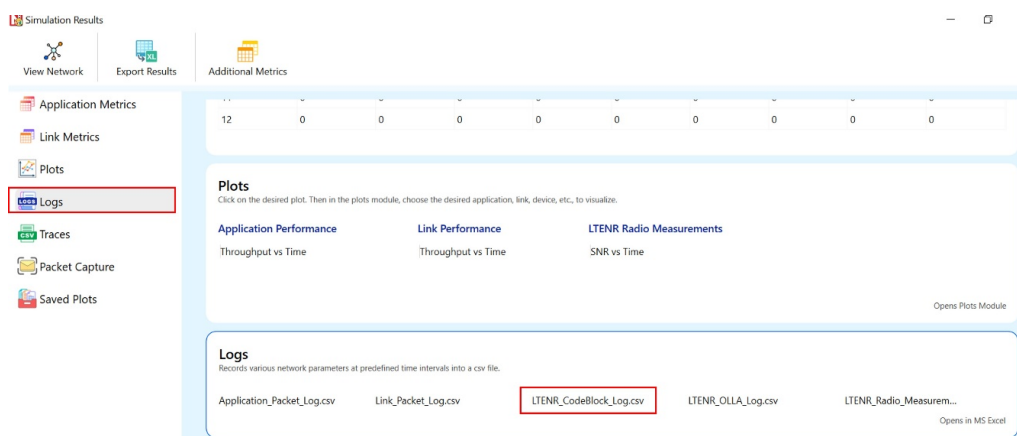


Figure 3-80: *LTENR_CodeBlock_Log.csv* file highlighted in the Results window.

Time (ms)	gNB/eNB ID	gNB/eNB I/F	UE ID	UE I/F	Channel	CC ID	Frame ID	SubFrame ID	Slot ID	Layer ID	Process ID
160.999	7	4	8	1		1	17	1	1	0	N/A
161	7	4	8	1	PDSCH	0	17	2	1	0	1
161	7	4	8	1	PDSCH	0	17	2	1	0	1
161	7	4	8	1	PDSCH	1	17	2	1	0	1
161	7	4	8	1	PDSCH	1	17	2	1	0	1
162	7	4	8	1	PUSCH	0	17	3	1	0	1
162	7	4	8	1	PUSCH	0	17	3	1	0	1
162	7	4	8	1	PDSCH	1	17	3	1	0	1
162	7	4	8	1	PDSCH	1	17	3	1	0	1
162.999	7	4	8	1		1	17	3	1	0	N/A
162.999	7	4	8	1		1	17	3	1	0	N/A
163	7	4	8	1	PDSCH	0	17	4	1	0	1
163	7	4	8	1	PDSCH	0	17	4	1	0	1
163	7	4	8	1	PDSCH	1	17	4	1	0	1
163	7	4	8	1	PDSCH	1	17	4	1	0	1
164	7	4	8	1	PUSCH	0	17	5	1	0	1
164	7	4	8	1	PUSCH	0	17	5	1	0	1
164	7	4	8	1	PDSCH	1	17	5	1	0	1
164	7	4	8	1	PDSCH	1	17	5	1	0	1

Figure 3-81: *LTENR_CodeBlock_Log.csv* file.

3.25 OLLA Log File

NetSim OLLA Log Records Logs parameters associated with Outer Loop Link Adaptation (OLLA) such as CQI with and without OLLA, Phy SINR, SINR Delta, Virtual SINR, etc. along with time stamps, gNB ID, UE ID, etc. This log can be used to understand OLLA mechanisms in 5G.

The LTENR OLLA log can be enabled by clicking on configure reports in top ribbon > Plots > Select OLLA log under Network Logs as shown below.

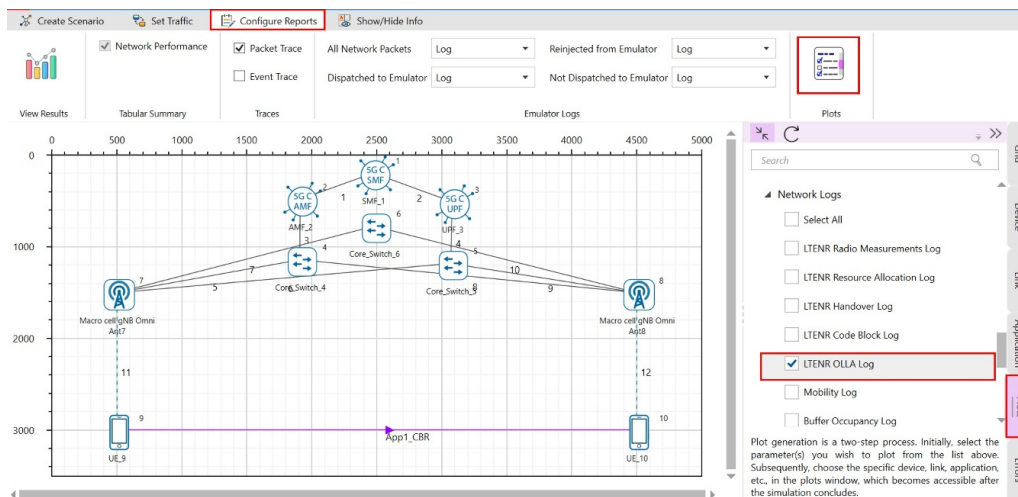


Figure 3-82: *Enabling LTENR OLLA Log.*

The LTENR OLLA Log.csv file will contain the following information:

- Time in ms
- eNB/gNB Name
- UE Name
- Carrier ID
- Layer ID
- Frame ID
- Sub-Frame ID
- Slot ID
- Channel
- Phy SINR in dB
- SINR Delta in dB
- Virtual SINR in dB
- CQI without OLLA
- CQI with OLLA
- The log file can be accessed from the Simulations Results Window under the log file drop down in the left pane.

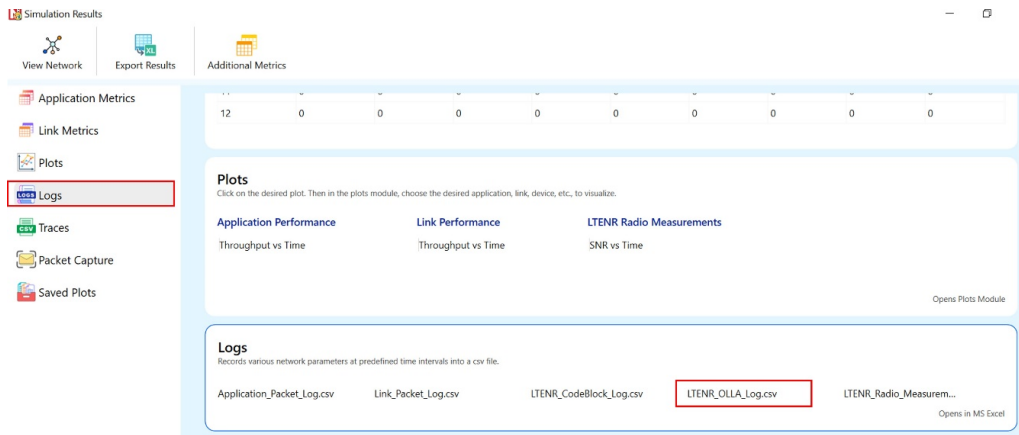


Figure 3-83: *LTENR OLLA Log.csv* file highlighted in the Results window.

Time(ms)	eNB/gNB Name	UE Name	Carrier ID	Layer ID	Frame Id	Sub-Frame Id	Slot Id	Channel	Phy SINR(dB)	SINR Delta(dB)	Virtual SINR(dB)	CQI without OLLA	CQI with OLLA
80.5	MACRO CELL ENB C UE_5		1	1	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		1	2	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		1	1	9	1	1	PUSCH	123.817656	0	123.817656	15	15
80.5	MACRO CELL ENB C UE_5		2	1	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		2	2	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		2	1	9	1	1	PUSCH	123.817656	0	123.817656	15	15
80.5	MACRO CELL ENB C UE_5		3	1	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		3	2	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		3	1	9	1	1	PUSCH	123.817656	0	123.817656	15	15
80.5	MACRO CELL ENB C UE_5		4	1	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		4	2	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_5		4	1	9	1	1	PUSCH	123.817656	0	123.817656	15	15
80.5	MACRO CELL ENB C UE_6		1	1	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_6		1	2	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_6		1	1	9	1	1	PUSCH	123.817656	0	123.817656	15	15
80.5	MACRO CELL ENB C UE_6		2	1	9	1	1	PDSCH	137.807356	0	137.807356	15	15
80.5	MACRO CELL ENB C UE_6		2	2	9	1	1	PDSCH	137.807356	0	137.807356	15	15

Figure 3-84: *LTENR OLLA Log.csv* file.

3.26 LTENR PRB Utilization Log File

NetSim LTENR PRB Utilization Log records the parameters associated with PRB Utilization, including the proportion of PRBs used out of the total PRBs available, along with timestamps. This log tracks changes in PRB utilization over time, providing data on network load. It can identify patterns such as usage times, congestion or periods of under-utilization, helping to understand PRB allocation mechanisms in 5G.

The LTENR PRB utilization log can be enabled by clicking on configure reports in top ribbon > Plots > Select LTENR PRB Utilization log under Network Logs as shown below.

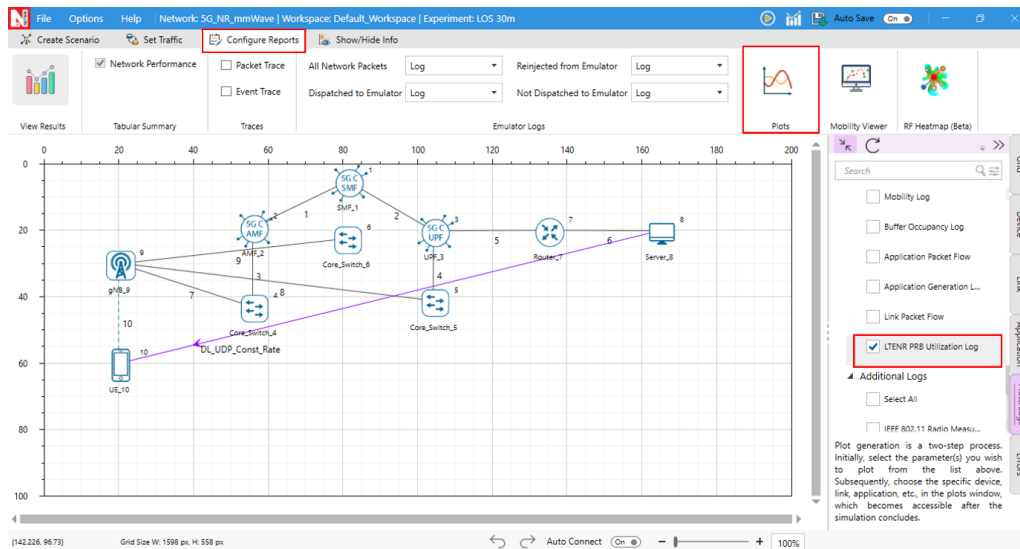


Figure 3-85: Enabling LTENR PRB utilization log.

The LTENR PRB utilization Log.csv file will contain the following information:

- Slot Time(ms)
- gNB ID
- Slot
- CC ID
- Slice ID
- Total PRBs
- Control PRBs
- Available PRBs
- Total Allocated PRBs
- PRB Utilization (%)
- EWMA PRB Utilization (%)

The log file can be accessed from the Simulations Results Window under the log file drop down in the left pane.

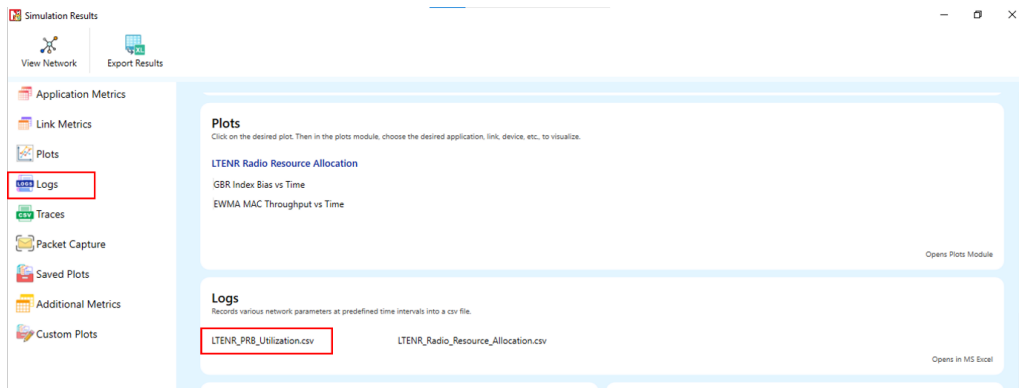


Figure 3-86: *LTENR PRB Utilization Log.csv* file highlighted in the Results window.

Slot Time (ms)	gNB ID	Slot	CC ID	Slice ID	Total PRBs	Control PRBs	Available PRBs	Total Allocated PRBs	PRB Utilization (%)	EWMA PRB Utilization (%)
172	9	Downlink	0	0	52	8	44	0	0	0
172	9	Downlink	cumulativ	0	52	8	44	0	0	0
172	9	Downlink	0 cumulativ	0	52	8	44	0	0	0
172	9	Downlink	cumulativ cumulativ	0	52	8	44	0	0	0
173	9	Downlink	0	0	52	8	44	0	0	0
173	9	Downlink	cumulativ	0	52	8	44	0	0	0
173	9	Downlink	0 cumulativ	0	52	8	44	0	0	0
173	9	Downlink	cumulativ cumulativ	0	52	8	44	0	0	0
174	9	Downlink	0	0	52	8	44	0	0	0
174	9	Downlink	cumulativ	0	52	8	44	0	0	0
174	9	Downlink	0 cumulativ	0	52	8	44	0	0	0
174	9	Downlink	cumulativ cumulativ	0	52	8	44	0	0	0
176	9	Downlink	0	0	52	8	44	0	0	0
176	9	Downlink	cumulativ	0	52	8	44	0	0	0
176	9	Downlink	0 cumulativ	0	52	8	44	0	0	0
176	9	Downlink	cumulativ cumulativ	0	52	8	44	0	0	0
177	9	Downlink	0	0	52	8	44	0	0	0

Figure 3-87: *LTENR PRB Utilization csv* file.

3.27 Enable Detailed Logs in 5G NR

A detailed 5G NR log can be enabled by a user, by going to the file LTE_NR.h, and then un-commenting the #define LTENR_LOG, #ifdef LTENR_LOG, #define LTENR_LOG_DEV and #endif LTENR_LOG.

```

File Edit View Git Project Build Debug Test Analyze Tools Extensions Window Help Search (Ctrl+Q) NetSim
Release - x64 Local Windows Debugger
LTE_NR.h
LTE_NR
#pragma endregion
35
36 #ifdef __cplusplus
37 extern "C" {
38 #endif
39
40 #pragma region LOG_MACRO
41 #define LTENR_LOG
42 #ifdef LTENR_LOG
43 #define LTENR_LOG_DEV
44 // #define LTENR_PROPAGATION_LOG
45 // #define LTENR_PDCP_LOG
46 // #define LTENR_RLC_LOG
47 // #ifdef LTENR_RLC_LOG
48 // #define LTENR_RLC_BUFFERSTATUSREPORTING_LOG
49 // #define LTENR_RLC_TRANSMISSIONSTATUSNOTIFICATION_LOG
50 // #endif
51 #endif LTENR_LOG
52 #pragma endregion
53
54 #pragma region TYPEDEFS
55 // Typedefs that are referenced in multiple headers file
56 typedef struct stru_LTE_NR_AssociatedUEPHYInfo LTE_NR_ASSOCIATEDUEPHYINFO; * ptrLTE_NR_ASSOCIATEDUEPHYINFO;
57 typedef struct stru_LTE_NR_GNBPHY LTE_NR_GNBPHY; * ptrLTE_NR_GNBPHY;
58 #pragma endregion //TYPEDEFS
59
60 #pragma region DEVICE_TYPE
61 static bool isFastProcessing = true;
62 /**
63 * @enum enum_LTE_NR_DEVICE_TYPE
    
```

Figure 3-88: *Enable LTE NR log file in visual studio.*

Then rebuild the code and run the simulation.

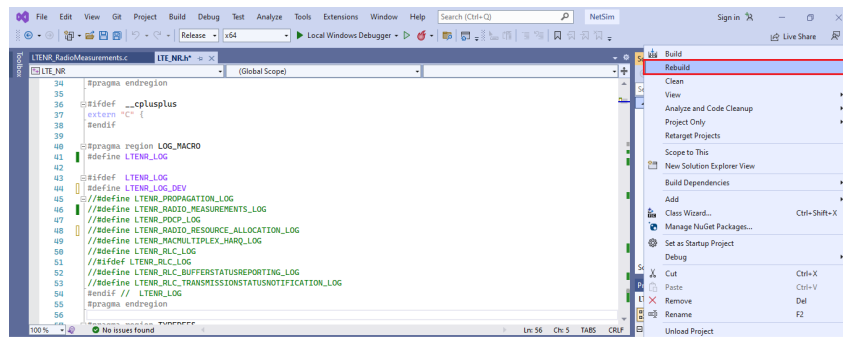


Figure 3-89: Rebuild 5G Project.

The log file will be available under Log Files menu in the left panel of the Results Window.



Figure 3-90: Results Window.

Among various values noted in the log file is the CQI and MCS information. For example, a user would see in the log file:

CQI Table

15 256QAM 948 7.406300

MCS Table

27 256QAM 8 948.000000 7.406300

The CQI information is according to the 38-214 Table 5.2.2.1-2, 5.2.2.1-3, 5.2.2.1-4. And in the above example:

- CQI Index: 15
- Modulation: 256QAM
- Code Rate × [1024]: 948
- Efficiency: 7.406300

The MCS information is according to the 38-214 Table 5.1.3.1-1, 5.1.3.1-2, 5.1.3.1-3. And in the above example:

- MCS Index: 27
- Modulation: 256QAM
- Modulation Order: 8
- Target code Rate × [1024]: 948.000000
- Spectral efficiency: 7.406300

4 Featured Examples

4.1 Derive from 3GPP standards the theoretical data rate and throughput for a 1gNB - 2UE scenario, and compare with simulation

4.1.1 Introduction

NetSim calculates the PHY rate per the 3GPP formula, which is explained in the infographic below.

5G PHY Data Rate Formula

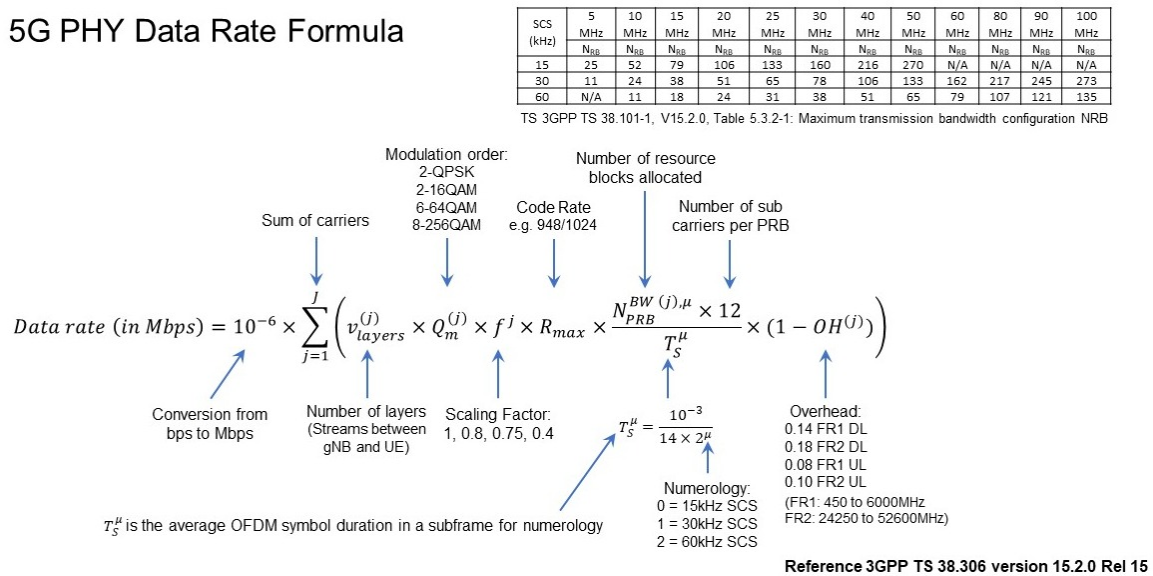


Figure 4-1: 5G PHY Rate Formula in NetSim

A simple, approximate way to think of the above formula is

$$Data Rate = BW \times Q \times R \times N \times (1 - OH) \quad \dots (1) \quad (70)$$

where Data rate is the per carrier PHY rate, BW is the allocated bandwidth to the particular UE, Q is the modulation order, R is the code rate, N is the number of MIMO layers, and OH is the Overhead. In NetSim, OH is usually taken as 2/14 since we have 2 control symbols in a slot spanning 14 symbols.

How is the formula in (1) equivalent to the 3GPP formula? Let's examine the variables.

Q, R, N, and (1-OH) are common to both

The scaling factor in NetSim is assumed as 1

The data rate in (1) per carrier and needed to be summed up for multiple carriers

What remains to be shown is that BW is the same as $N_{prb} \times 12/T_s$. In this 12 is the number of subcarriers and T_s represents the symbol duration which varies with numerology. 10^{-3} represents 1 ms, 14 is the number of OFDM symbols and 2^μ adjusts the slot duration based on the numerology. When we calculate $N_{prb} \times 12/T_s$, we are essentially calculating the total number of subcarriers allocated within the given symbol duration, which is nothing, but the bandwidth allocated to that device. The simplified formula we provided would yield a slightly higher estimate compared to the 3GPP formula because of the way N_{prb} is calculated in the standards.

When operating in TDD mode, the above computation would give the two-way (downlink + uplink) data rate. Therefore, the downlink data rate would be

$$DL-rate = Data Rate \times DL-Fraction \quad \dots (2) \quad (71)$$

While BW, OH, and N are based on user inputs in NetSim, Q and R are dependent on the modulation and coding scheme (MCS). The MCS i.e., Q and R, is chosen by looking up the 3GPP spectral efficiency to MCS table assuming ideal Shannon rate whereby

$$Spectral-Efficiency = \log_2(1 + SINR[linear]) \quad \dots (3) \quad (72)$$

The expression thus becomes

$$\frac{DL}{UL} Data Rate [Mbps] = BW [MHz] \times Q \left[\frac{bits}{symbol} \right] \times R \times N \times (1-OH) \times \left(\frac{DL}{UL} fraction \right) \quad \dots (4) \quad (73)$$

Bandwidth is the cycles per second which translates to the number of signal changes (or symbol transmissions) per second. Hence multiplying BW and Q gives Mbits/sec when BW is in MHz. The other terms are dimensionless.

Now, in 5G, the transmitter adapts its PHY layer MCS depending on the receiver's SINR. The SINR in turn depends on the received power, which is transmit-power less pathloss. In NetSim users can record the radio measurements to obtain the SINR and MCS (for each UE) over time if the channel is time varying.

4.1.2 Network Setup

Open NetSim, Select Examples → 5G NR → 5G data rate and throughput computation then click on the tile in the middle panel to load the example as shown in below screenshot.

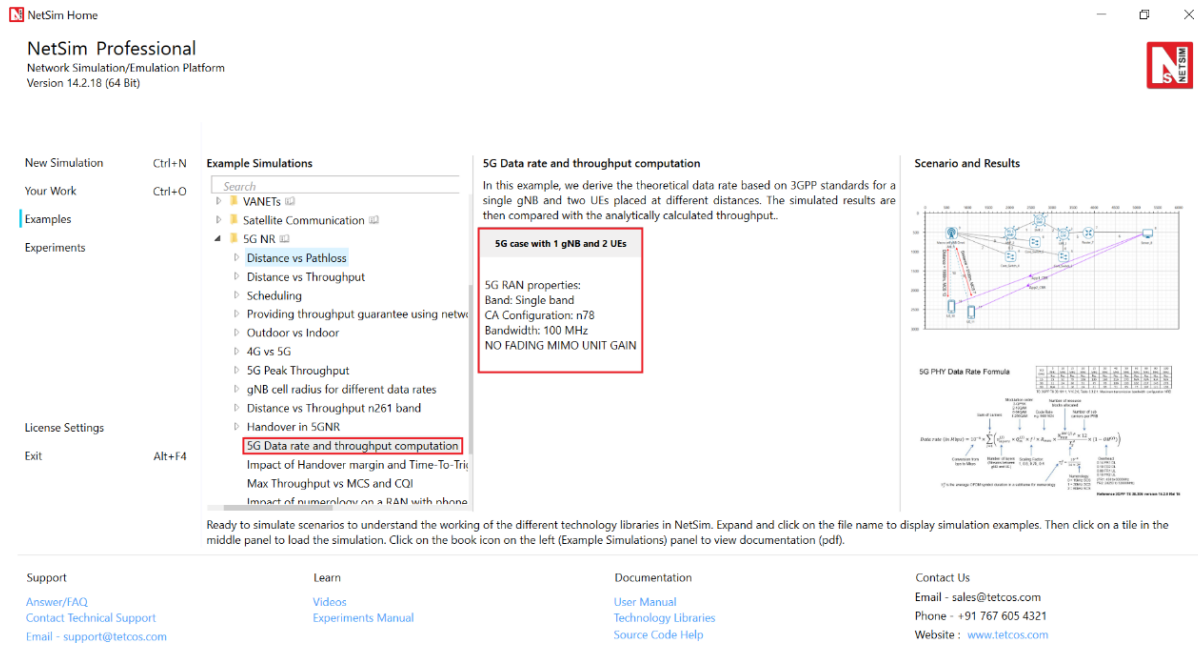


Figure 4-2: List of 5G examples showing 5G data rate and throughput computation

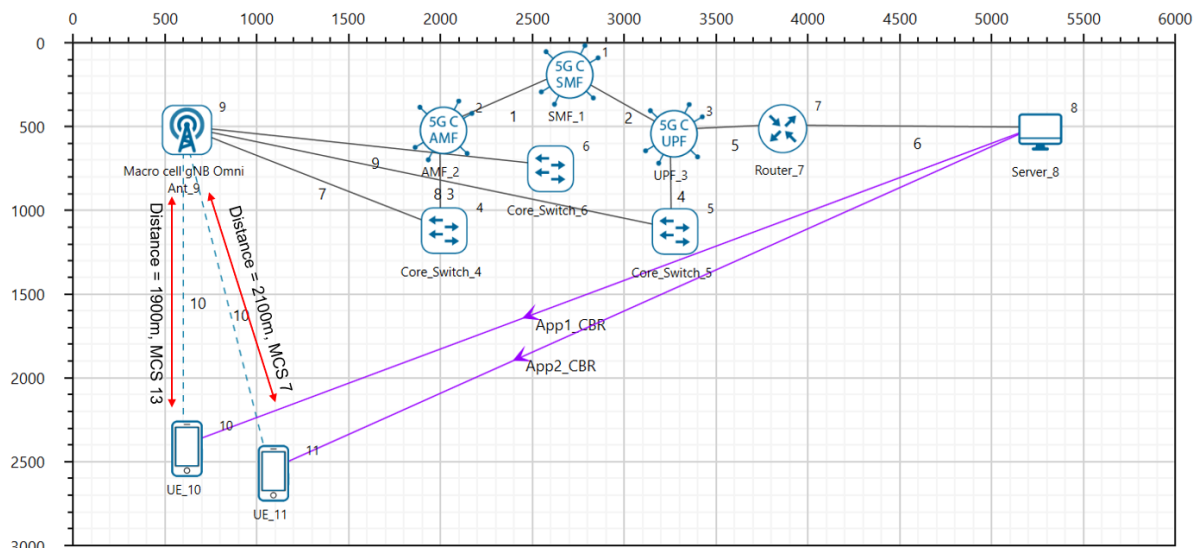


Figure 4-3: Network setup for studying the 5G data rate and throughput computation.

4.1.3 Network Settings

- Grid length is set to 6000m × 3000m by clicking on the grid panel on right.
- Consider a single Macro cell gNB and two UEs. The distance from the gNB to the first UE should be 1900m, and the distance to the second UE should be 2100m.
- Click on the gNB and expand property panel on right and set the properties in 5G RAN layer as mentioned in the below table.

Table 4-1: 5G RAN Datalink and Physical layer properties.

Properties	
Datalink Layer Properties	
Scheduling type	Round Robin
Physical Layer Properties	
CA type	Single band
CA Configuration	n78
CA1	
Numerology	1
Channel Bandwidth	100 MHz
Channel Model	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Rural macro
LOS NLOS Selection	User defined
LOS Probability	1
Shadow Fading Model	3GPP TR 38.901-7.4.1
Fast Fading Model	No Fading

- Set Transmitter and Receiver antenna count as shown in the below table.

Table 4-2: Tx and Rx Antenna counts for gNB and UE

Device	Tx Antenna Count	Rx Antenna Count
gNB	2	2
UE 1	1	1
UE 2	2	2

- Create a CBR application for both UEs from the servers by clicking on the Set Traffic tab in the ribbon at the top. Keep the packet size at the default (1460 B) and change the inter-arrival time to 97.33 μ s, thereby generating 120 Mbps of data for each UE.
- Enable the LTE NR Radio Measurement log by clicking on Configure reports tab and plots.

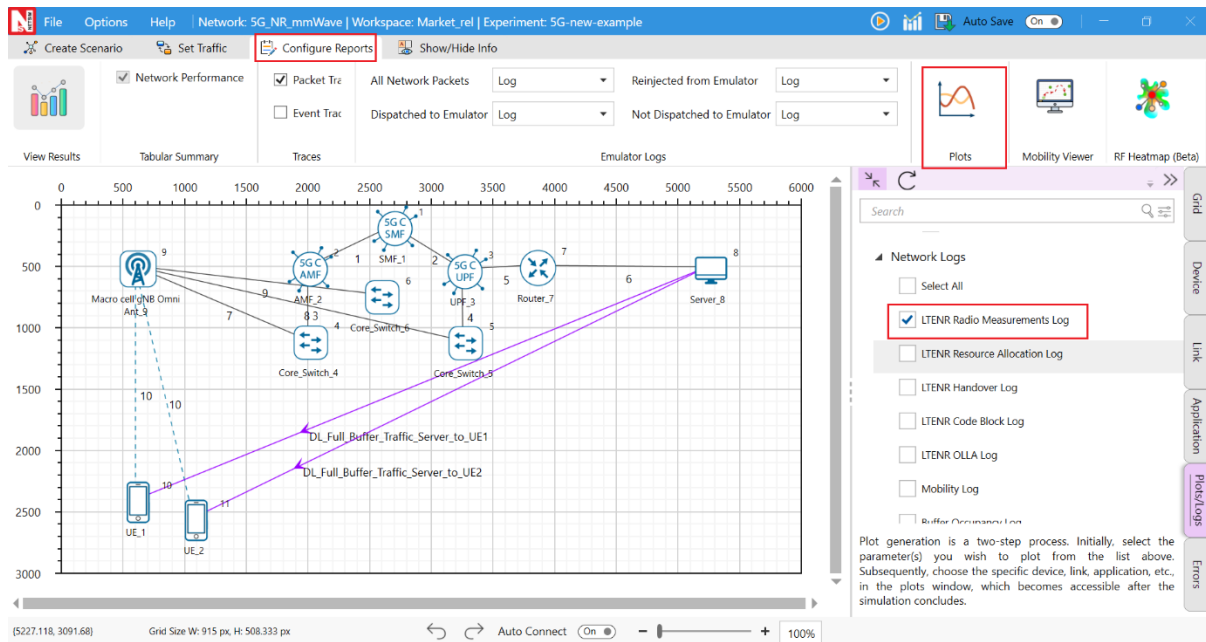


Figure 4-4: Enabling the LTENR Radio Measurement log

- Run the simulation for 10 seconds.

4.1.4 Results

Application Metrics

End-to-end performance of applications running across the network.

App. ID	App. Name	Src. ID	Dest. ID	Gen. Rate (MThput. (Mbps)	Delay (µs)	Jitter (µs)	Pkts. Gen.	Pkts. Recd.	Payload Gen.	Payload Recd.	
1	App1_CBR	8	10	120.000000	95.368368	1100836.81115	1228.837723	102744	81651	150006240	119210460
2	App2_CBR	8	11	120.000000	109.818864	498028.30558	1095.813449	102744	94023	150006240	137273580

Figure 4-5: Application metrics showing throughput results.

Open LTENR Radio measurement log from simulation results window and filter the channel to PDSCH, Layer ID to 1, To observe the MCS, CQI, Pathloss and SNR values for UE 1, filter the UE ID to UE 1

Time(ms)	gNB or eNB Name	UE Name	Distance(m)	isAssociated	CC_ID	Band	Channel	Layer ID	Tx Power(dBm)	LoS State	PathLoss(dB)	SNR(dB)	CQI Index	MCS Index
6	161 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	25.040502	15	27
14	161 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	25.040502	15	27
20	161.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	25.040502	15	27
26	162 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	25.040502	15	27
32	162.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	25.040502	15	27
38	163 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
46	163 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
52	163.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
58	164 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
64	164.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
72	165 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
78	165.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
84	166 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
90	166.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
96	167 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
102	167.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
108	168 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
114	168.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
120	169 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
126	169.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
134	170 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
140	170.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
146	171 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
152	171.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
158	172 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
164	172.5 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13
170	173 MACRO CELL GNB O UE_1		1900	TRUE	1	n78	PDSCCH	1	40	LOS	121.799079	9.750327	8	13

Figure 4-6: LTENR Radio Measurement log showing the MCS value for UE 1

Filter the UE ID to UE 2, to observe the MCS, CQI, Pathloss and SNR values for UE 2 alone.

Time(ms)	gNB or eNB Name	UE Name	Distance(m)	isAssociated	CC_ID	Band	Channel	Layer ID	Tx Power(dBm)	LoS State	PathLoss(dB)	SNR(dB)	CQI Index	MCS Index
9	161 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	1.81313	3	3
16	161 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	1.81313	3	3
22	161.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	1.81313	3	3
28	162 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	1.81313	3	3
34	162.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	1.81313	3	3
41	163 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
48	163 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
54	163.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
60	164 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
66	164.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
74	165 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
80	165.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
86	166 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
92	166.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
98	167 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
104	167.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
110	168 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
116	168.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
122	169 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
128	169.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
136	170 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
142	170.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
148	171 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
154	171.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
160	172 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
166	172.5 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7
172	173 MACRO CELL GNB O UE_2		2099.991029	TRUE	1	n78	PDSCCH	1	36.9897	LOS	124.707207	5.243557	5	7

Figure 4-7: LTENR Radio Measurement log showing the MCS value for UE 2

NOTE: The values obtained till 163 ms are during RRC association time, hence consider the values after 163 ms.

The PHY Data Rate Calculations for UE 1

$$PHY \text{ data rate (in Mbps)} = 10^{-6} \sum_{j=1}^J (v_{Layers}^{(j)}) \cdot Q_m^{(j)} \cdot f^{(j)} \cdot R_{PRB}^{BW(j), \mu} \cdot 12 (1 - OH^{(j)}),$$

where $T_s^\mu = \frac{10^{-3}}{14 \cdot 2^\mu}$

For UE 1,

The number of layers $v = 1$, since the Tx and Rx antenna of UE count is 1×1 , Obtained MCS is 13 which means the Q_m (Modulation order) is 6, $f = 1$, $N_{PRB} = 273$, OH in downlink for FR1 is 0.14.

$$Data\ Rate\ [Mbps] = 10^{-6} \left(1 \times 6 \times 1 \times \frac{567}{1024} \times \frac{273 \times 12}{\left(\frac{10^{-3}}{14 \cdot 2^1}\right)} \times (1 - 0.14) \right) = 262.08\ Mbps \quad (74)$$

This is total Data Rate which includes DL and UL. The DL data rate would be

$$DL\ Data\ rate = Data\ Rate\ (Mbps) \times \frac{DL}{DL+UL} = 262.08 \times \frac{4}{5} = 209.66\ Mbps$$

Since, we have 2 UE, with round robin resource allocation, alternate slots are allocated to each UE, therefore the PHY throughput for UE1 would be

$$PDSCH\ PHY\ Throughput\ [Mbps] = \frac{DL\ Data\ rate\ [Mbps]}{2} = \frac{209.66}{2} = 104.83\ Mbps \quad (75)$$

This is PHY layer throughput, and hence Application layer throughput would be

$$DL\ App\ throughput\ [Mbps] = PDSCH\ PHY\ Throughput \times \frac{App\ layer\ Pkt\ Size}{Phy\ layer\ Pkt\ Size} \quad (76)$$

The PHY Data Rate Calculations for UE 2

For UE 2,

The number of layers $v = 2$, since the Tx and Rx antenna of UE count is 2×2 , Obtained MCS is 7 which means the Q_m (Modulation order) is 4, $f = 1$, $N_{PRB} = 273$, OH in downlink for FR1 is 0.14.

$$Data\ Rate\ [Mbps] = 10^{-6} \left(2 \times 4 \times 1 \times \frac{490}{1024} \times \frac{273 \times 12}{\left(\frac{10^{-3}}{14 \cdot 2^1}\right)} \times (1 - 0.14) \right) = 301.98\ Mbps \quad (77)$$

This is total Data Rate which includes DL and UL. The DL data rate would be

$$DL\ Data\ rate = Data\ Rate\ (Mbps) \times \frac{DL}{DL+UL} = 301.98 \times \frac{4}{5} = 241.58\ Mbps$$

Since, we have 2 UE, with round robin resource allocation, alternate slots are allocated to each UE, therefore the PHY throughput for UE1 would be

$$PDSCH\ PHY\ Throughput\ [Mbps] = \frac{DL\ Data\ rate\ [Mbps]}{2} = \frac{241.58}{2} = 120.79\ Mbps \quad (78)$$

This is PHY layer throughput, and hence Application layer throughput would be

$$DL\ App\ throughput\ [Mbps] = PDSCH\ PHY\ Throughput \times \frac{App\ layer\ Pkt\ Size}{Phy\ layer\ Pkt\ Size} \quad (79)$$

4.1.5 Results and discussion

We run a simulation in NetSim per the above scenario and obtain the throughput values tabulated below.

Table 4-3: Table showing Analytical and simulated throughput results.

	PHY Data Rate (Analytical throughput) in Mbps	Application throughput (Simulation) in Mbps
UE 1	101.69	95.36
UE 2	116.48	109.81

UE 2 achieves higher throughput despite being further from the gNB due to 2×2 MIMO vs 1×1 MIMO UE 1.

The application layer throughput would be

$$DL \text{ App Throughput} = DL \text{ DataRate} \times (\text{App Layer Packet Size}) \quad (80)$$

$$DL \text{ App throughput} = DL \text{ Data Rate} \times \frac{\text{App layer packet size}}{\text{Phy layer packet size}} \dots (4)$$

The computation of the PHY layer packet size is complex. It involves various layers adding overheads: the Transport layer (UDP) contributes 8 B, and the Network Layer (IP) adds 20 B. The MAC layer introduces additional overhead, with the SDAP header contributing 1B and the PDCP header adding 16B. At this point, the packet size is the size of the application layer packet plus 45 B. The MAC layer in 5G further processes these packets, fitting them into transport blocks (TBs). These TBs are then divided into code blocks (CBs), which are grouped into code block groups (CBGs) for transmission over the air. The sizes of the TB and CB depend on various parameters, and additional overheads are incurred during this process. As a result, it's challenging to provide a simple analytical formula for PHY layer packet size. A reasonable estimate would be about 5–10% reduction between the PHY rate and the application throughput. This is what we observe when we compare the simulation results with the theoretical predictions in the above table.

The above discussion assumes a conservative MCS is selected, ensuring a Block Error Rate (BLER) of zero. However, if a more aggressive MCS is chosen, which typically has a higher throughput but also a higher t-BLER (e.g., 5% or 10%), the computation must account for this increased BLER.

4.1.6 Exercises

- Explain how changing the DL:UL ratio would affect the results? Redo the theoretical calculations for DL:UL ratio of 1:1 and compare against simulation.
- Change the gNB UE distances such that the MCSs seen by the UEs are different for e.g., MCS 17 and MCS 23. Compute the theoretical throughput and compare against simulation.

4.2 Effect of distance on pathloss, SINR and MCS (7-Cell Hexagonal Layout, Urban Macro Propagation, NLOS)

The experiment aims to analyze how the performance of a UE changes as it moves away from its serving gNB. In real-world scenarios, users are mobile, and their distance from the base station affects signal strength. By simulating a linear movement of the UE away from the gNB, we can observe how parameters such as pathloss, SINR, and MCS change with distance. This helps determine the coverage limit of the gNB, identify when the signal is no longer sufficient for communication, and plan for handover decisions.

Network Layout for UE Coverage Analysis in Multi-Cell Scenario:

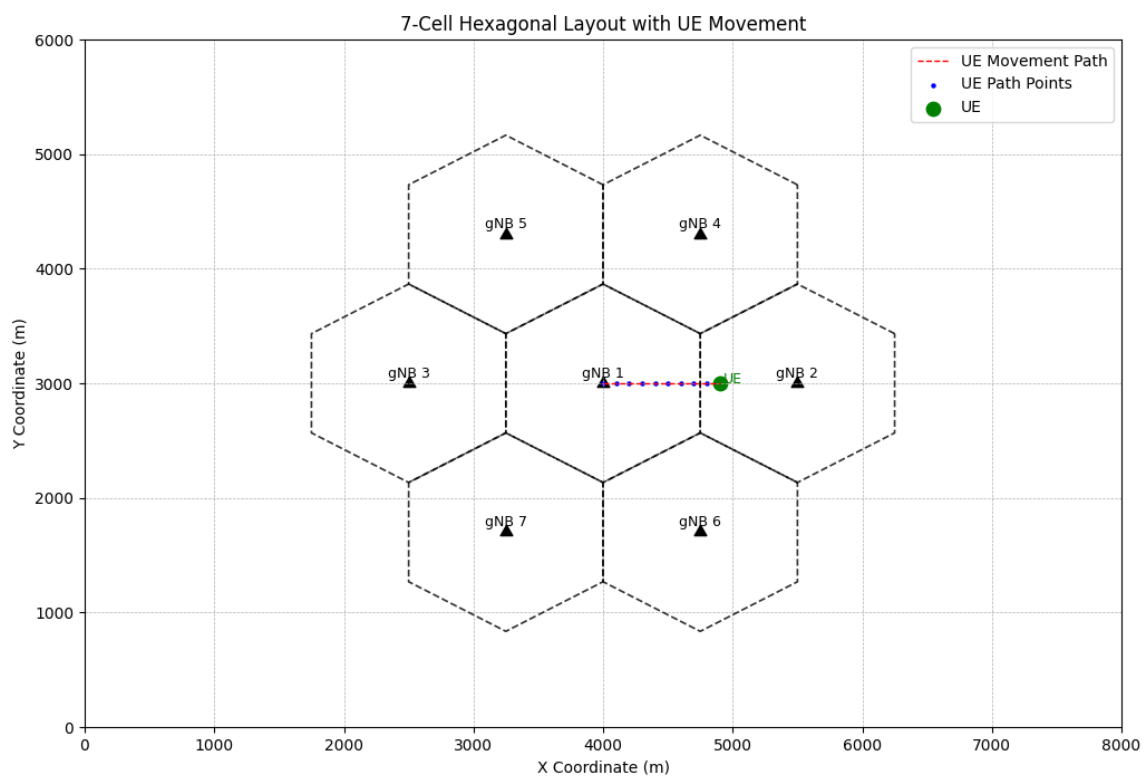


Figure 4-8: A logical diagram with the 7-cell hexagonal network topology; the UE is initially close to gNB1 and moves east towards gNB2.

- The following network diagram illustrates what the NetSim UI displays when you open the example configuration file.

7-Cell Hexagonal gNB Layout with Connected 5G Core Network

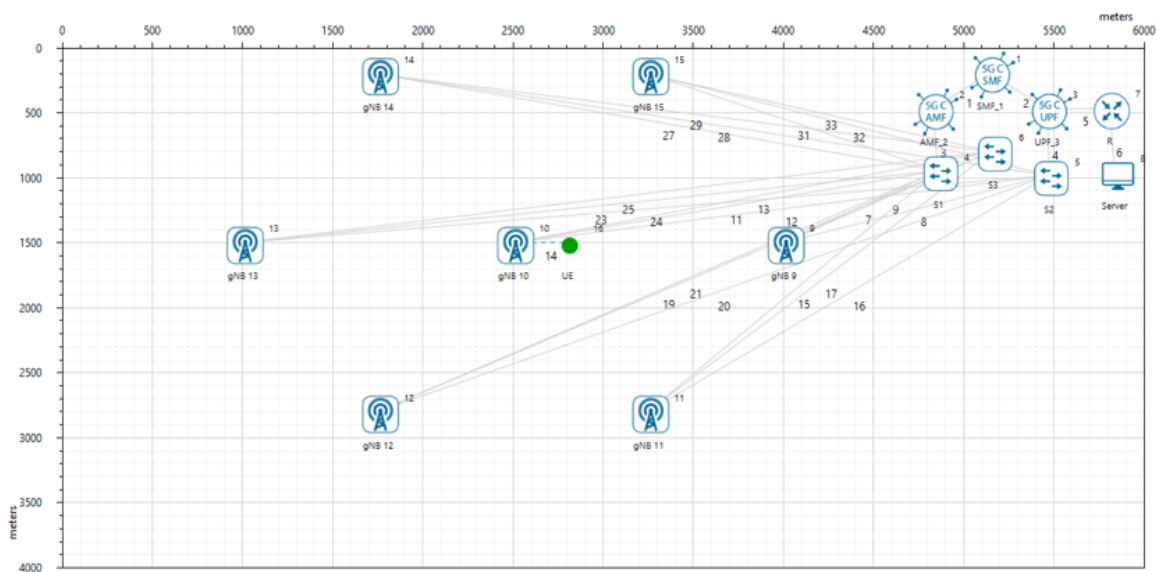


Figure 4-9: Equivalent scenario in NetSim. In this network setup to study how Pathloss, SINR, and MCS vary with distance

Settings done in example config file

- Set distance between all gNB as 1500m
- Set the gNB properties as follows. To configure it, click on gNB. On the right side, expand the property panel, go to the physical layer of the Interface (RAN) layer, and set the properties below

Table 4-4: gNB > Interface (5G RAN) > Physical layer properties

Properties	
CA Configuration	n78
Antenna	
TX Antenna Count	1
RX Antenna Count	1
Channel Model	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban macro
LOS NLOS Selection	User defined
LOS Probability	0
Shadow Fading Model	None
Interference Model	
Downlink Interference Model	Exact geometric model

- Set TX Antenna and RX Antenna as 1 in UE properties > Interface (5G RAN) > Physical Layer.

- In the Device Position Properties of UE, set Mobility Model as File Based Mobility

The NetSim Mobility File (mobility.csv) is configured as follows:

Table 4-5: The values set in the Mobility.csv file. The Y value remains constant while the X value is increased to configure movement towards the east.

#Time(s)	Device ID	X	Y	Z
2	16	2600	1500	0
4	16	2700	1500	0
6	16	2800	1500	0
8	16	2900	1500	0
10	16	3000	1500	0
12	16	3100	1500	0
14	16	3200	1500	0
16	16	3300	1500	0
18	16	3400	1500	0
20	16	3500	1500	0

- Create a CBR application between Wired Node 8 and UE 16 from the set traffic tab in the ribbon on top. Click on the created application, and in the right-side property panel, set the transport protocol to UDP, keeping the other application properties as default.
- The LTENR Radio measurement log file must be enabled from the design window.
- LTENR Radio measurement Log can be enabled by clicking on the icon in Configure Reports > Plots > Network Logs option as shown below

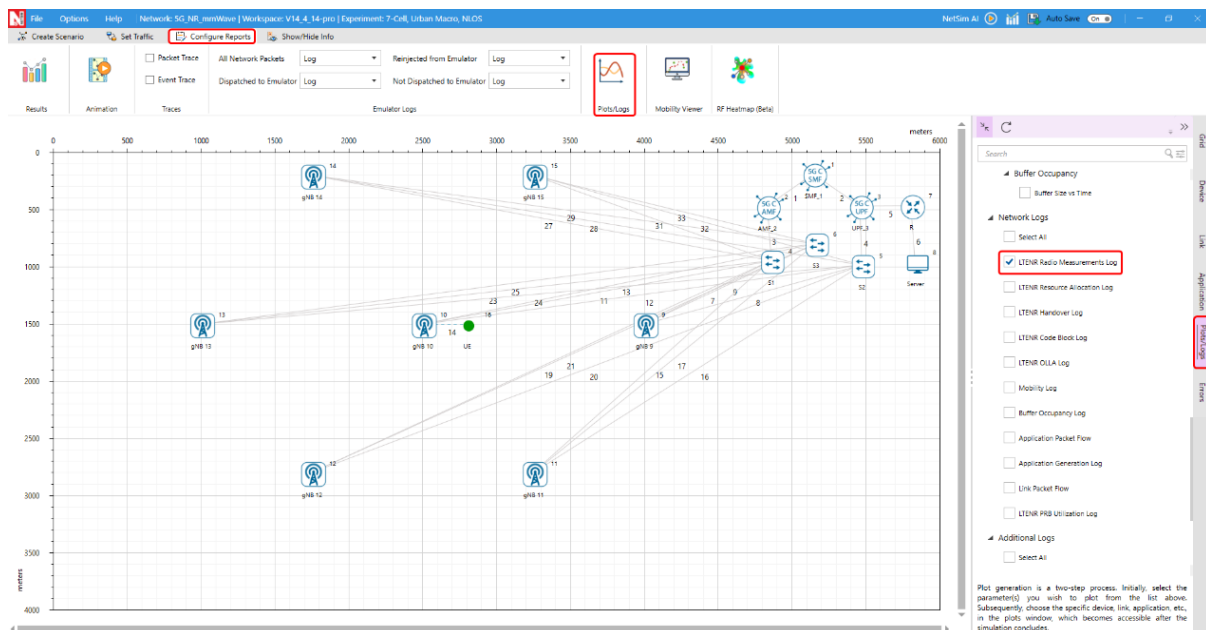


Figure 4-10: Enabling LTENR Radio Measurements Log.

- Run simulation for 20s, after the simulation completes Go to results window click on logs options and open LTENR Radio Measurement Log.csv and note down the Pathloss, SINR and MCS.

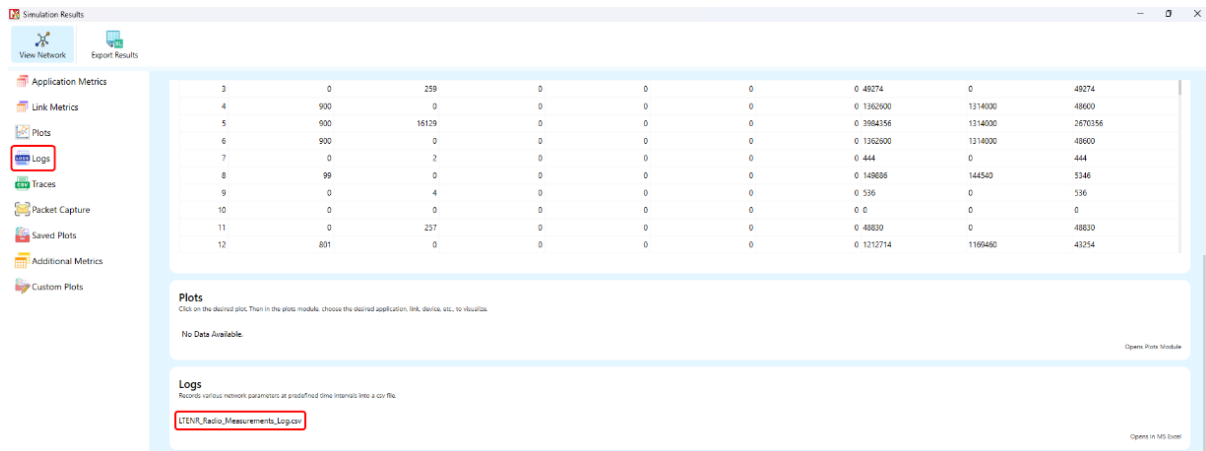


Figure 4-11: Results window

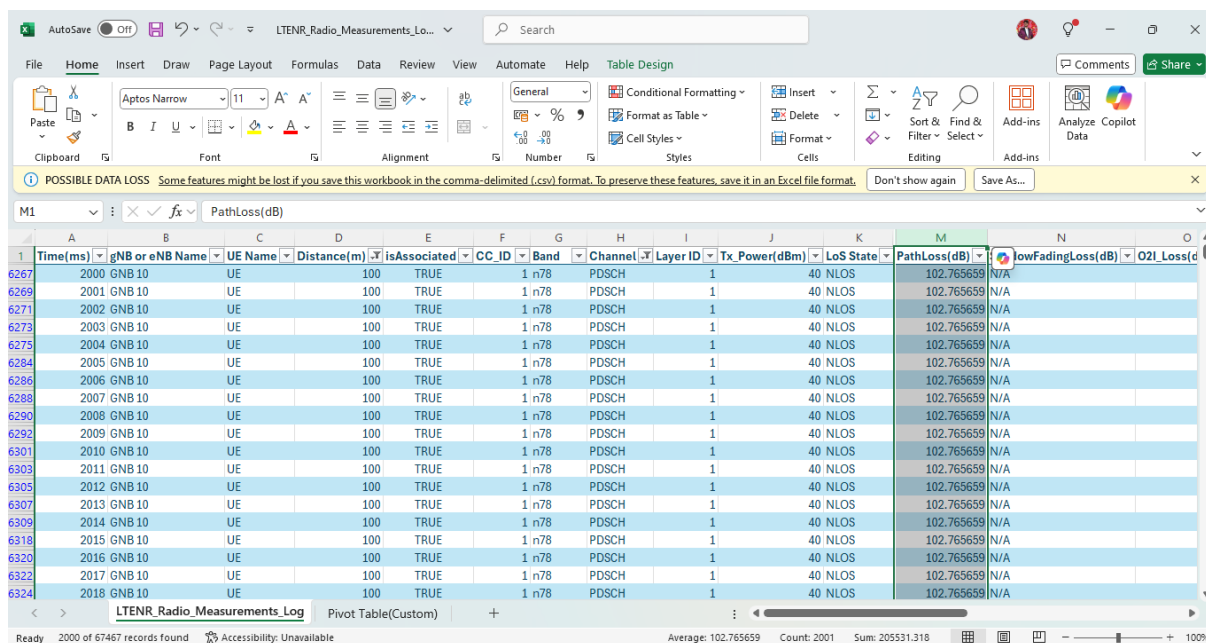


Figure 4-12: LTENR Radio Measurement log.csv file

Filter channel to PDSCH, and vary the distance by filtering to 100, 200, 300, 400, 500, 600, 700, 800 and 900. Record the Pathloss, SINR, and MCS values from the log file.

Results

Table 4-6: Results for Pathloss vs Distance, SINR vs Distance, MCS vs Distance

Distance (m)	Pathloss (dB)	SINR (dB)	MCS
100	102.7656	36.2866	27
200	114.4841	24.4183	27
300	121.3573	17.2854	21
400	126.2369	12.0169	15
500	130.0228	7.6774	11
600	133.1164	3.86867	6
700	135.7322	0.1114	3
800	137.9982	-3.6469	1
900	139.9971	-7.6709	0

As the UE moves away from gNB 10 along the defined mobility path, the signal quality gradually decreases due to increasing pathloss. Initially, at close proximity (100–200 meters), the SINR remains high, supporting a high Modulation and Coding Scheme (MCS) index of 27, which enables maximum throughput. However, as the distance increases, the signal experiences significant attenuation. By the time the UE reaches 500 meters, the SINR drops to 7.68 dB and the MCS reduces to 11, indicating reduced spectral efficiency. Beyond this point, the SINR continues to decline rapidly, becoming negative past 700 meters. At 900 meters, the SINR falls to -7.67 dB and the MCS drops to 0, meaning the UE can no longer sustain a viable communication link with gNB 10. This point effectively marks the edge of the gNB’s coverage area, beyond which the UE must perform a handover to a neighboring cell or face radio link failure.

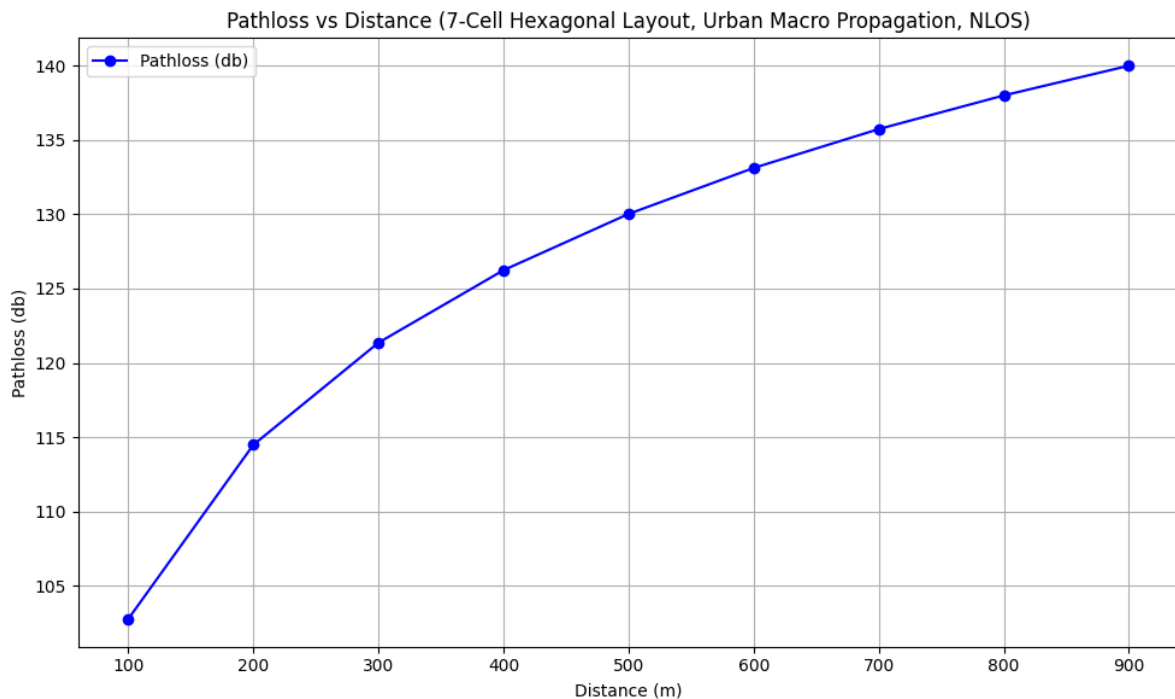


Figure 4-13: Pathloss vs Distance – As the UE moves farther from the gNB, signal attenuation increases, leading to higher pathloss values.

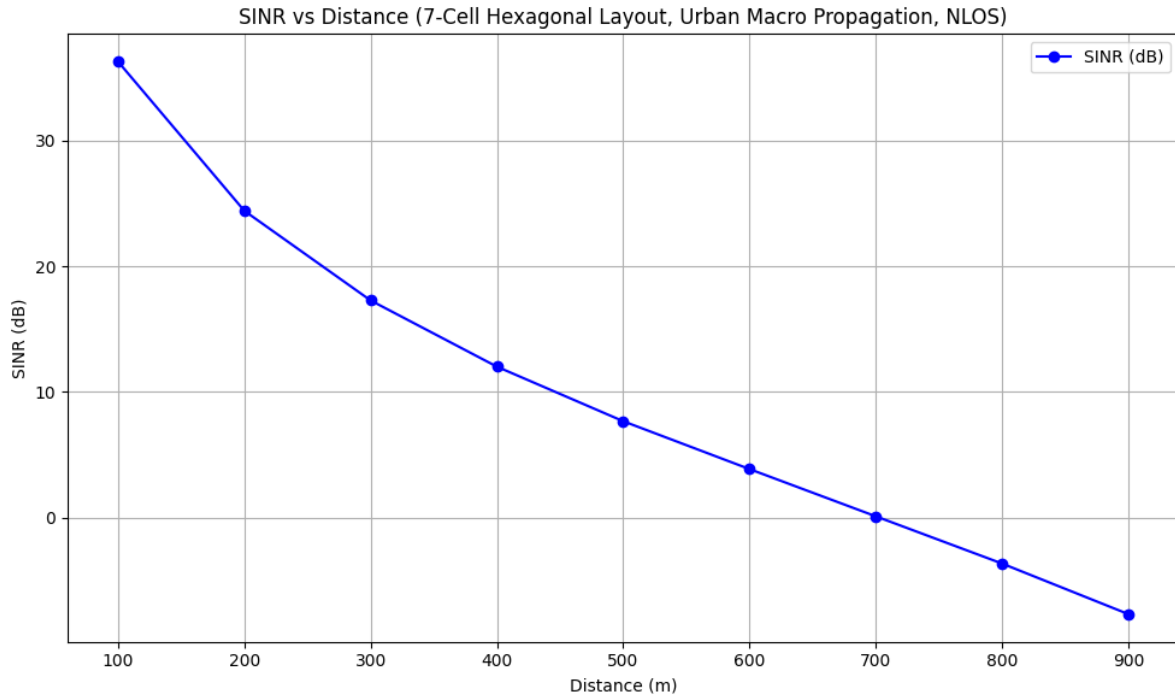


Figure 4-14: SINR vs Distance – The SINR is highest when the UE is near the gNB and progressively decreases with increasing distance, reflecting the impact of signal degradation and rising interference from neighboring cell.

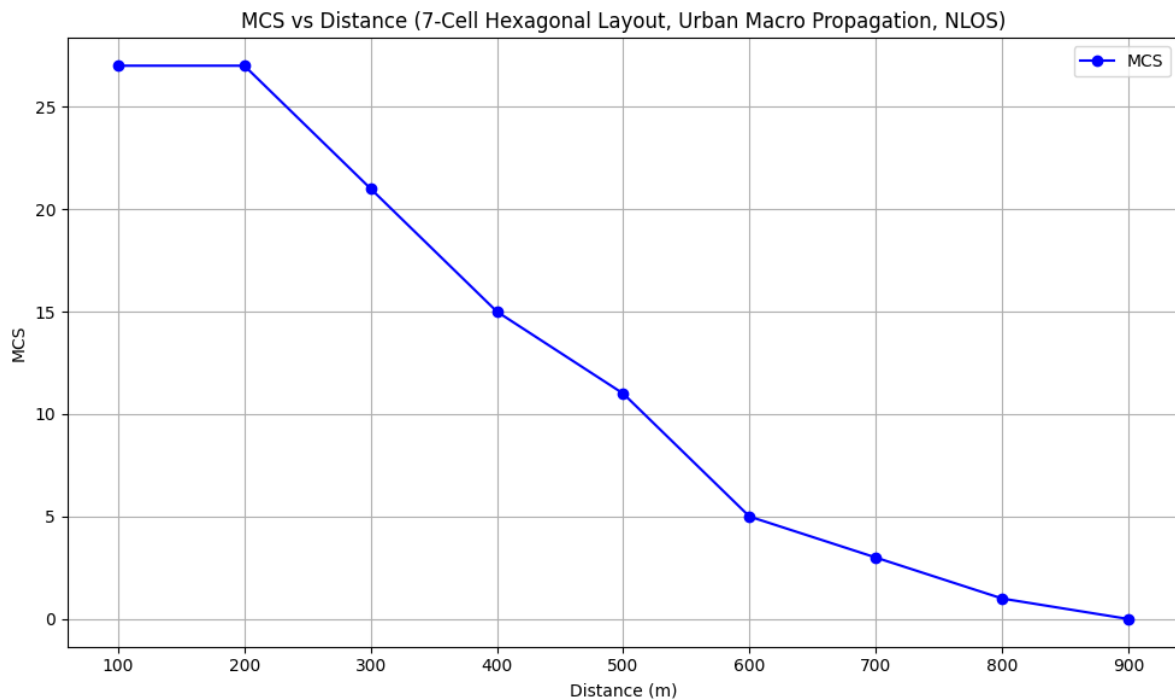


Figure 4-15: MCS vs Distance – As the UE moves farther from the gNB and signal quality declines, the MCS value decreases. This reflects the network’s adaptive modulation strategy to maintain reliable communication at lower data rates.

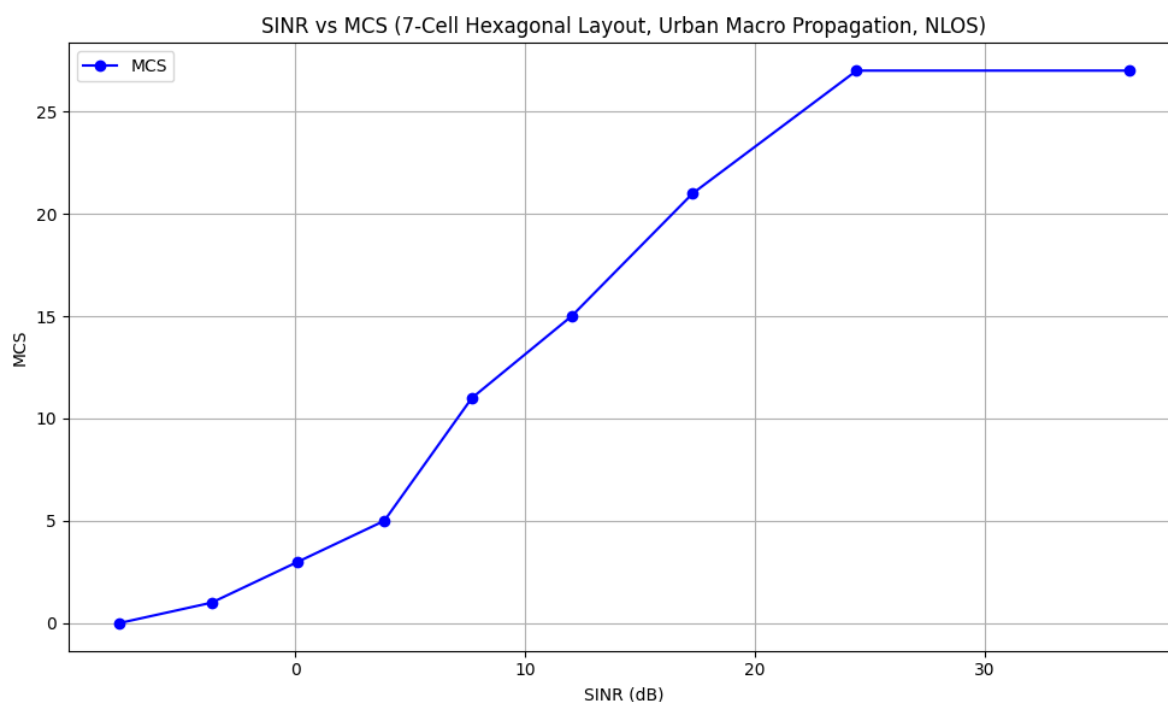


Figure 4-16: *MCS vs SINR – The graph illustrates the relationship between SINR and MCS. At higher SINR the link adapts to a higher MCS and at a lower SINR the link adapts to a lower MCS. The highest MCS per 3GPP standards is MCS 28.*

CQI Interpretation and MCS Selection Using 3GPP 38.214

The 3GPP standards Spectral Efficiency vs. MCS table is used to select the appropriate MCS (Modulation and Coding Scheme). This selection can be based on the 64QAM, 256QAM, or 64QAMLOWSE table, depending on the configuration chosen by the user. In this example, we have used the 256QAM table.

The CQI (Channel Quality Indicator) indices and their corresponding interpretations are taken from 3GPP 38.214 Table 5.2.2.1-3, which defines CQI reporting for QPSK, 16QAM, 64QAM, and 256QAM.

It is recommended that users configure the same MCS table for both PDSCH (Physical Downlink Shared Channel) and PUSCH (Physical Uplink Shared Channel)

Table 4-7: *Spectral efficiency to MCS table defined in 3GPP Standards for 256 QAM.*

MCS	Modulation	SINR (dB)	Spectral Efficiency	CQI
27	256QAM	36.28	7.4063	15
25	256QAM	21.98	6.9141	14
23	256QAM	20.52	6.2266	13
21	256QAM	17.28	5.5547	12
19	64QAM	15.56	5.1152	11
17	64QAM	14.49	4.5234	10
15	64QAM	12.01	3.9023	9
13	64QAM	10.64	3.3223	8
11	64QAM	7.67	2.7305	7
9	16QAM	7.09	2.4063	6
7	16QAM	5.88	1.9141	5
5	16QAM	3.80	1.4766	4
3	QPSK	0.11	0.8770	3
1	QPSK	-3.64	0.3770	2
0	QPSK	-7.67	0.1523	1

In 5G networks, Modulation and Coding Scheme (MCS) plays a critical role in determining the spectral efficiency, which is a measure of how efficiently the available bandwidth is used to transmit data. The 3GPP specifications, particularly 38.214, define a mapping between MCS indices and their corresponding modulation orders and coding rates. Each MCS index corresponds to a specific spectral efficiency value, calculated based on the number of bits per symbol and the applied coding rate. For example, a low MCS index such as 0 uses QPSK with a low coding rate, resulting in low spectral efficiency but high robustness, while a high MCS index like 27 or 28 uses 256-QAM with a high coding rate, achieving high spectral efficiency suitable for strong channel conditions. This standardized mapping ensures that 5G systems can dynamically adapt transmission parameters to channel quality, maximizing throughput while maintaining reliability.

4.3 Effect of UE distance on throughput in FR1 and FR2

In this example we understand how the downlink UDP throughput of a UE varies as its distance from a gNB is increased. Open NetSim, Select Examples → 5G NR → Distance vs Throughput then click on the tile in the middle panel to load the example as shown in below screenshot.

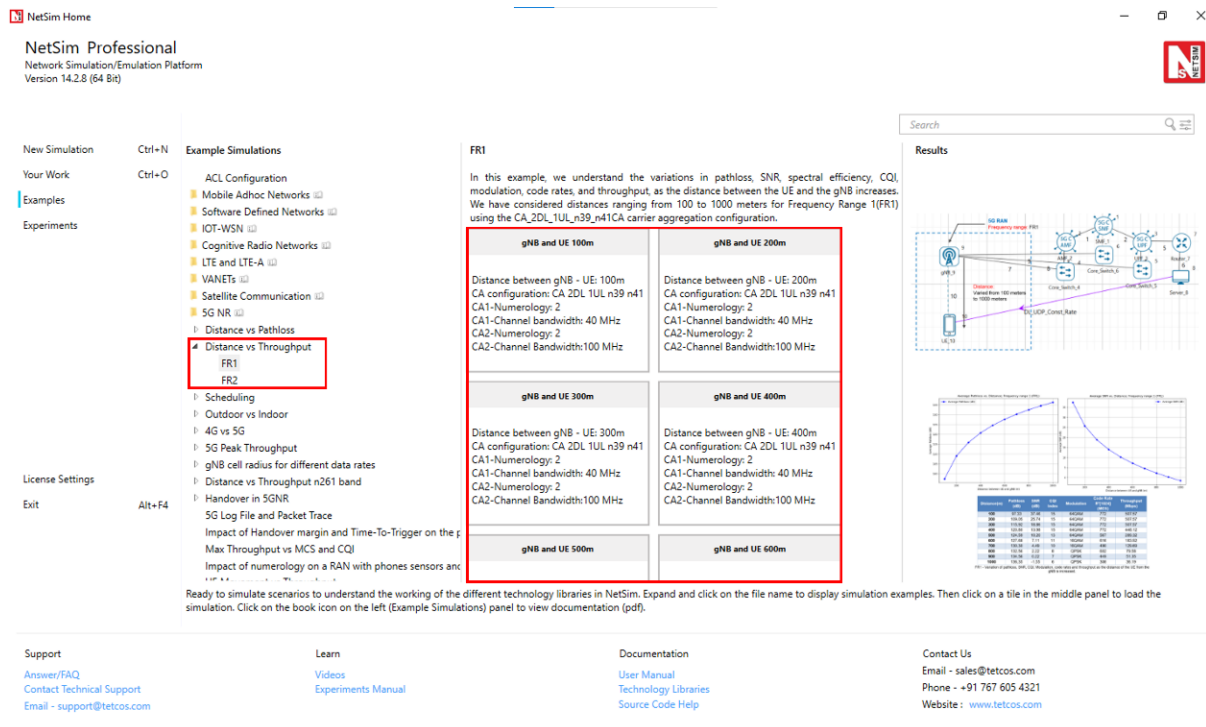


Figure 4-17: List of scenarios for the example of Distance vs Throughput

The following network diagram illustrates what the NetSim UI displays when you open the example configuration file.

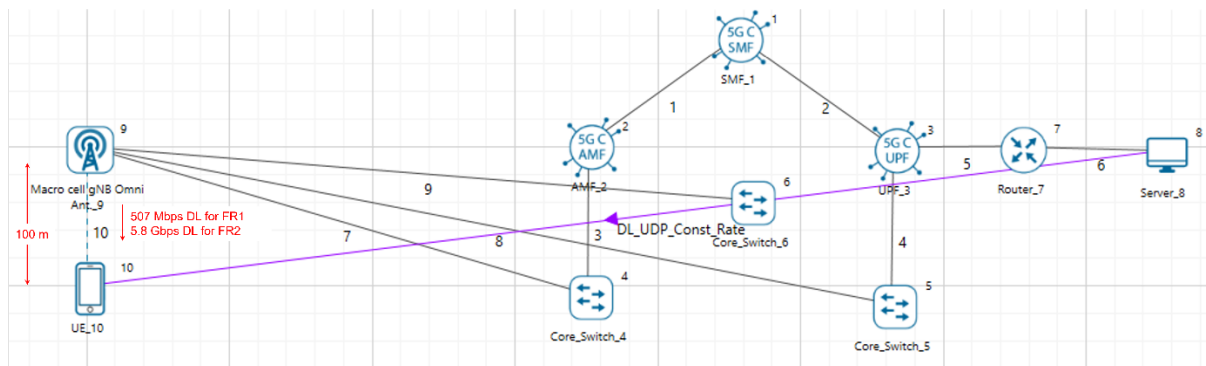


Figure 4-18: Network setup for studying the Distance vs Throughput

4.3.1 Frequency Range - FR1

Settings done in example config file.

- Set grid length as 2000m × 1000m from grid setting property panel on the right. This needs to be done before any device is placed on the grid.
- Set distance between gNB 9 and UE 10 as 100m.
- Click on gNB and expand the property panel on right side go to Interface (5G RAN) PHYSICAL LAYER, set the following properties as shown below.

Table 4-8: *gNB > Interface (5G RAN) > Physical layer properties*

Properties	
CA Type	Inter band CA
CA Configuration	CA_2DL_1UL_n39_n41
CA1	
Numerology	2
Channel Bandwidth	40 MHz
CA2	
Numerology	2
Channel Bandwidth	100 MHz
PDSCH and PUSCH Configuration	
MCS Table	QAM64LOWSE
CSI Report Configuration	
CQI Table	TABLE3
Channel Model	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS NLOS Selection	User Defined
LOS Probability	0
Shadow Fading Model	None
Fast Fading Model	No Fading

- Set Tx Antenna Count and Rx Antenna Count in gNB as 2 and 2.
- Set Tx Antenna Count and Rx Antenna Count in UE as 2 and 2.
- Go to Application properties and set the following properties as shown below.

Table 4-9: *Application properties*

Application Properties	
Source Id	8
Destination Id	10
QoS	UGS
Transport Protocol	UDP
Packet Size	1460 Bytes
Inter Arrival time	23 μ s
Start Time	1 s

- The LTENR Radio measurement log file must be enabled from the design window.
- LTENR Radio measurement Log can be enabled by clicking on the icon in Configure Reports > Plots > Network Logs option as shown below.

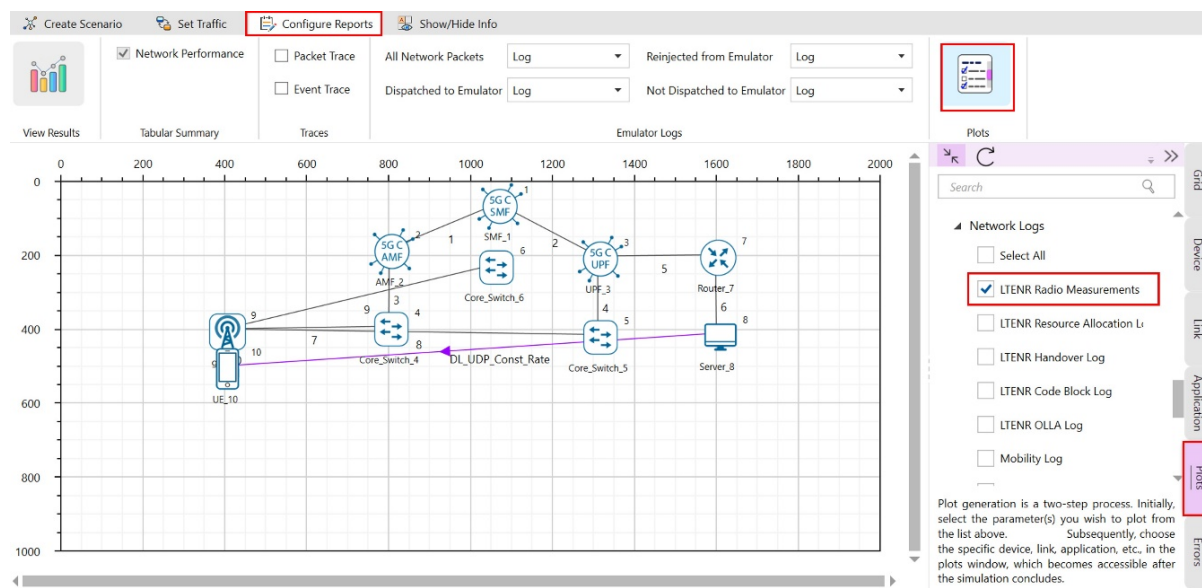


Figure 4-19: Enabling log files in NetSim GUI.

- Run Simulation for 2s, after simulation completes go to metrics window and note down throughput value from application metrics.

Go back to the scenario and change the distance between gNB and UE as 200, 300, 400, 500, 600, 700, 800, 900, and 1000m and note down throughput from the results window. The other parameters in table shown below can be noted down from the LTE NR Radio measurement logs.

4.3.2 Frequency Range - FR2

Settings done in example config file

- Set grid length as 1000m × 500m from grid setting property panel.
- Set distance between gNB 9 and UE 10 as 50m.
- Click on gNB and expand the property panel on right side go to Interface (5G RAN) PHYSICAL LAYER, set the following properties as shown below.

Table 4-10: *gNB > Interface (5G RAN) > Physical layer properties*

Properties			
Physical Layer Properties			
CA Type	Intra Band Contiguous CA		
CA Configuration	CA_n258G		
CA1,CA2	Numerology	Channel Bandwidth (MHz) per carrier	Frequency Range
	3	400	FR2
Channel Model			
Pathloss Model	3GPP TR 38.901-7.4.1		
Shadow Fading Model	None		
Fast Fading Model	No Fading		
Outdoor Scenario	Urban macro		
LOS NLOS Selection	User defined		
LOS Probability	0		
MCS Table	QAM256		
CQI Table	TABLE2		

- Set Tx Antenna Count and Rx Antenna Count in gNB as 2 and 2.
- Set Tx Antenna Count and Rx Antenna Count in UE as 2 and 2.
- Go to Application properties and set the following properties as shown below.

Table 4-11: *Application properties*

Application Properties	
Source Id	8
Destination Id	10
QoS	UGS
Transport Protocol	UDP
Packet Size	1460 Bytes
Inter Arrival time	2 μ s
Start Time	1s

- The LTENR Radio measurement log file can be enabled as per the information provided above in Step 7.
- Run Simulation for 1.05s, after simulation completes go to results window and note down throughput value from application metrics.

Go back to the scenario and change the distance between gNB and UE as 50, 100, 150, and 200 and note down throughput from the results window. The other parameters in the table shown below can be noted down from the LTENR Radio Measurement log.csv.

Results

NOTE: Filter the CC ID to 1 in the LTENR Radio measurement log file and same values have been considered in the tables given below. (SNR and CQI are shown for downlink Layer1).

Table 4-12: *FR1 - Variation of pathloss, SNR, CQI, Modulation, code rates and throughput as the distance of the UE from the gNB is increased.*

Distance (m)	Pathloss (dB)	SNR (dB)	CQI Index	Modulation	Code Rate R×[1024] (MCS)	Throughput (Mbps)
100	97.33	37.46	15	64QAM	772	507.57
200	109.05	25.74	15	64QAM	772	507.57
300	115.92	18.86	15	64QAM	772	507.57
400	120.80	13.98	15	64QAM	772	490.03
500	124.59	10.20	13	64QAM	567	336.59
600	127.68	7.11	11	16QAM	616	214.43
700	130.30	4.49	10	16QAM	490	131.36
800	132.56	2.22	8	QPSK	602	86.04
900	134.56	0.22	7	QPSK	449	56.09
1000	136.35	-1.55	6	QPSK	308	40.72

Table 4-13: *FR 2 - Variation of pathloss, SNR, MCS, Modulation, code rates and throughput as the distance of the UE from the gNB is increased.*

Distance (m)	Pathloss (dB)	SNR (dB)	MCS Index	Modulation	Code Rate R×[1024] (MCS)	Throughput (Mbps)
50	108.43	16.36	20	256QAM	682.5	2860.89
100	120.01	4.77	7	16QAM	490	1025.50
150	126.86	-2.06	2	QPSK	193	296.90
200	131.73	-6.94	0	QPSK	120	107.92

Increase in distance leads to an increase in pathloss, which in turn hence leads to lower received power (and lower SNR). The lower SNR leads to a lower MCS, in turn a lower CQI and thereby results in lower throughputs. The drop for FR2 happens at a much faster rate in comparison to FR1. Note that the number of information bits is obtained from the Transport Block Size Determination calculations given in 3.9.15. The throughput would depend on the TBS.

4.4 Impact of MAC Scheduling algorithms on throughput, in a multi-UE scenario

In this example we understand how the scheduling algorithm affects the UDP download throughput of a multi-user (UE) system where the UEs are at different distances from the gNB. Open NetSim, Select Examples → 5G NR → Scheduling then click on the tile in the middle panel to load the example as shown in below screenshot

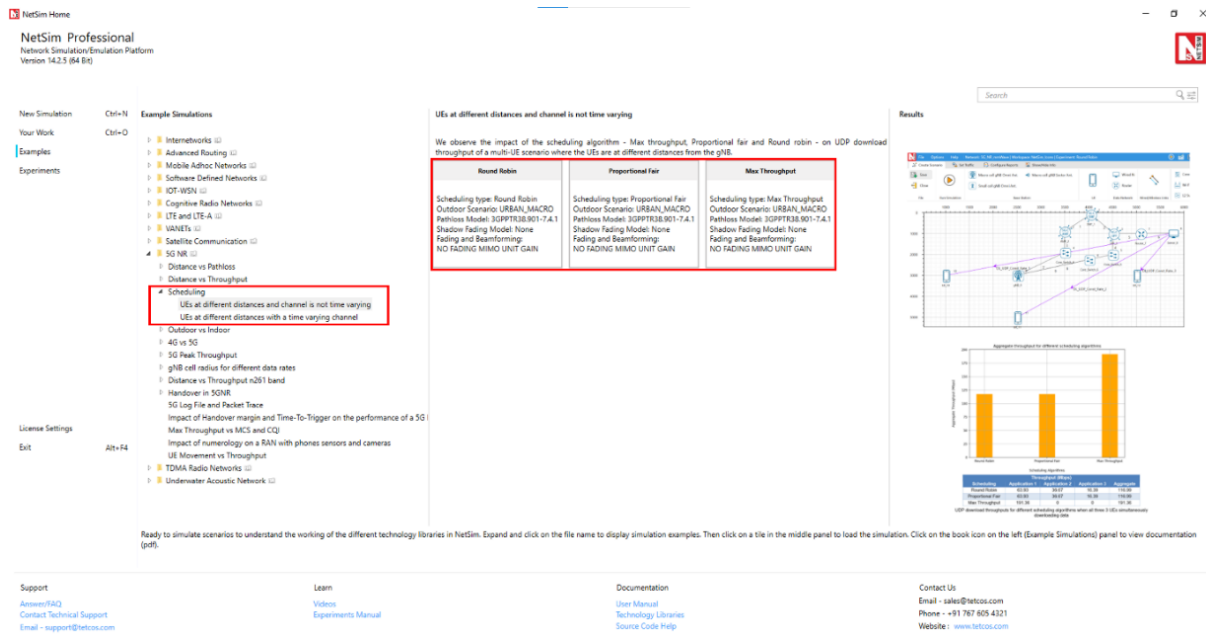


Figure 4-20: List of scenarios for the example of Scheduling

4.4.1 Multi UE throughput with UEs at different distances and channel is not time varying.

The following network diagram illustrates what the NetSim UI displays when you open this example configuration file.

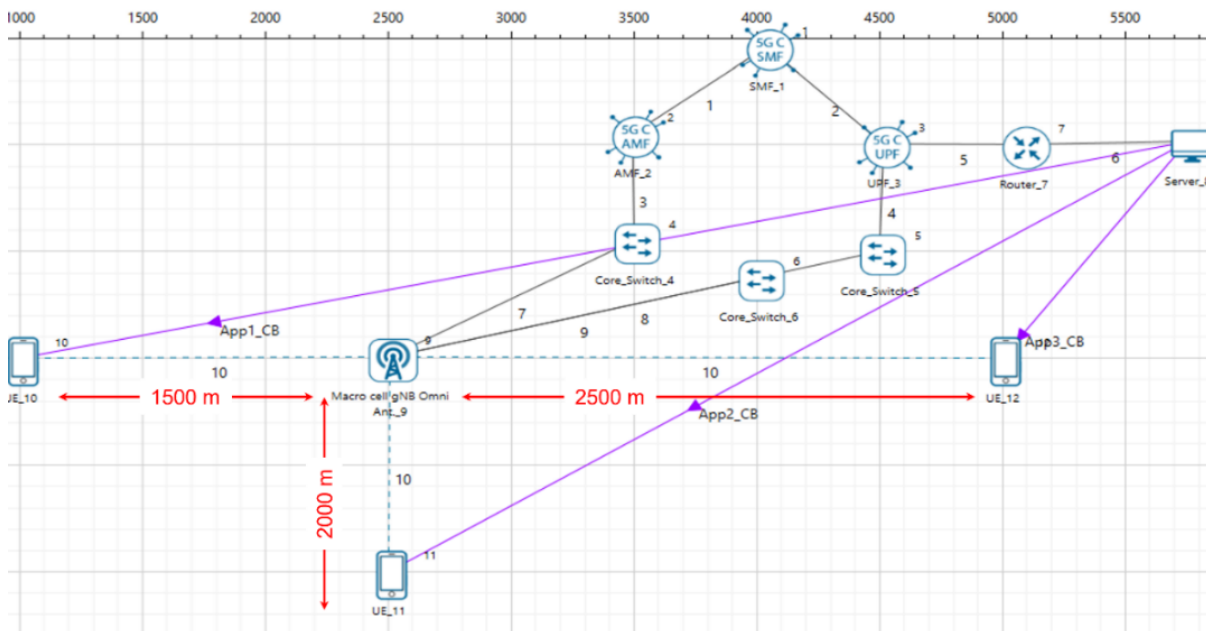


Figure 4-21: Network set up for studying the Scheduling example.

Configuring the scheduling algorithm, and parameter settings in example config files

- Set grid length as 12000m × 6000m from grid property panel on the right.
- Set distance as follows.

- gNB 9 to UE 10 = 1500m
- gNB 9 to UE 11 = 2000m, and
- gNB 9 to UE 12 = 2500m
- Go to gNB properties → Interface (5G RAN), set the following properties as shown below. In the first sample the scheduling type is set to Round Robin, in the second to Proportional fair, and in the third to Max throughput.

Table 4-14: *gNB > Interface (5G RAN) > Datalink and Physical layer properties*

Properties

Datalink Layer Properties

Scheduling Type Varies: Proportional Fair, Max throughput, Round Robin

Physical Layer Properties

CA type Single Band

CA Configuration n78

CA1

Numerology 1

Channel Bandwidth 100 MHz

Channel Model

Pathloss Model 3GPP TR 38.901-7.4.1

Outdoor Scenario Urban macro

LOS NLOS Selection User defined

LOS Probability 1

Shadow Fading Model None

Fast Fading Model No Fading

- Set Tx Antenna Count as 1 and Rx Antenna Count as 1 in gNB properties.
- Set Tx Antenna Count as 1 and Rx Antenna Count as 1 in all the UEs.
- Go to the Set Traffic tab in the top ribbon and create a CBR application as shown in the table below. To change the transport protocol, QoS, and IAT, click on the application and change the properties in the right-side property panel.

Table 4-15: *Application properties*

Application Properties	Application 1	Application 2	Application 3
Application Type	CBR	CBR	CBR
Source ID	8	8	8
Destination ID	10	11	12
QoS	UGS	UGS	UGS
Transport Protocol	UDP	UDP	UDP
Packet Size	1460 Bytes	1460 Bytes	1460 Bytes
Inter-arrival time	58.4 μ s	58.4 μ s	58.4 μ s
Start Time	1s	1s	1s

- Run Simulation for 10 s and note down throughput value in the results window in each sample. Recall that each sample has a different scheduling algorithm configured.

Results and discussions

The results with all the three UEs simultaneously downloading data is as given below.

Table 4-16: UDP download throughputs for different scheduling algorithms when all three 3 UEs simultaneously downloading data

Scheduling	Application 1	Application 2	Application 3	Aggregate
Round Robin	64.65	37.22	19.59	121.46
Proportional Fair	64.65	37.23	19.59	121.46
Max Throughput	193.94	0.00	0.00	193.94

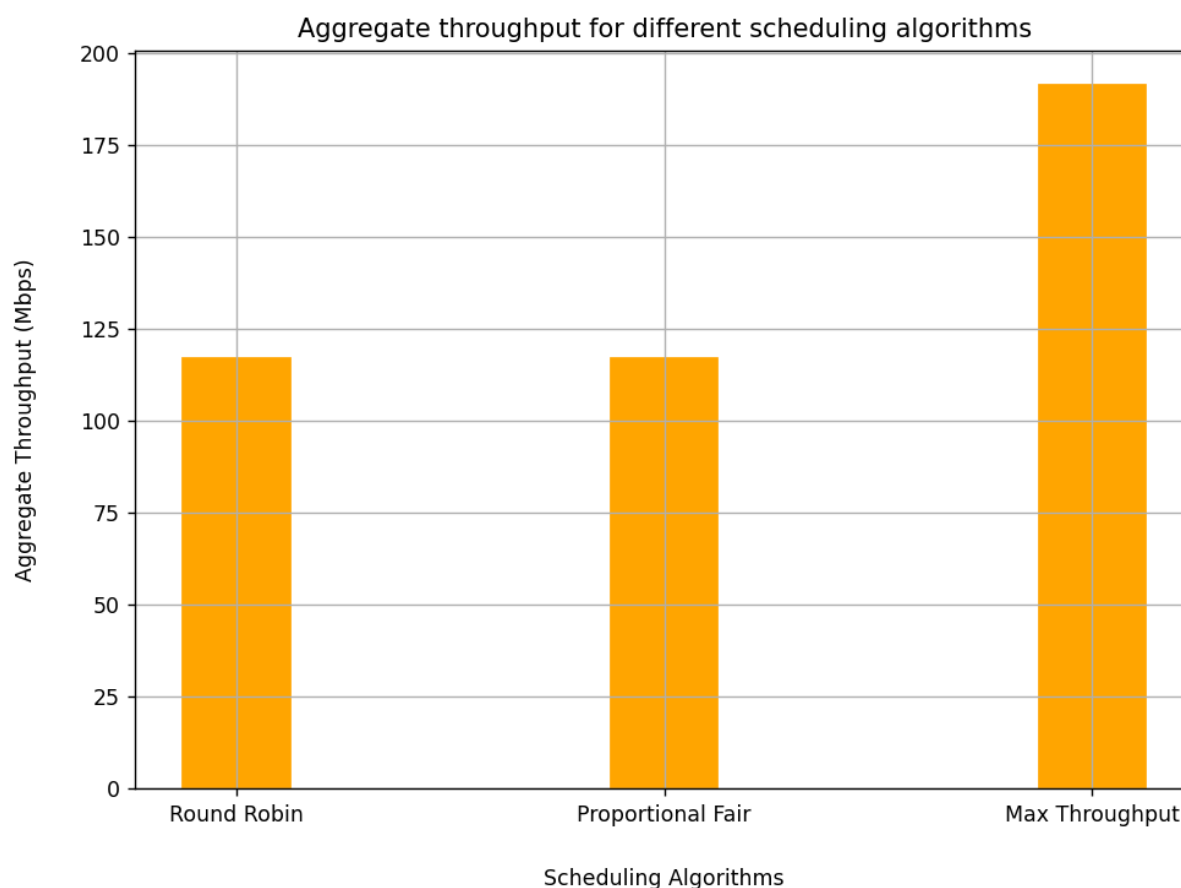


Figure 4-22: Aggregate throughput for different scheduling algorithms

Next, consider a scenario with only one of the UEs seeing DL traffic (we don't provide inbuilt configuration file for this, and since it is a simple exercise for a user) First, run for the UE at 1500m, then for UE at 2000m and finally for UE at 2500m. This gives the maximum achievable throughput per node since the gNB resources (bandwidth) is not shared between 3 UEs and is fully dedicated to just one UE. The results are below.

Table 4-17: *UE throughputs if they were run standalone (without the other UEs downloading data)*

Distance from gNB (m)	Application ID	Throughput (Mbps)	Remarks
1500	1	193.94	UE 1 alone has full buffer DL traffic
2000	2	111.66	UE 2 alone has full buffer DL traffic
2500	3	49.95	UE 3 alone has full buffer DL traffic

The PHY rate is decided per the received SNR. Therefore, a UE closer to the gNB will get a higher data rate than a UE further away. In this example the distances from the gNB are such that UE12 Distance > UE11 Distance > UE10 Distance.

In Round Robin PRBs are allocated equally among all three nodes. However, throughputs are in the order UE10 Distance > UE11 Distance > UE12 Distance because of their distances from the gNB. The individual throughputs seen by each of the UEs is exactly $\frac{1}{3}$ of the throughput as shown in Table 4-17. The PF scheduler results will match that of the RR scheduler since the channel is not time varying. In Max throughput scheduling the PRBs are allocated such that the system gets the maximum download throughput. The nearest UE will get all the resources and its throughput will be 3 times the throughput of the UE which got the max throughput in RR.

4.4.2 Multi UEs at different distances with a time varying channel

Configuring the scheduling algorithm, and parameter settings will remain the same for the case below.

Changes in the gNB properties are as follows.

- Click on gNB and go to Interface (5G RAN), set the following properties as shown below. In the first sample the scheduling type is set to Round Robin, in the second to Proportional fair, and in the third to Max throughput.

Table 4-18: *gNB > Interface (5G RAN) > Physical and Datalink layer properties.*

Properties

Datalink Layer Properties

Scheduling Type Varies: Proportional Fair, Max throughput, Round Robin

Physical Layer Properties

CA Type Single Band

CA Configuration n78

CA1

Numerology 1

Channel Bandwidth 100 MHz

Channel Model

Pathloss Model 3GPP TR 38.901-7.4.1

Outdoor Scenario Urban Macro

LOS NLOS Selection User Defined

LOS Probability 1

Fast Fading Model Rayleigh

MIMO Beamforming Model Eigen

- Run Simulation for 10s and note down throughput value in the results window in each sample.
- Enable EWMA MAC throughput plot

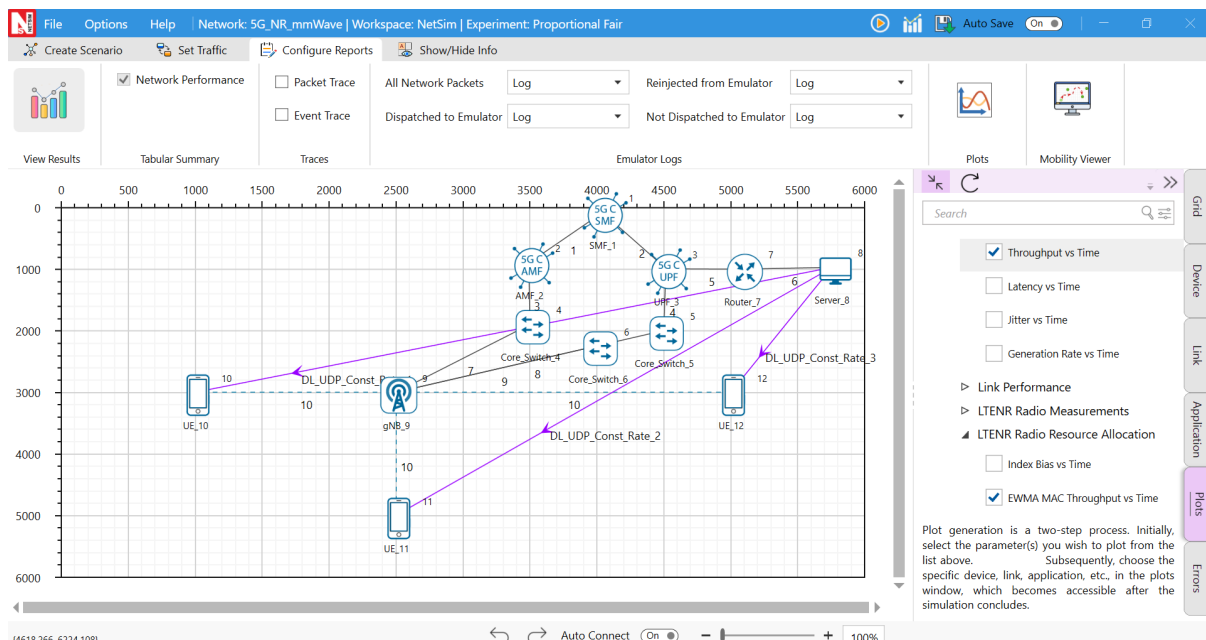


Figure 4-23: *Enabling the EWMA MAC Throughput log*

Results and discussions

The results with all the three UEs simultaneously downloading data are as given below.

Table 4-19: UDP download throughputs for different scheduling algorithms when all three 3 UEs simultaneously download data with time varying channel.

Scheduling	Application 1	Application 2	Application 3	Aggregate
Round Robin	51.58	30.06	18.34	100.00
Proportional Fair	69.82	41.95	24.73	135.50
Max Throughput	139.84	28.19	5.32	173.35

While running the Proportional fair sample enable Application throughput vs time and EWMA MAC throughput plot to observe the throughput differences.

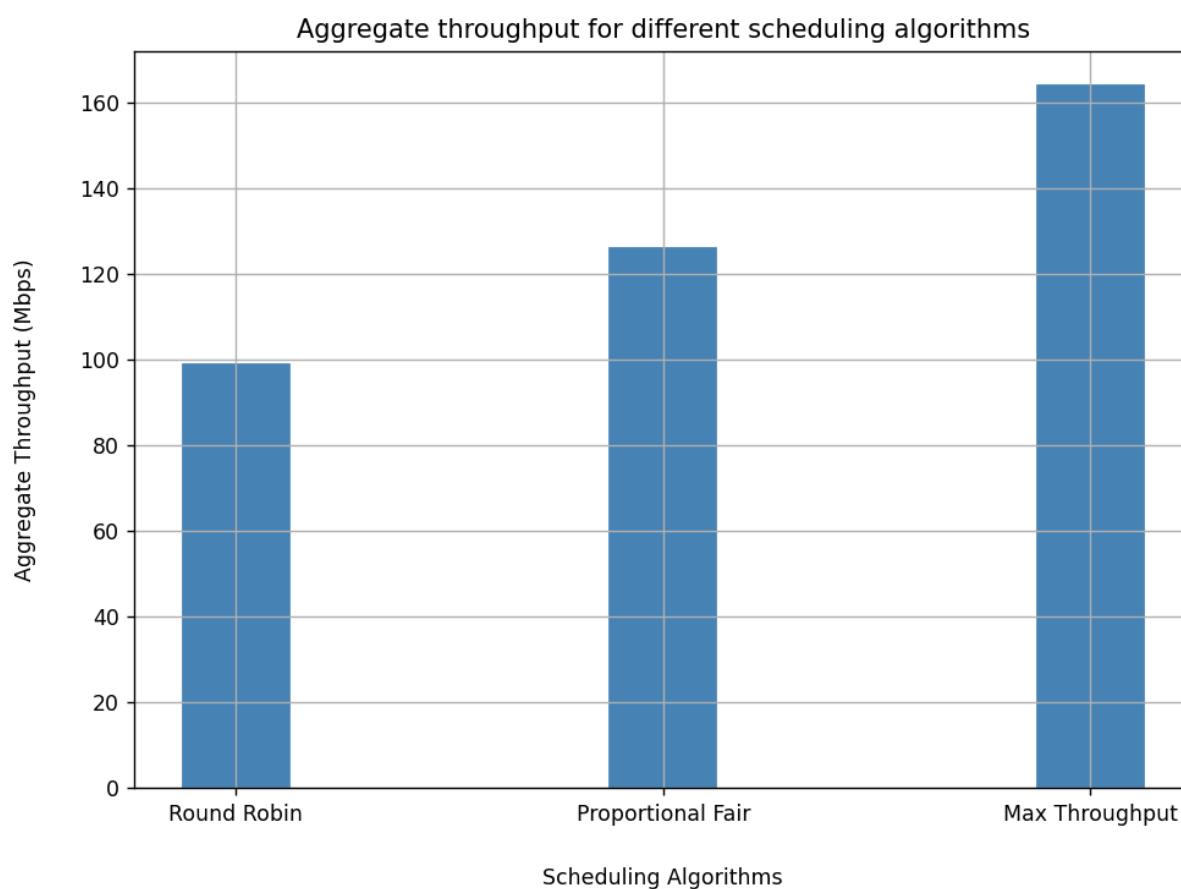


Figure 4-24: Aggregate throughput for different scheduling algorithms

A difference in the performance of the RR and PF schedulers can be seen when the channel is time varying (of the order of the coherence time which is 10ms). To induce time varying randomness in the channel we enable fading and beamforming. Thus, after every 10ms, NetSim draws an i.e. fading random variable, as the additional loss. Under these conditions, the RR scheduler would allot resources to the UEs in a round robin fashion, whereas the PF scheduler would give preference to the UE which sees the best channel (highest SINR). The reason why the RR scheduler yields lower throughputs than the PF scheduler is that the RR scheduler is not “opportunistic,” i.e., it does not take advantage of the knowledge that a UE has a good channel in the next slot and continues to serve the UEs cyclically. The results are shown in Table 4-19; observe how this is different from Table 4-17 where the channel is not time varying.

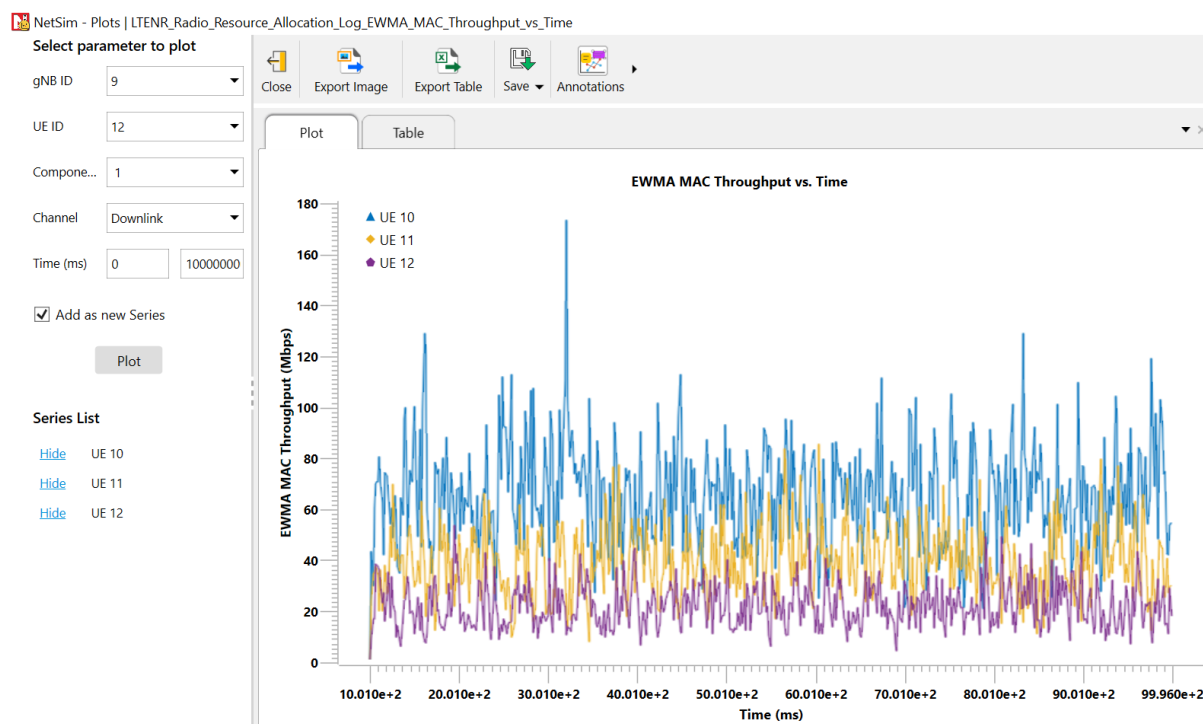


Figure 4-25: EWMA MAC throughput stacked for UE 10, UE 11, and UE 12

In the earlier results we observed the average (overtime) throughput while in Figure 4-25 we observed the MAC throughput vs Time for all 3 UEs. Key points are:

- **Channel Coherence Time:** The wireless channel fading gain changes at this time scale, causing fluctuations in the signal quality and, consequently, the achievable throughput.
- **Proportional Fair Scheduler Behavior:** The Proportional Fair (PF) scheduling algorithm aims to balance fairness and throughput by allocating resources to users based on their current channel quality relative to their average throughput

This dynamic allocation process leads to throughput variations as the scheduler continuously adjusts resource assignments to maintain fairness while exploiting favorable channel conditions. Thus, when a user experiences good channel conditions relative to their average, they receive more resources, leading to increased throughput. Conversely, when channel conditions degrade or other users are prioritized, a user's throughput will decrease. The MAC throughput would be higher than the application throughput because of the overheads of the various layers.

4.5 Max Throughput for different MCS and CQI

Open NetSim, Select Examples → 5G NR → Max Throughput vs MCS and CQI then click on the tile in the middle panel to load the example as shown in below screenshot.

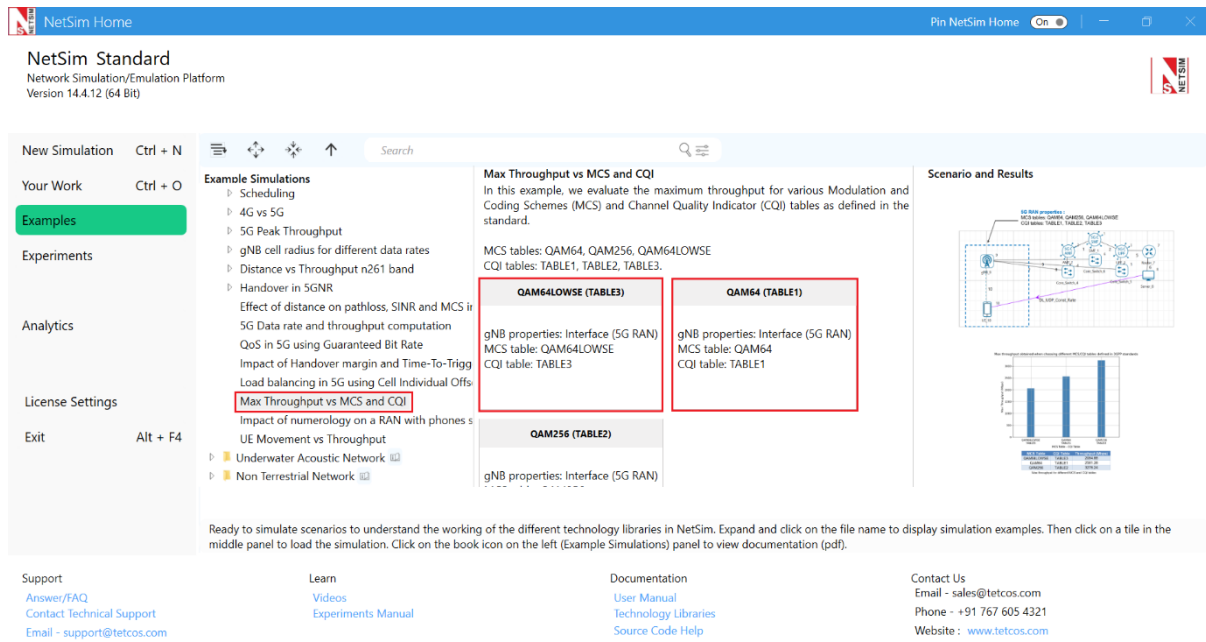


Figure 4-26: List of scenarios for the example of Max Throughput vs MCS and CQI

The following network diagram illustrates what the NetSim UI displays when you open the example configuration file.

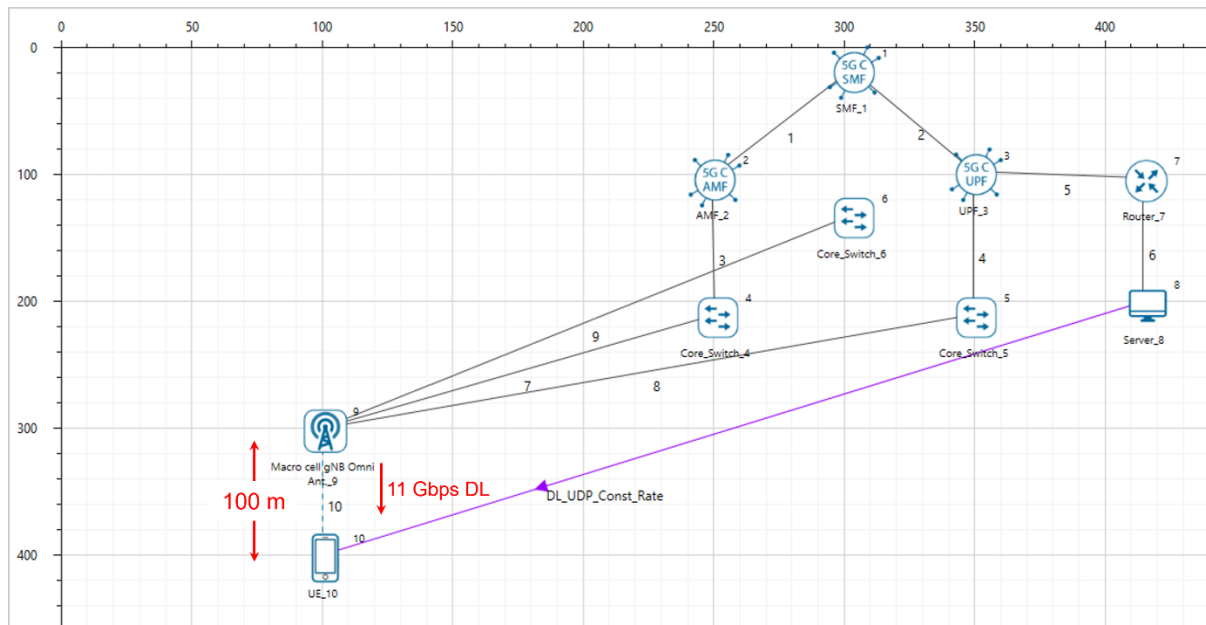


Figure 4-27: Network set up for studying the Max Throughput vs MCS and CQI

Settings done in example config file:

- Set grid length as 500m × 250m from grid property panel.
- Go to gNB properties → Interface (5G RAN), set the following properties as shown below.

Table 4-20: *gNB > Interface (5G RAN) > Physical layer properties*

Properties			
Physical Layer Properties			
CA TYPE	Intra Band Contiguous CA		
CA Configuration	CA n258G		
	Numerology	Channel Bandwidth (MHz)	Frequency Range
CA1	3	400	FR2
CA2	3	400	FR2
Pathloss Model	None		

- Go to Application properties and set the following properties as shown below.

Table 4-21: *Application properties*

Application Properties	
Source Id	8
Destination Id	10
Transport Protocol	UDP
Start Time	1 s
Packet Size	1460 Bytes
Inter Arrival time	1 μ s
Generation Rate	11680 Mbps

- Set Tx Antenna Count as 2 and Rx Antenna Count as 1 in gNB properties.
- Set Tx Antenna Count as 1 and Rx Antenna Count as 2 in UE properties.
- Run Simulation for 1.002s, after simulation completes go to results window and note down throughput and delay value from application metrics.

For this Scenario set MCS Table as QAM64LOWSE and CQI Table as TABLE3 and note down throughput.

Go Back to the Scenario and set MCS Table as QAM64 and CQI Table as TABLE1 and note down throughput.

Go Back to the Scenario and set MCS Table as QAM256 and CQI Table as TABLE2 and note down throughput.

Result:

Table 4-22: *Results Comparison.*

MCS Table	CQI Table	Throughput (Mbps)
QAM64LOWSE	TABLE3	2084.88
QAM64	TABLE1	2633.84
QAM256	TABLE2	3439.76

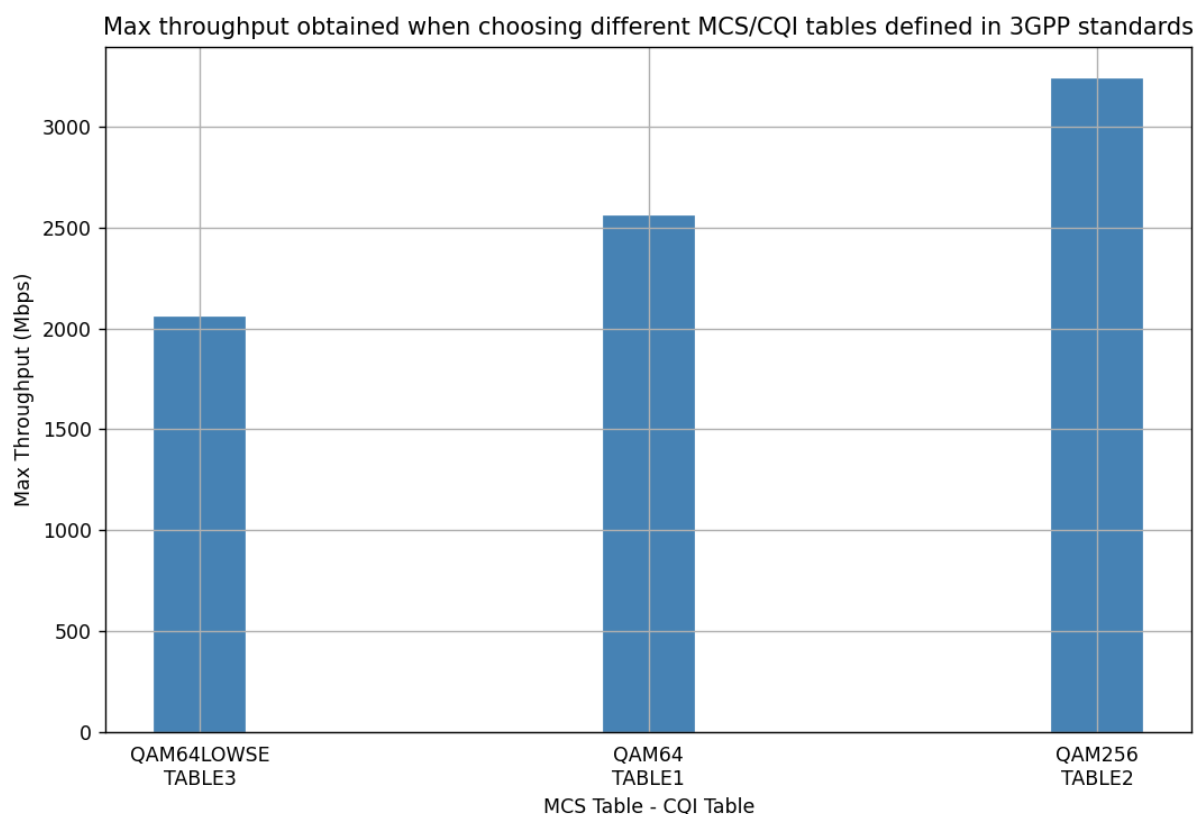


Figure 4-28: Plot for Max throughput obtained for different MCS/ CQI tables

4.6 Load balancing in 5G using Cell Individual Offset (CIO)

4.6.1 Introduction

Overview

Mobility load balancing is a 3GPP Release 17 AI/ML for NG RAN Use Case. It involves transferring load from overloaded cells to under-loaded neighboring cells, for optimizing network performance and user experience. This study describes the network setup, presents the simulation results before and after applying CIO-based load balancing, and discusses the observed outcomes.

Concept

Default Association: The default user equipment (UE) association with a base station is based on Maximum signal strength.

Load Balancing Goal: Modify the association/handover criteria to distribute network load efficiently across available cells.

Role of Cell Individual Offset (CIO)

Cell Individual Offset (CIO) is a configurable parameter used to artificially modify the signal quality measurement of a target cell during the handover evaluation process. In NetSim, the CIO value is added to the measured SINR of the candidate cell.

$$SINR_{eff} = SINR_{actual} + CIO \quad (81)$$

- A positive CIO increases the effective signal value.

- A negative CIO decreases the effective signal value.

CIO is typically applied to control handovers and implement load balancing across cells.

4.6.2 Network Setup

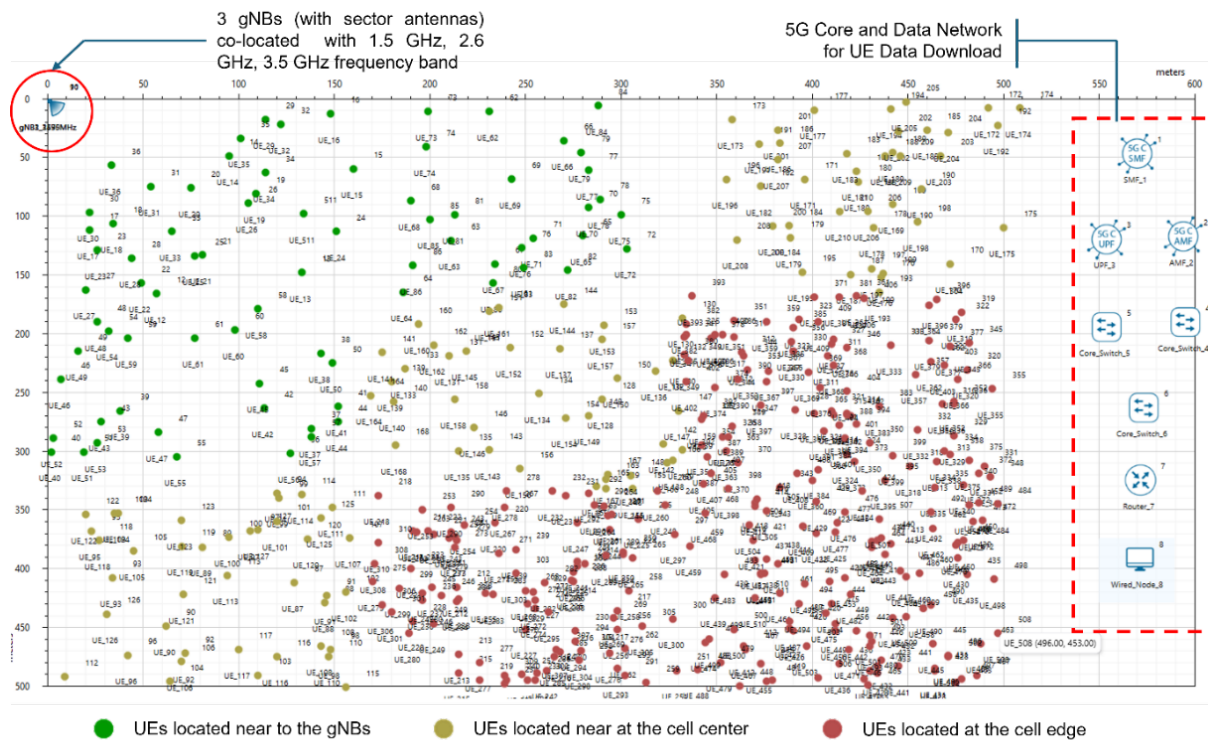


Figure 4-29: Network setup for load balancing. There is a total of 500 UEs, 75 near cell, 125 mid cell and 300 cell edge UEs. Without load balancing most of the UEs would associate with the low band (1.5 GHz) gNB given the lower path loss. We use CIO for load balancing.

4.6.3 Network Settings

- Environment size is set to 600m × 500m
- Consider three Macro cell gNB sector antennas and 500 UEs spread across the network grid such that
 - 75 UEs are located near the gNBs (represented in green)
 - 125 UEs are located near at the cell center (represented in yellow)
 - 300 UEs are located at the cell edge. (represented in red)
- The 3 gNBs (with sector antennas) are co-located at the top left with 120°.
- gNB 1 operates in the n50 (1.5 GHz band)
- gNB 2 operates in the n38 (2.6 GHz band)
- gNB 3 operates in the n78 (3.5 GHz band)

- The gNB properties and the Traffic model properties are set as follows:

Table 4-23: *Device and Application properties*

System Model and Parameters	
No of gNBs	3 (3 sector carriers)
No of UEs	500
Band	n78, n50, n38
gNB Properties	
Numerology	1
Channel Bandwidth (MHz)	40
Antenna	4T4R
Pathloss model	Log Distance
Pathloss Exponent (η)	3.8
Shadowing Model	Log Normal
Standard Deviation (dB)	5
Simulation Time (s)	10
Traffic Model	
Traffic Type	Custom
Traffic generation rate	467.2 Kbps
Packet size	1460B
Inter packet arrival time	25000 μ s (Exponential)

- Set the Cell Individual Offset present under Interface (RAN) > Datalink Layer > Handover > Cell Individual Offset as follows:
 - gNB1 1475 MHz: -4.77 dB
 - gNB2 2595 MHz: 0 dB
 - gNB3 3550 MHz: 4.77 dB.
- These negative CIO value shifts the load away from gNB1; the positive CIO value shifts the load towards gNB3.
- Enable PRB Utilization vs time Plots and Radio resource allocation log
- Run the simulation for 10 seconds.

4.6.4 Results

After simulation, plot the PRB Utilization for the three gNBs i.e., gNB1 1475MHz, gNB2 2595MHz, gNB3 3550MHz with CIO and without CIO.

- PRB Utilization vs time plot without CIO (default configuration)

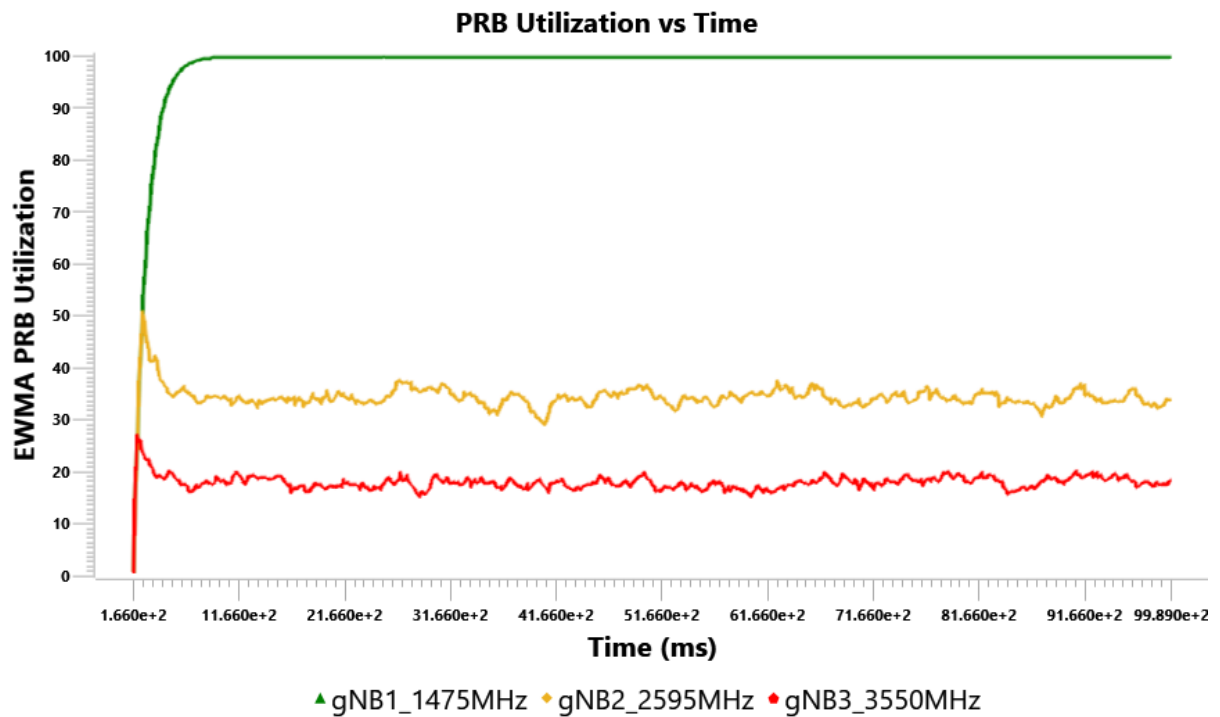


Figure 4-30: (Exponentially weighted moving) Average PRB Utilization of the 3 gNBs without load balancing

PRB Utilization vs time plot with CIO enabled

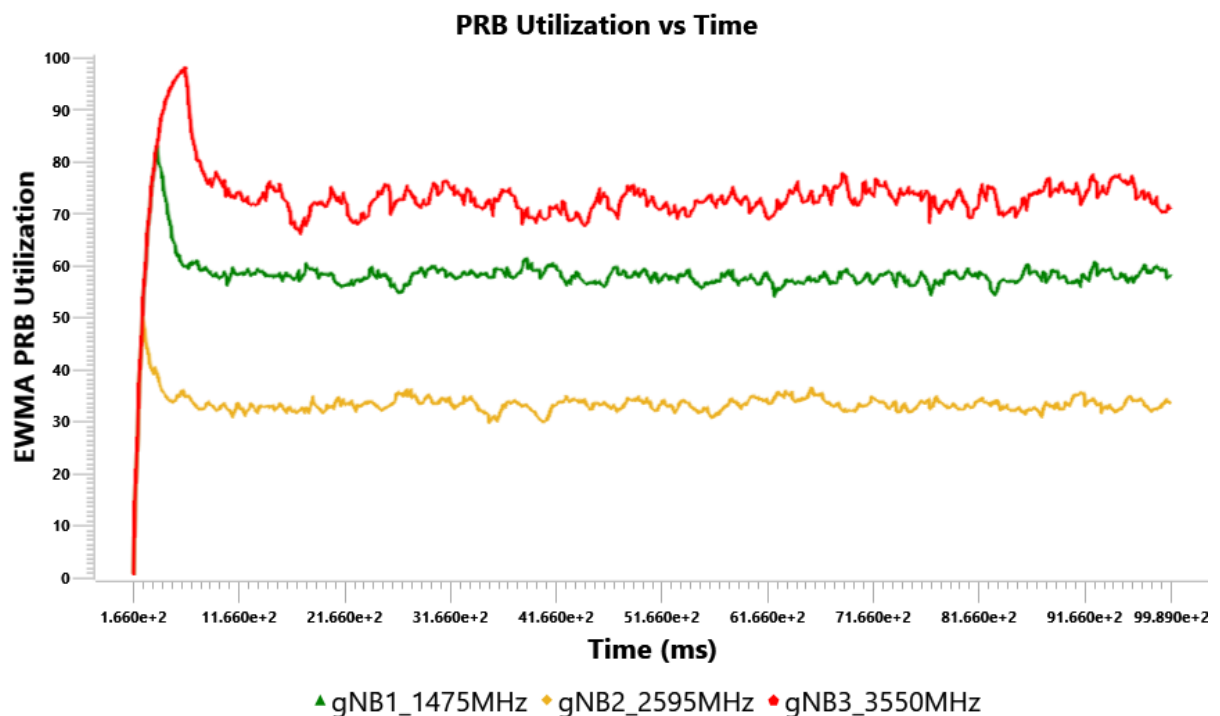


Figure 4-31: (Exponentially weighted moving) Average PRB Utilization of the 3 gNBs with load balancing

4.6.5 Discussion

These graphs show resource (PRB) usage of different 5G base stations over time, comparing scenarios with and without load balancing.

Without load balancing (Figure 4-30): Base station 1 (gNB1_1475MHz) is overloaded at ~100% while gNB2 (2575 MHz) and gNB3 (3550 MHz) are underused and operating around 30% and 25% PRB utilization respectively.

With load balancing (Figure 4-31): Resource usage is more evenly distributed across all base stations, with gNB1 around 60–70% and other gNBs operating at 30–40%.

We can observe the association of UEs with gNBs before and after load balancing.

To analyze this, we use the LTENRRadioMeasurementsLog.csv and DeviceList.xlsx files.

A Python script reads the UE association entries at two time points—initial and post-load balancing—and generates corresponding plots.

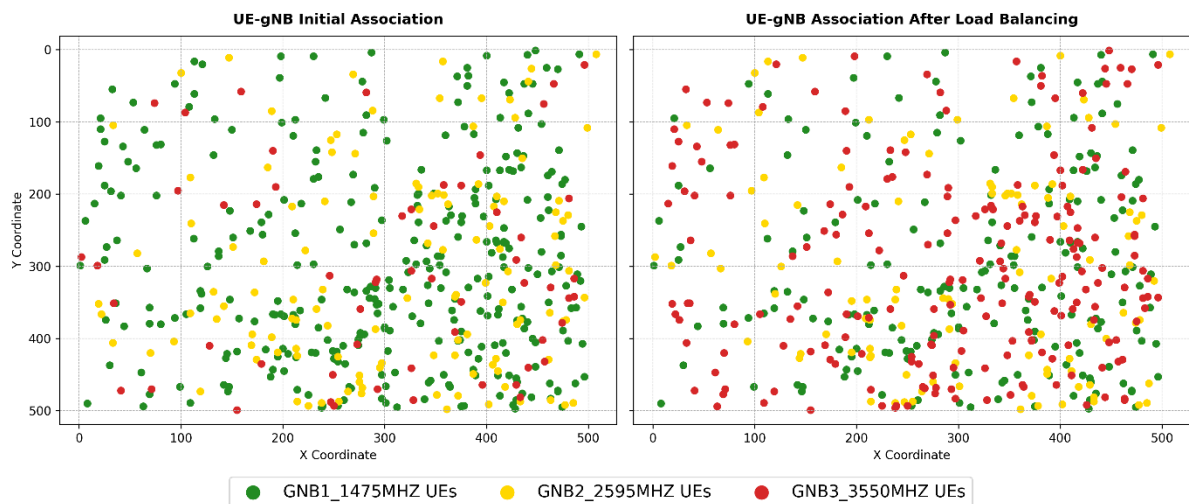


Figure 4-32: Initial UE association (left) and association after load balancing (right). The left clearly shows a higher concentration of UEs (green dots) associated with gNB1_1475MHz, which operates on the lower frequency band. The right panel shows a more uniform distribution of UEs across the three gNBs due to the CIO application

Table 4-24: Initial association count of UEs

gNB	Count of Associated UEs
gNB1 1475 MHz	321
gNB2 2595 MHz	122
gNB3 3550 MHz	57
Total	500

Table 4-25: Association count of UEs after load balancing

gNB	Count of Associated UEs
gNB1 1475 MHz	192
gNB2 2595 MHz	105
gNB3 3550 MHz	203
Total	500

Python code for data analysis and visualization

```
import pandas as pd
import matplotlib.pyplot as plt
import numpy as np
import sys
import os

def get_color_map():
    return {
        'GNB1_1475MHZ': '#228B22', # Green
        'GNB2_2595MHZ': '#FFD700', # Yellow
        'GNB3_3550MHZ': '#d62728' # Red
    }

def plot_combined_association(log_df, device_list_df, output_dir):
    snapshots = {
        161.5: 'UE-gNB Initial Association',
        220: 'UE-gNB Association After Load Balancing'
    }
    fig, axs = plt.subplots(1, 2, figsize=(14, 6), sharex=True, sharey=True)
    color_map = get_color_map()
    gnb_names = list(color_map.keys())

    all_x = device_list_df['X Pos/LON']
    all_y = device_list_df['Y Pos/LAT']
    x_min, x_max = all_x.min() - 20, all_x.max() + 20
    y_min, y_max = all_y.min() - 20, all_y.max() + 20

    for ax, (time_snapshot, title) in zip(axs, snapshots.items()):
        filtered_df = log_df[(log_df['Time(ms)'] == time_snapshot) &
                              (log_df['Channel'] == 'PDSCH') &
                              (log_df['isAssociated'] == True)]

        merged_df = pd.merge(filtered_df, device_list_df, how='left',
                              left_on='UE Name', right_on='Device Name')

        for gnb in gnb_names:
            ue_group = merged_df[merged_df['gNB or eNB Name'] == gnb]
            ax.scatter(ue_group['X Pos/LON'], ue_group['Y Pos/LAT'],
                      label=f'{gnb} UEs', s=30, marker='o',
                      color=color_map[gnb])
```

```

gnb_data = device_list_df[
    device_list_df['Device Type'].str.contains('gNB')]
for _, gnb in gnb_data.iterrows():
    ax.scatter(gnb['X Pos/LON'], gnb['Y Pos/LAT'],
               label=gnb['Device Name'], s=70, marker='^',
               color='black')

ax.set_title(title, fontweight='bold', fontsize=12, pad=10)
ax.set_xlabel('X Coordinate', fontsize=10)
ax.set_xlim(x_min, x_max)
ax.set_ylim(y_max, y_min)
ax.grid(True, linestyle='--', linewidth=0.5)

axs[0].set_ylabel('Y Coordinate', fontsize=10)
handles, labels = axs[1].get_legend_handles_labels()
fig.legend(handles, labels, loc='lower center',
           fontsize=14, ncol=3, markerscale=2)
plt.tight_layout(rect=[0, 0.08, 1, 1])
output_path = os.path.join(output_dir,
                           'combined_association_plot.png')
plt.savefig(output_path, dpi=300)
plt.close()
print(f"Combined plot saved: {output_path}")

if __name__ == '__main__':
    if len(sys.argv) != 4:
        print("Usage: python combined_association.py "
              "<log_csv_path> <device_list_excel_path> "
              "<output_directory>")
        sys.exit(1)

    log_path = sys.argv[1]
    device_path = sys.argv[2]
    output_dir = sys.argv[3]

    log_df = pd.read_csv(log_path)
    device_df = pd.read_excel(device_path)
    plot_combined_association(log_df, device_df, output_dir)

```

4.7 4G vs. 5G: Capacity analysis for video downloads

Open NetSim, Select Examples → 5G NR → 4G vs 5G then click on the tile in the middle panel to load the example as shown in below screenshot.

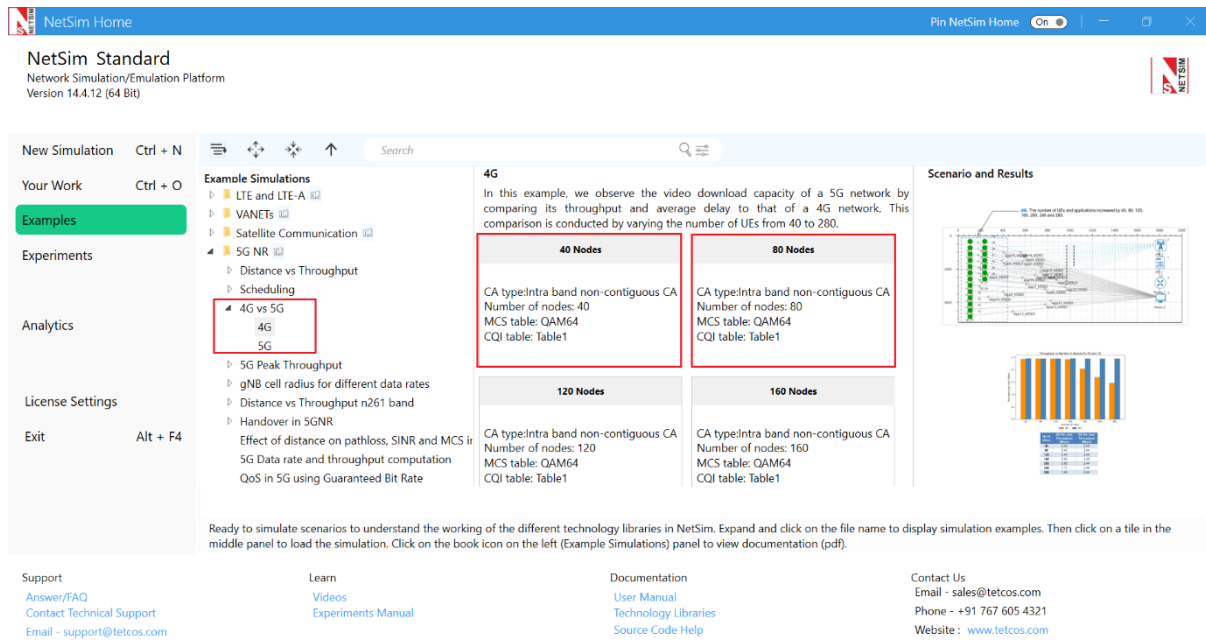


Figure 4-33: List of scenarios for the example of 4G vs 5G

4.7.1 4G

Under 4G click on 40 Nodes Sample, the following network diagram illustrates what the NetSim UI displays when you open the example configuration file.

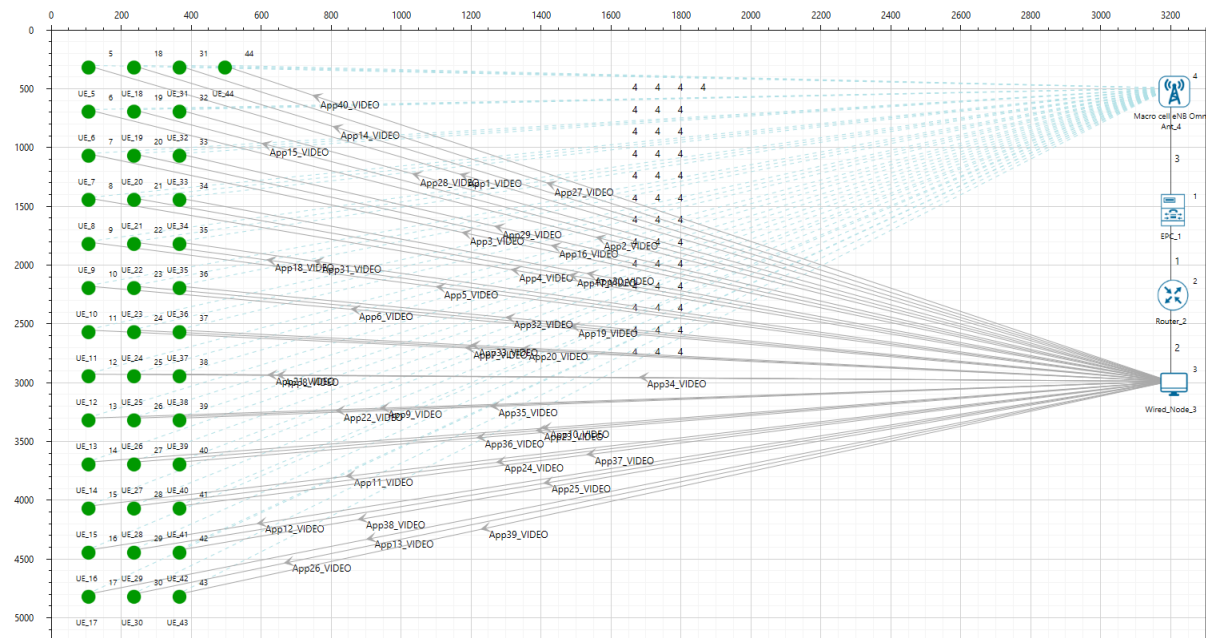


Figure 4-34: Network setup for studying the 4G

Settings done in example config file:

- Set grid length as 3300×5200m from grid property panel on the right.
- Set the following property as shown in below given Table.

Increase the number of UE’s and number of applications as 40, 80, 120, 160, 200, 240 and 280 and note down throughput and delay value from application metrics.

4.7.2 5G

Under 5G click on 40 Nodes Sample, the following network diagram illustrates what the NetSim UI displays when you open the example configuration file.

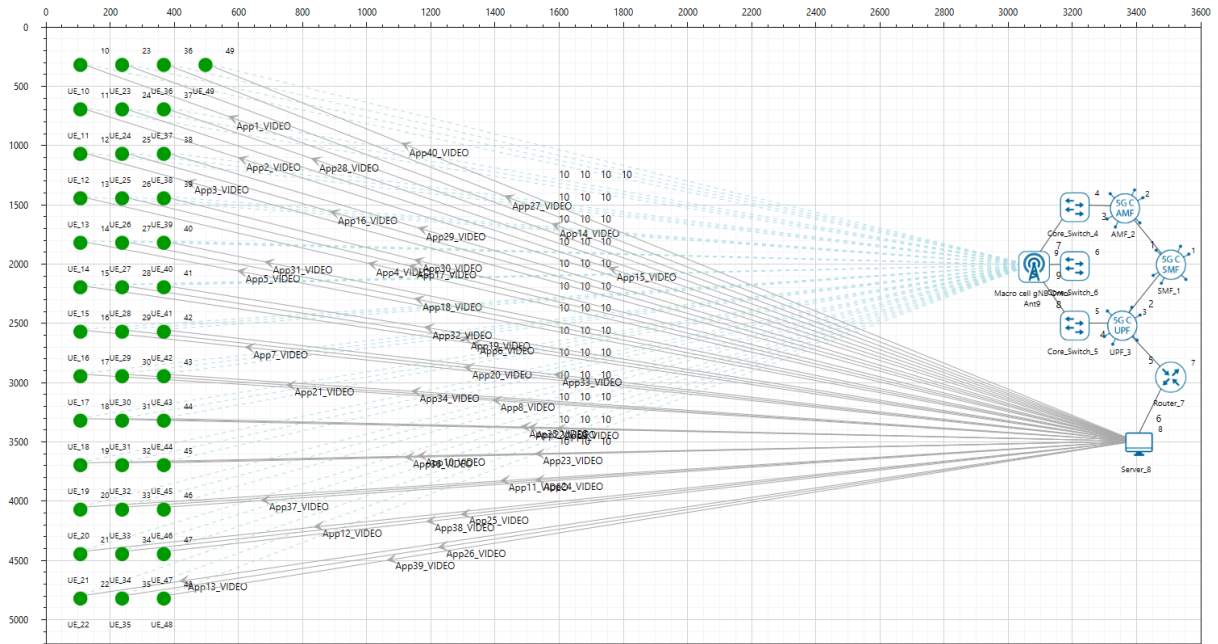


Figure 4-35: Network setup for studying the 5G.

Settings done in example config file:

- For the above 5G scenario set the following given properties.

Table 4-28: gNB > Interface (5G RAN) > Physical layer properties

gNB Properties → Interface (5G RAN)				
CA Type	Intra Band Contiguous CA			
CA Configuration	CA n258G			
CA1, CA2	DL UL Ratio	Frequency Range	Numerology	Channel Bandwidth (MHz)
	1:1	FR2	3	400
PDSCH and PUSCH Configuration				
MCS Table	QAM256			
CSI Report Configuration				
CQI Table	TABLE2			
Channel Model				
Pathloss Model	None			

- The Tx Antenna Count was set to 2 and Rx Antenna Count was set to 1 in gNB > Interface 5G RAN > Physical Layer.

- The Tx Antenna Count was set to 1 and Rx Antenna Count was set to 2 in UE > Interface 5G RAN > Physical Layer.
- Frequency range FR2, Numerology = 3, Bandwidth = 400 MHz with QAM 256 MCS table represent a 5G configuration
- The Uplink and Downlink speed was set to 10000 Mbps and BER as 0 in wired links.
- Run simulation for 2 sec. After simulation completes go to results window and note down throughput and delay value from application metrics.
- Increase number of UE's and number of applications as 40, 80, 120, 160, 200, 240 and 280 and note down throughput and delay value from application metrics.

$$\text{Throughput Per User (Mbps)} = \frac{\text{Sum of throughputs (Mbps)}}{\text{Number of User}} \quad (82)$$

$$\text{Delay Per User } (\mu\text{s}) = \frac{\text{Sum of Delays } (\mu\text{s})}{\text{Number of User}} \quad (83)$$

4.7.2.1 Theoretical PHY Rate Calculation

The 4G/5G PHY data rate is given by the expression

$$\text{PHY data rate (in Mbps)} = 10^{-6} \sum_{j=1}^J (v_{\text{Layers}}^{(j)}) \cdot Q_m^{(j)} \cdot f^{(j)} \cdot R_{\text{PRB}}^{\text{BW}^{(j)}, \mu} \cdot 12 (1 - OH^{(j)}),$$

$$\text{where } T_s^\mu = \frac{10^{-3}}{14 \cdot 2^\mu}$$

This expression gives the PHY rate; the application throughput would be lower than the PHY rate given the overheads in the various layers.

4G:

Number of carriers: 4, Number of layers = $\min(N_t (gNB), N_r(UE)) = \min(2, 2) = 2$, Numerology: 0. The BW per carrier is 20 MHz, with each carrier having 100 PRBs. In this experiment settings the DL:UL Ratio is 1:1 for 2 carriers and 1:0 for 2 carriers. Avg DL:UL ratio is 3:1 and hence the DL fraction = $\frac{3}{3+1} = \frac{3}{4}$.

Applying the 4G PHY data rate formula

$$\text{PHY Rate} = 10^{-6} \left(2 \times 6 \times 1 \times \frac{948}{1024} \times \frac{100 \times 12}{\left(\frac{10^{-3}}{14 \cdot 2^0}\right)} \times (1 - 0.25) \right) \times 4 = 559.40 \text{ Mbps} \quad (84)$$

Where 4 is the number of carriers

Multiplying by the DL fraction we obtain the downlink PHY rate as $559.40 \times \frac{3}{4} = 419.93 \text{ Mbps}$

5G:

Number of carriers: 4, Number of layers = $\min(N_t (gNB), N_r(UE)) = \min(2, 2) = 2$, Numerology: 3. The BW per carrier is 400 MHz with each carrier having 264 PRBs. In this experiment settings, the DL:UL Ratio: 1:1 for both carriers

Applying the 5G PHY data rate formula, we get

$$PHY \text{ Rate} = 10^{-6} \left(2 \times 8 \times 1 \times \frac{948}{1024} \times \frac{264 \times 12}{\left(\frac{10^{-3}}{14 \cdot 2^3}\right)} \times (1 - 0.18) \right) \times 2 = 7568.22 \text{ Mbps} \quad (85)$$

Where 2 is the number of carriers

Multiplying by the DL fraction we obtain the downlink PHY rate as $7568.22 \times \frac{1}{2} = 3784.11$ Mbps.

We vary the UE count from 40 to 280 in steps of 40. Each UE is downloading video at a rate of 2.5 Mbps. Post simulation, we plot the throughput per UE for 4G and 5G as the UE count is increased from 40 to 280.

4.7.2.2 Results:

Table 4-29: Aggregated and Average throughput and delay per user with different number of users for LTE 4G and 5G NR

Users	4G (Devices downloading video)			5G (Devices downloading video)		
	Per user (Mbps)	Agg. (Mbps)	Avg delay (μ s)	Per user (Mbps)	Agg. (Mbps)	Avg delay (μ s)
40	2.43	97.23	3113.92	2.45	98.08	392.12
80	2.44	195.41	5539.42	2.44	195.69	649.40
120	2.44	293.13	7965.39	2.44	293.29	908.43
160	2.41	386.24	10177.97	2.45	392.18	1171.72
200	2.06	412.68	82788.13	2.44	489.94	1430.69
240	1.71	412.53	152792.20	2.44	587.86	1689.47
280	1.47	412.31	202942.80	2.44	685.70	1946.88

In the earlier section, we had predicted a PHY rate of 419 Mbps. We observe that the aggregate application throughput of 4G saturates at 407 Mbps. The $\approx 10\%$ difference is due to the overheads in the various layers. The required rate for each video application is ≈ 2.5 Mbps and we see that 4G is able to support full rate for upto 160 UEs. At 200 UEs the capacity required is $\approx 200 \times 2.5 = 500$ Mbps which is more than what is available. Therefore, the rate per user starts decreasing for UE counts of 200, 240 and 280. In line with this, we see that the average delay increases exponentially from 200 UEs onwards.

On the other hand, 5G can handle a PHY rate of 3784 Mbps or ≈ 3400 Mbps of application throughput. Thus, we see that 5G is easily able to provide full rate of ≈ 2.5 Mbps to each UE even when the total UE count is 280.

Throughput per user vs. Number of users for 4G and for 5G

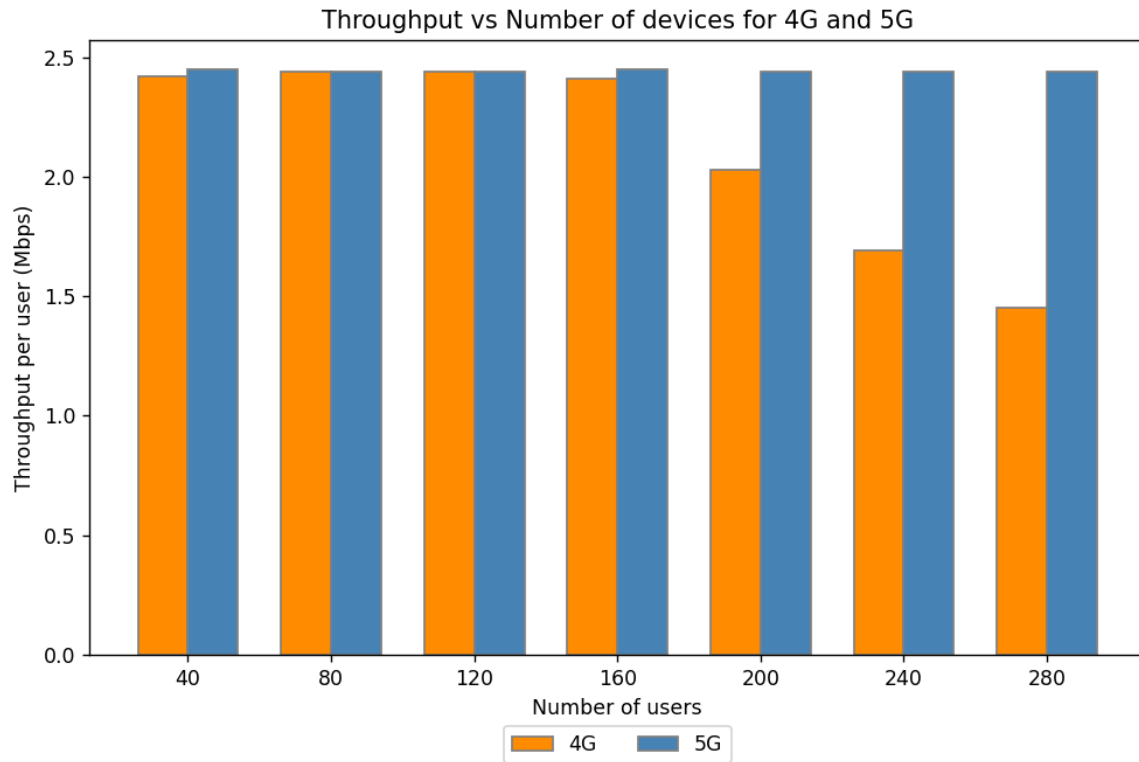


Figure 4-36: *Throughput per user vs Number of Devices for 4G and 5G. The 4G per user throughput starts falling after 160 devices.*

Average delay vs. Number of users for 4G and for 5G

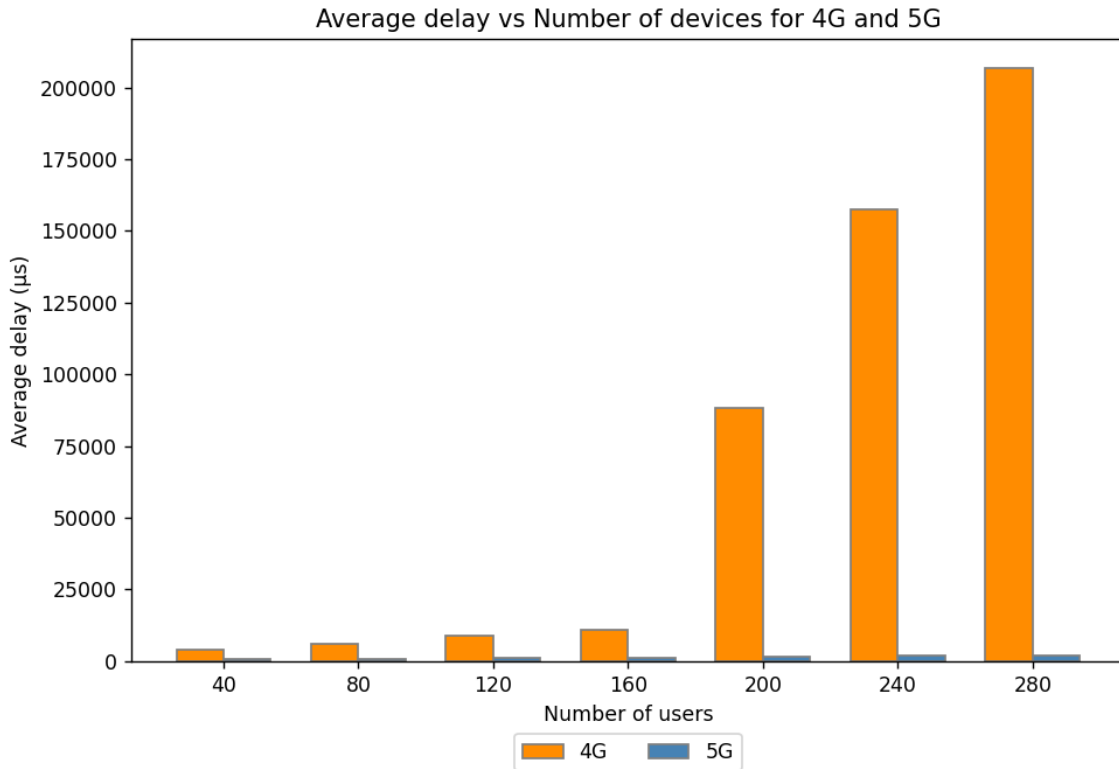


Figure 4-37: Delay vs Number of Devices. The 5G Network average delay is insignificant i.e., many orders of magnitude lower, and hence not visible in the plot.

4.8 5G-Peak-Throughput

Open NetSim, Select Examples → 5G NR → 5G Peak Throughput then click on the tile in the middle panel to load the example as shown in below screenshot

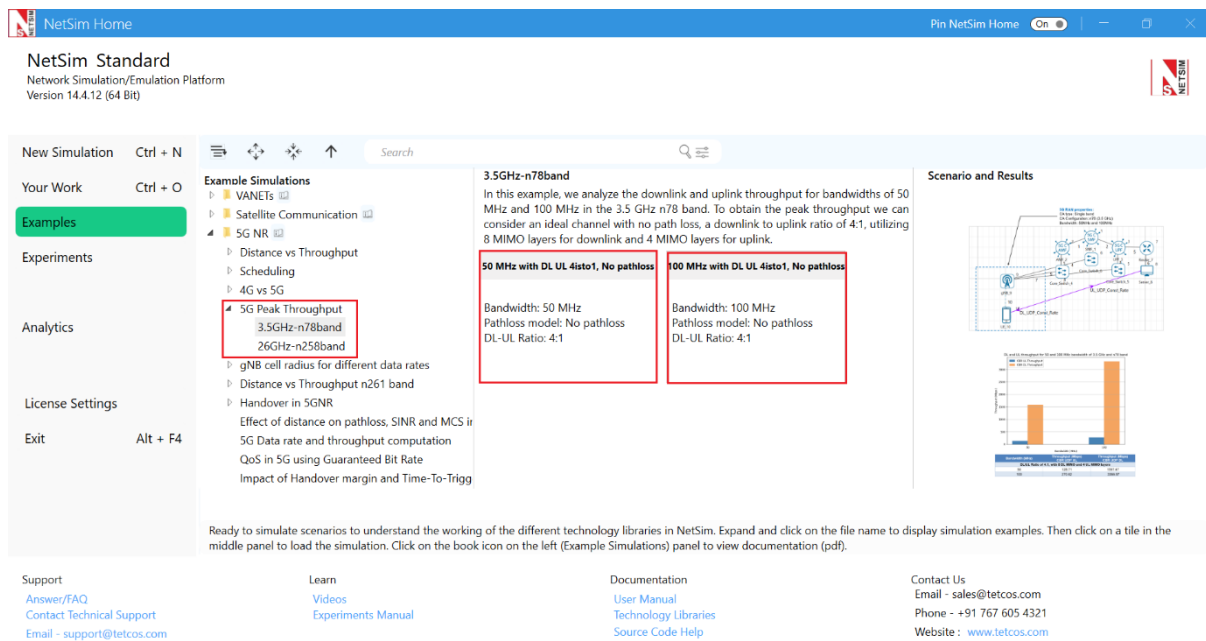


Figure 4-38: List of scenarios for the example of 5G Peak Throughput

4.8.1 3.5 GHz n78 band

The following network diagram illustrates what the NetSim UI displays on clicking.

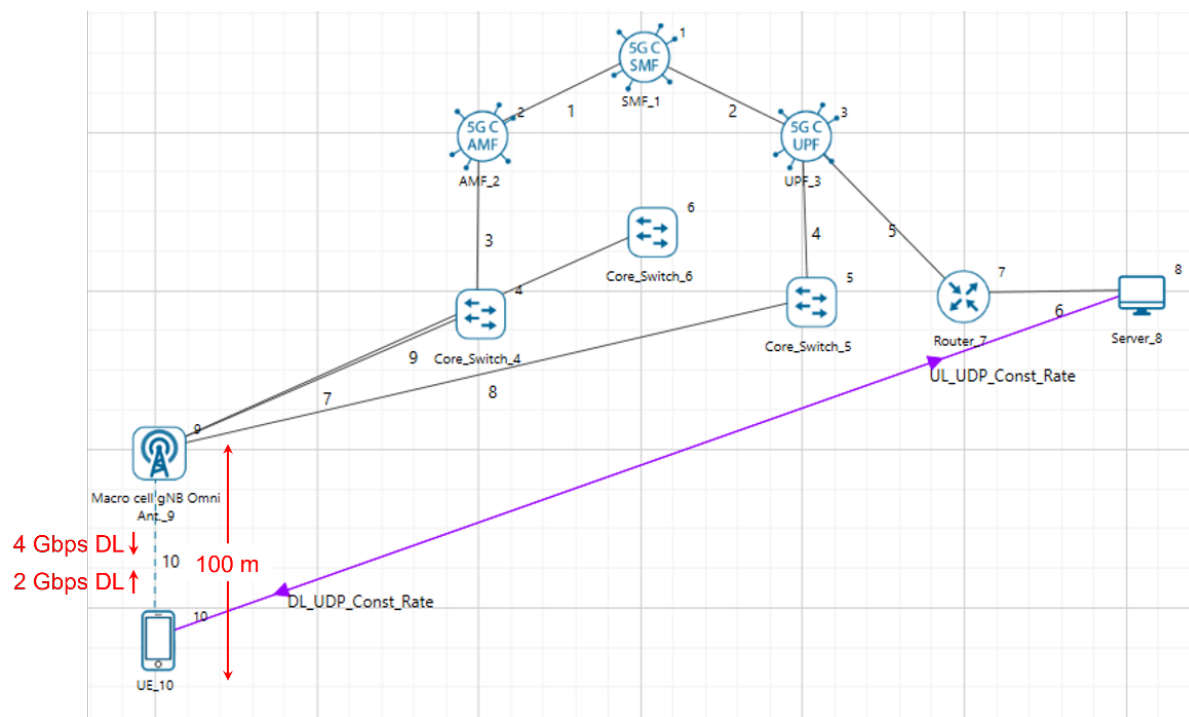


Figure 4-39: Network setup for studying the 5G Peak Throughput

Settings done in example config file:

- Set the following property as shown in below given Table.

Table 4-30: gNB > Interface (5G RAN) > Physical layer properties

gNB Properties → Interface (5G RAN)	
CA Type	Single Band
CA Configuration	n78
CA1	
Frequency Range	FR1
DL/UL Ratio	4:1
Numerology	2
Channel Bandwidth	50 MHz
PDSCH and PUSCH Configuration	
MCS Table	QAM256
CSI Report Configuration	
CQI Table	TABLE2
Channel Model	
Pathloss Model	None

- The Tx Antenna Count was set to 8 and Rx Antenna Count was set to 4 in gNB > Interface 5G RAN > Physical Layer.
- The Tx Antenna Count was set to 4 and Rx Antenna Count was set to 8 in UE > Interface 5G RAN > Physical Layer.
- Set 2 applications Downlink source node as 8, and destination node as 10, Uplink source node as 10, and destination node as 8. Transport Protocol is set to UDP in all the applications.

Table 4-31: *Application properties*

Application Properties	
App CBR UDP DL	
Start Time (s)	1
Packet Size (Byte)	1460
Inter Arrival Time (μ s)	2.92
App CBR UDP UL	
Start Time (s)	1
Packet Size (Byte)	1460
Inter Arrival Time (μ s)	5.84

- Enable the Throughput vs time plot under Application and link and run simulation for 1.1 sec. After simulation completes go to results window and note down throughput value from application metrics.

Go back to the Scenario and change channel bandwidth to 100 MHz, run simulation for 1.1 sec and note down throughput value from application metrics.

Result:

Table 4-32: *Results Comparison*

Bandwidth (MHz)	Throughput CBR UDP UL	(Mbps)	Throughput CBR UDP DL	(Mbps)
DL/UL Ratio of 4:1, with 8 DL MIMO and 4 UL MIMO layers				
50	128.71		1597.47	
100	270.62		3366.87	

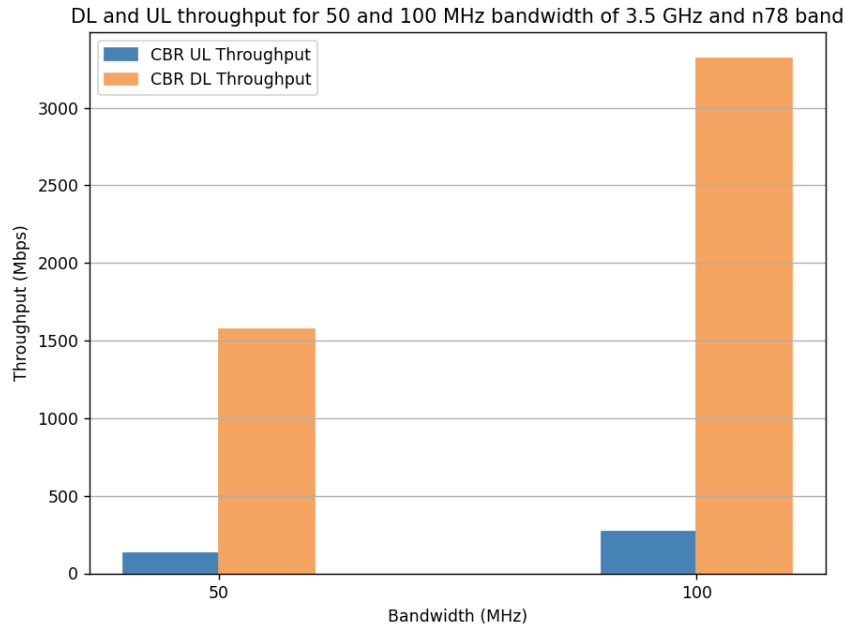


Figure 4-40: Plot for DL and UL throughput for 50 and 100 MHz bandwidth of 3.5 GHz and n78 band

4.8.2 26 GHz n258 band

The following network diagram illustrates what the NetSim UI displays on clicking.

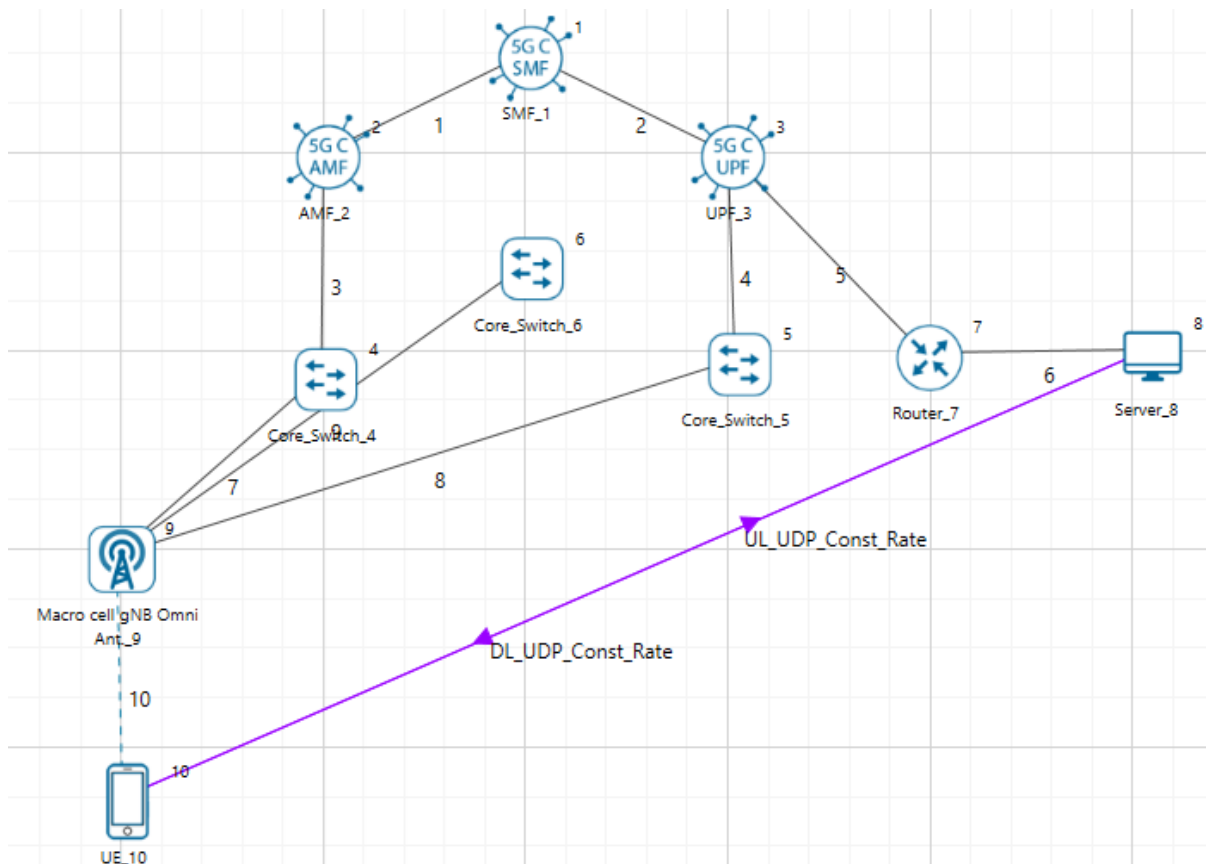


Figure 4-41: Network setup for studying the 5G Peak Throughput

Settings done in example config file:

- Set the following property as shown in below Table.

Table 4-33: *gNB > Interface (5G RAN) > Physical layer properties*

gNB Properties → Interface (5G RAN)	
CA Type	Single Band
CA Configuration	n258
Component Carrier 1	
DL/UL Ratio	4:1
Frequency Range	FR2
Numerology	3
Channel Bandwidth	200 MHz
PDSCH and PUSCH Configuration	
MCS Table	QAM256
CSI Report Configuration	
CQI Table	TABLE2
Channel Model	
Pathloss Model	None

- The Tx Antenna Count was set to 8 and Rx Antenna Count was set to 4 in gNB > Interface 5G RAN > Physical Layer.
- The Tx Antenna Count was set to 4 and Rx Antenna Count was set to 8 in UE > Interface 5G RAN > Physical Layer.
- Set 2 applications Downlink source node as 8 destination node as 10, Uplink source node as 10 destination node as 8. Transport Protocol is set to UDP in all the applications.

Table 4-34: *Application properties*

Application Properties	
App CBR UDP DL	
Start Time (s)	1
Packet Size (Byte)	1460
Inter Arrival Time (μ s)	1
App CBR UDP UL	
Start Time (s)	1
Packet Size (Byte)	1460
Inter Arrival Time (μ s)	4

- After simulation completes go to results window and note down throughput value from application metrics.

Go back to the Scenario and change channel bandwidth to 400 MHz, run simulation for 1.1 sec and note down throughput value from application metrics.

Result:

Table 4-35: *Results Comparison*

Bandwidth (MHz)	Throughput (Mbps) CBR UDP UL	Throughput (Mbps) CBR UDP DL
DL/UL Ratio of 4:1, with 8 DL MIMO and 4 UL MIMO layers		
200	518.35	6283.72
400	1041.15	11648.46

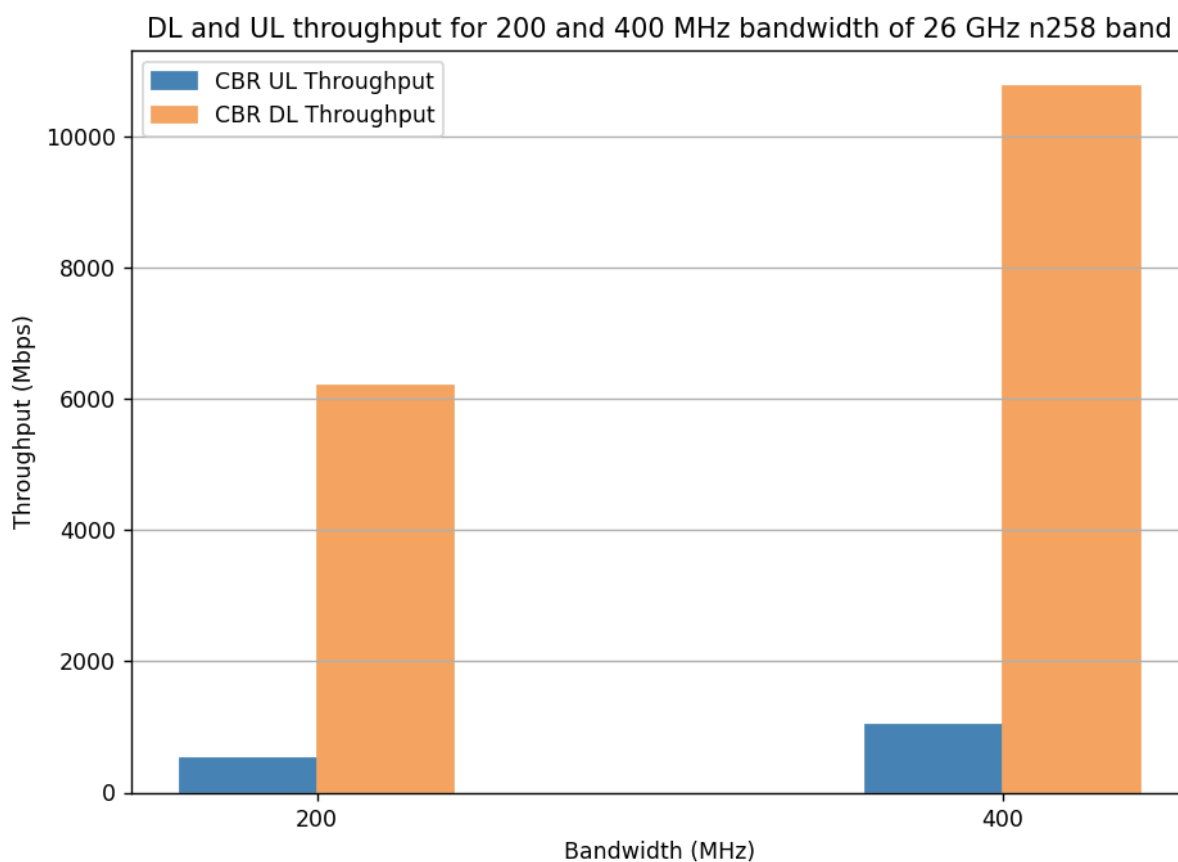


Figure 4-42: *Plot for DL and UL throughput for 200 and 400 MHz bandwidth of 26 GHz and n258 band*

4.9 Impact of distance on throughput for n261 band in LOS and NLOS states

Objective: We observe throughput of a UE (operating in the n261 band with a channel bandwidth of 100 MHz), moving away from the gNB from 1 m to 3.5 Km. The variation of throughput is plotted in both LOS and NLOS states. Since 5G simulations take a long time to complete, and given our goal of studying throughput vs. distance, we have set an unrealistic speed of 20 m every 10 ms to complete the UE movement in a short time duration.

Open NetSim, Select Examples → 5G NR → Distance vs Throughput n261 band then click on the tile in the middle panel to load the example as shown in below Figure.

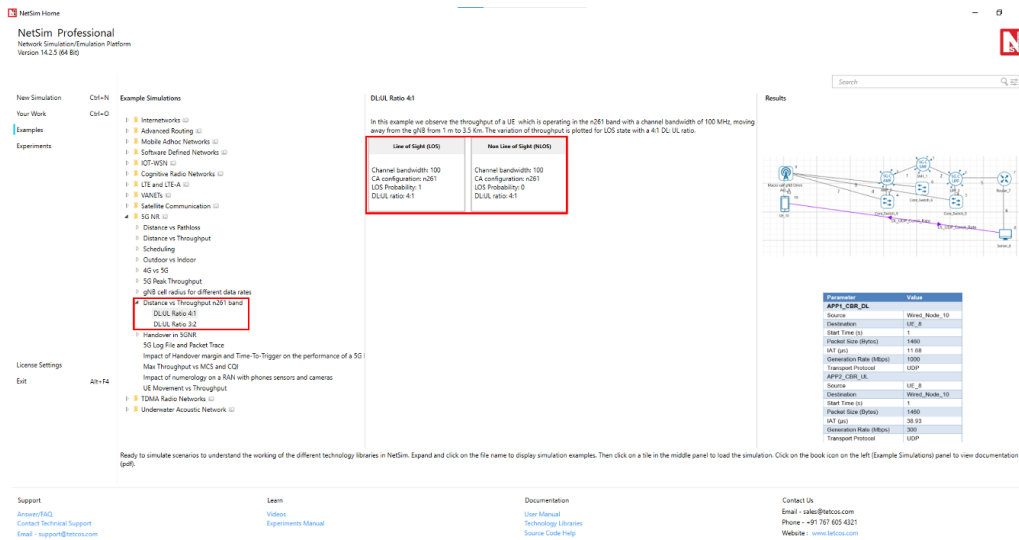


Figure 4-43: List of scenarios for the example of Distance vs Throughput n261 band

NetSim UI displays the configuration file corresponding to this experiment as shown below.

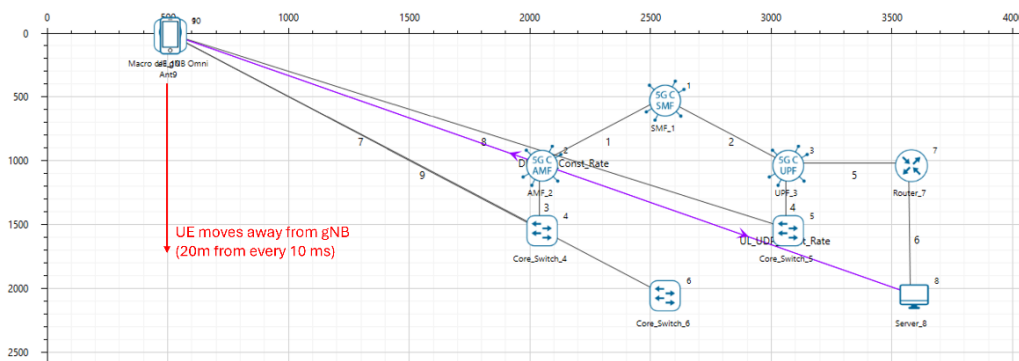


Figure 4-44: Network setup for studying the Distance vs Throughput n261 band

4.9.1 DL: UL Ratio 4:1

4.9.1.1 LOS and NLOS

The following settings were done to generate this sample:

Step 1: A network scenario is designed in NetSim GUI consisting of 1 gNB, 5G-Core, and 1 UE and 1 Router and 1 Wired Node in the “5G NR” Network Library.

Step 2: Grid length was set to 8000 m × 4000 m.

Step 3: The device positions are set as per the table given below.

Table 4-36: Device position properties

Device	UE_10	gNB_9
x-axis	500	500
y-axis	1	0

Step 4: The following properties were set in Interface (5G RAN) of gNB

Table 4-37: *gNB > Interface (5G RAN) > Physical layer properties*

Parameter	Value
Tx Power	40
gNB Height	10 m
CA Type	Single Band
CA Configuration	n261
<i>Component Carrier 1</i>	
DL-UL Ratio	4:1
Numerology	3
Channel Bandwidth	100 MHz
<i>PDSCH and PUSCH Configuration</i>	
MCS Table	QAM64LOWSE
<i>CSI Report Configuration</i>	
CQI Table	TABLE3
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS NLOS Selection	User Defined
LOS Probability	1
Shadow Fading Model	None
Fast Fading Model	No Fading

Step 5: Set Tx Antenna Count and Rx Antenna Count as 2 and 2 in gNB properties > Interface(5G RAN) > Physical Layer.

Step 6: Set Tx Antenna Count and Rx Antenna Count as 2 and 2 in UE properties > Interface(5G RAN) > Physical Layer.

Step 7: Two CBR Applications were generated from between the Server 8 and UE 10 with the following values.

Table 4-38: *Application Properties*

Parameter	Value
<i>APP1 CBR DL</i>	
Source	Server 8
Destination	UE 10
Start Time (s)	1
Packet Size (Bytes)	1460
IAT (μ s)	11.68
Generation Rate (Mbps)	1000
Transport Protocol	UDP
<i>APP2 CBR UL</i>	
Source	UE 10
Destination	Server 8
Start Time (s)	1
Packet Size (Bytes)	1460
IAT (μ s)	97.33
Generation Rate (Mbps)	120
Transport Protocol	UDP

Step 8: In the Device Position Properties of UE 10, set Mobility Model as File Based Mobility

File Based Mobility: In File Based Mobility, users can write their own custom mobility models and define the movement of mobile users. Create a mobility.csv file for UE's involved in mobility with each step equal to 4 sec with distance 100 m. The NetSim Mobility File (mobility.csv) format is as follows:

Table 4-39: *Mobility.csv file*

#Time(s)	Device ID	X	Y	Z
1	10	500	50	0
1.01	10	500	70	0
1.02	10	500	90	0
1.03	10	500	110	0
.
2.65	10	500	3350	0
2.66	10	500	3370	0
2.67	10	500	3390	0
2.68	10	500	3410	0
2.69	10	500	3430	0
2.7	10	500	3450	0
2.71	10	500	3470	0
2.72	10	500	3490	0
2.73	10	500	3510	0

Step 9: Enable application throughput vs time plot under Plots tab in the NetSim GUI.

Step 10: Run simulation for 2.75 s.

Step 11: Similarly, in LOS, set the LOS Probability to 0 in gNB properties and simulate the scenario for 2.75 s.

Results:

Downlink Line-of-Sight (LOS) and Non-Line-of-Sight (NLOS) Plots

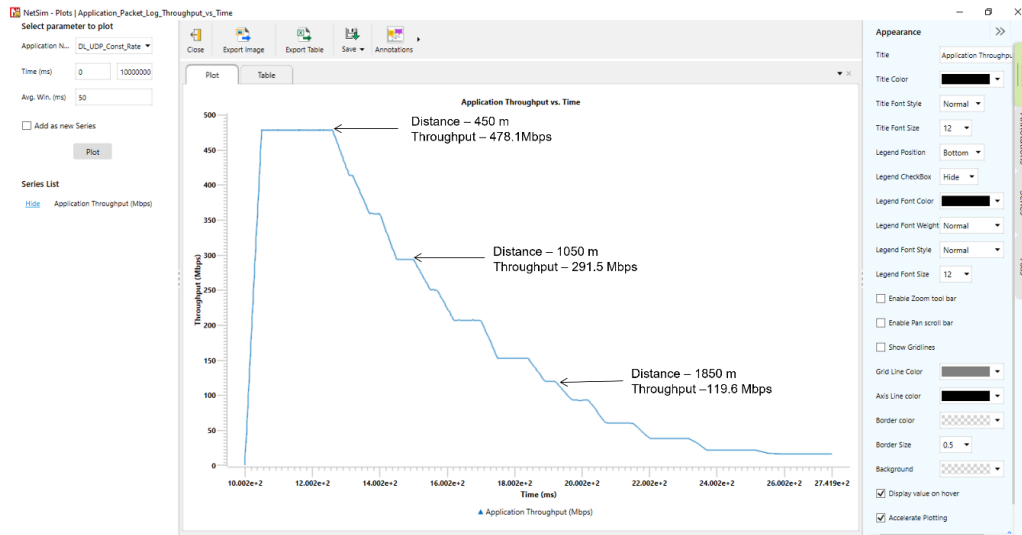


Figure 4-45: Downlink Application Throughput Plot in LOS mode.

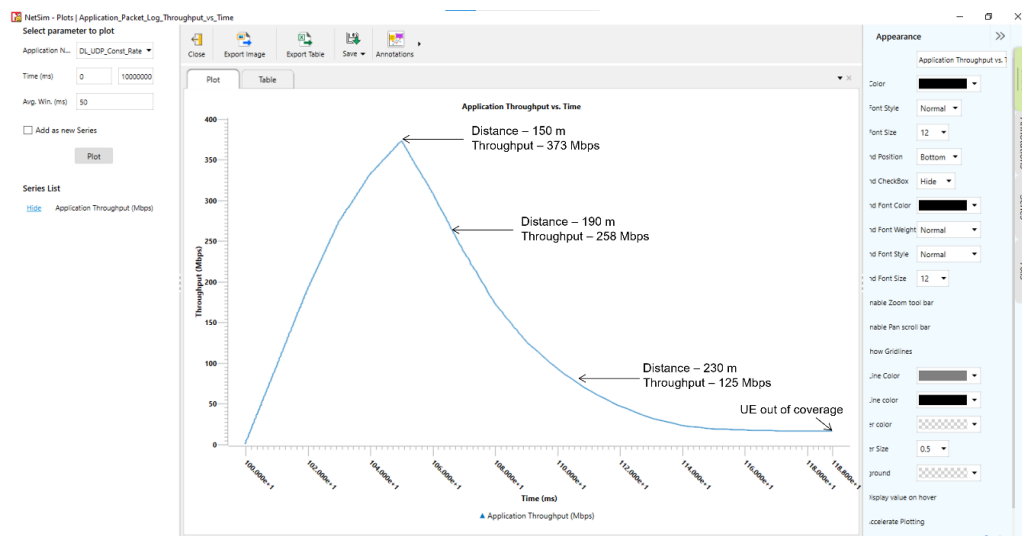


Figure 4-46: Downlink Application Throughput Plot in NLOS mode.

Uplink Line-of-Sight (LOS) and Non-Line-of-Sight (NLOS) Plots

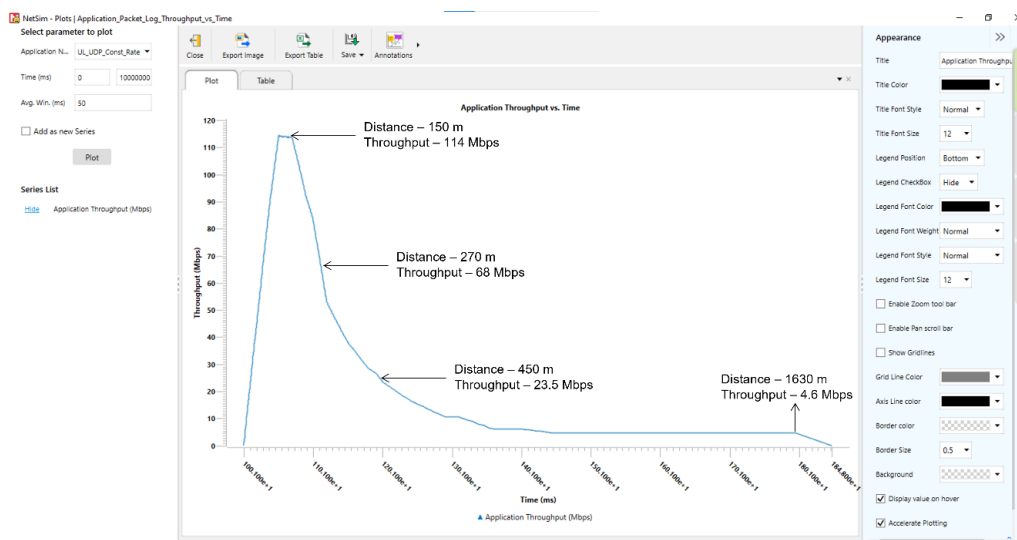


Figure 4-47: Uplink Application Throughput Plot in LOS mode.

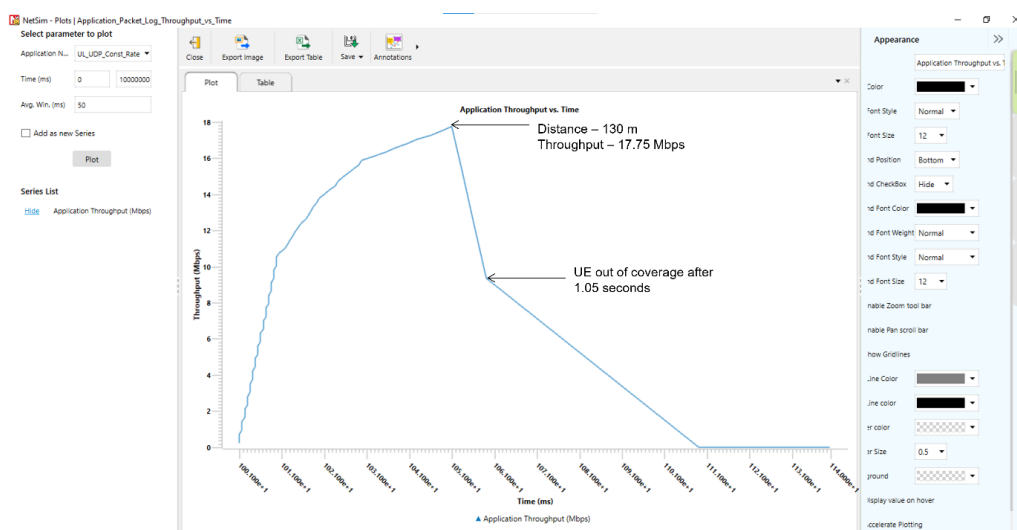


Figure 4-48: Uplink Application Throughput Plot in NLOS mode.

Discussion: The downlink throughput of 478.1 Mbps is maintained till ~450 m in LOS whereas, it is maintained till 150 m in NLOS. Similarly, the uplink throughput of 114 Mbps is maintained till 150 m in LOS whereas, it is maintained till 130 m in NLOS. The Uplink throughput falls to the lowest level at ~750 m in LOS and at ~150 m in NLOS.

4.9.2 DL: UL Ratio 3:2

4.9.2.1 LOS and NLOS

Step 1: All the properties were set as in DL: UL-Ratio 4:1.

Step 2: In the gNB properties → Interface 5G RAN, the DL:UL ratio was set to 3:2.

Step 3: The following settings were done in application properties:

Table 4-40: Application Properties

Parameter	Value
<i>APP1 CBR DL</i>	
Source	Server 8
Destination	UE 10
Start Time (s)	1
Packet Size (Bytes)	1460
IAT (μ s)	11.68
Generation Rate (Mbps)	1000
Transport Protocol	UDP
<i>APP2 CBR UL</i>	
Source	UE 10
Destination	Server 8
Start Time (s)	1
Packet Size (Bytes)	1460
IAT (μ s)	38.93
Generation Rate (Mbps)	300
Transport Protocol	UDP

Step 3: Run simulation for 2.75 s.

Step 4: Similarly, in LOS, set the LOS Probability to 0 in gNB properties and run simulation for 2.75 s.

Results:

Downlink Line-of-Sight (LOS) and Non-Line-of-Sight (NLOS) Plots

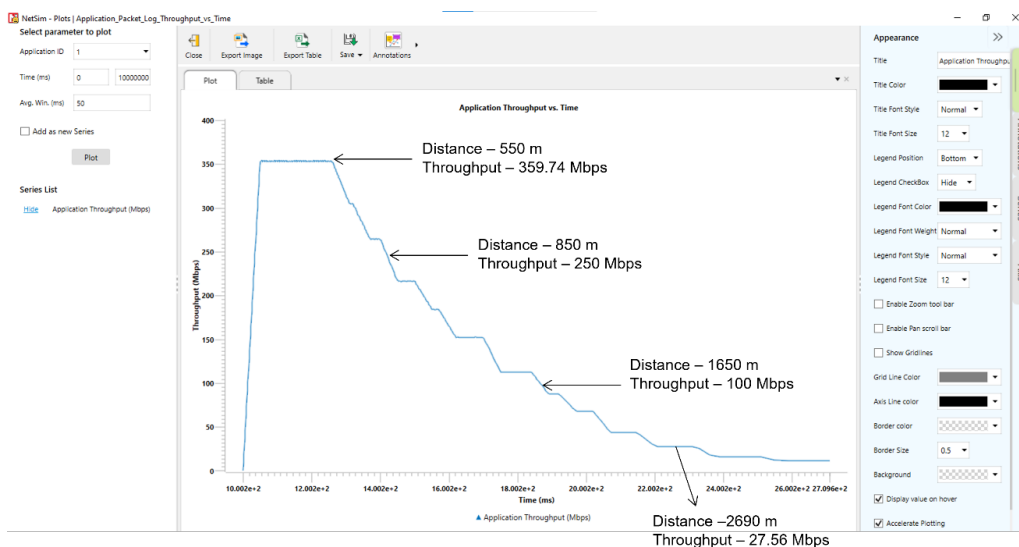


Figure 4-49: Downlink Application Throughput Plot in LOS mode.

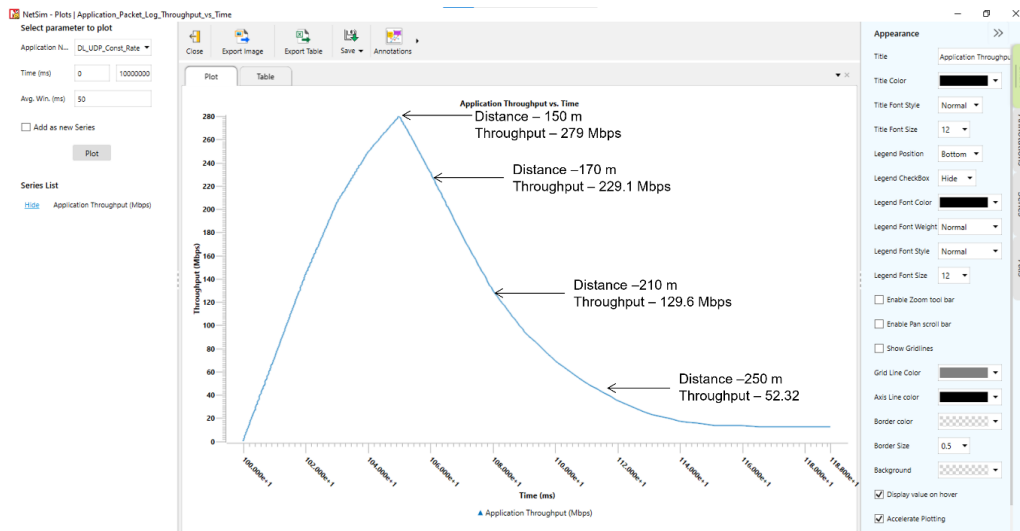


Figure 4-50: Downlink Application Throughput Plot in NLOS mode.

Uplink Line-of-Sight (LOS) and Non-Line-of-Sight (NLOS) Plots

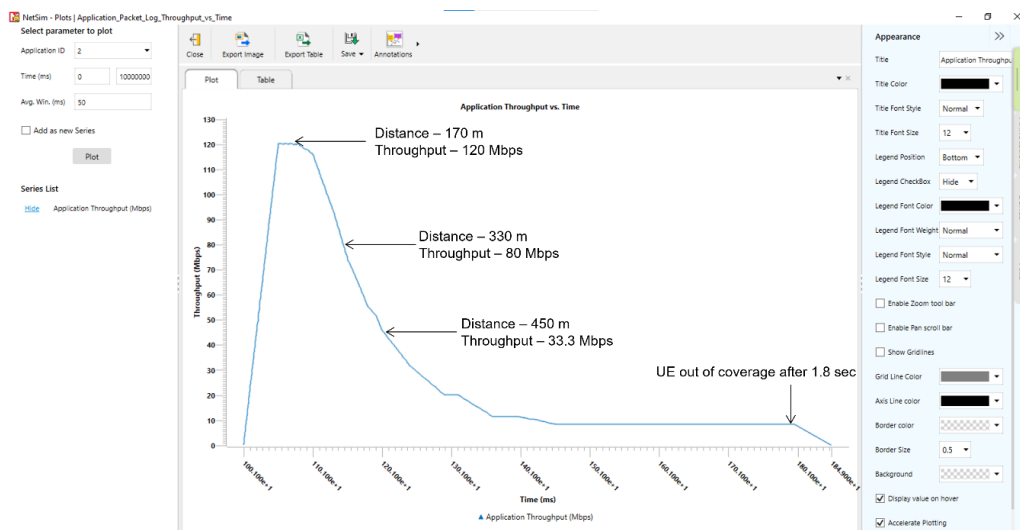


Figure 4-51: Uplink Application Throughput Plot in LOS mode

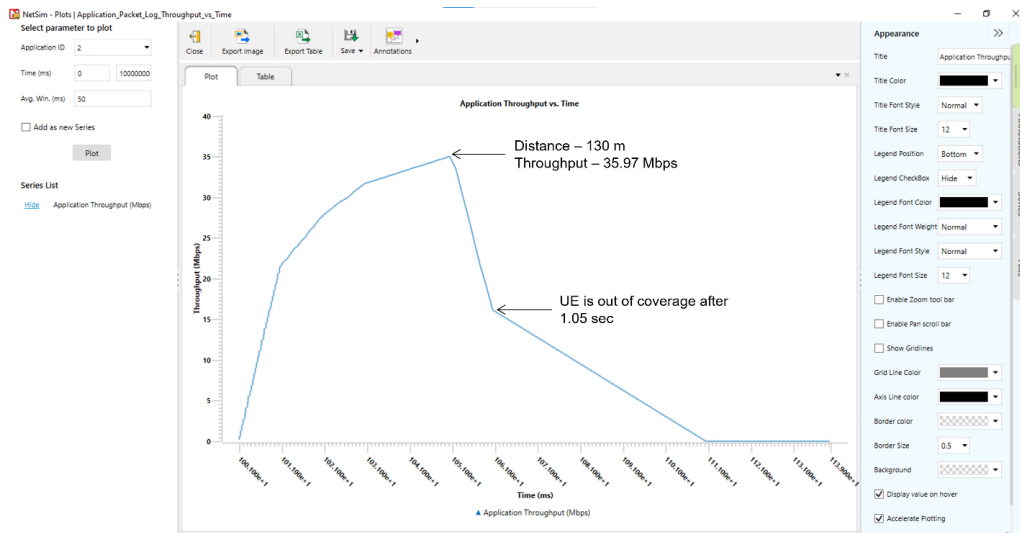


Figure 4-52: Uplink Application Throughput Plot in NLOS mode

Inference: The downlink throughput of 359.74 Mbps is maintained till ~550 m in LOS whereas, it is maintained till 150 m in NLOS. Similarly, the uplink throughput of 120 Mbps is maintained till 170 m in LOS whereas, it is 35.97 Mbps maintained till 130 m in NLOS. The Uplink throughput falls to the lowest level at ~750 m in LOS and at ~150 m in NLOS.

4.10 gNB cell radius for different data rates

Open NetSim, Select Examples → 5G NR → gNB cell radius for different data rates then click on the tile in the middle panel to load the example as shown in below screenshot

Cell Radius (m)	Data Rate (Mbps), Downlink
100	1574.81
130	1335.72
150	1205.37
≈1900 Mbps Downlink	
170	1096.75
190	995.42
200	925.07
≈500 Mbps Downlink	
300	499.20
330	412.30
350	303.68

Figure 4-53: List of scenarios for the example of gNB cell radius for different data rates

4.10.1 3.5 GHz n78 urban gNB cell radius for different data rates

The following network diagram illustrates what the NetSim UI displays on clicking.

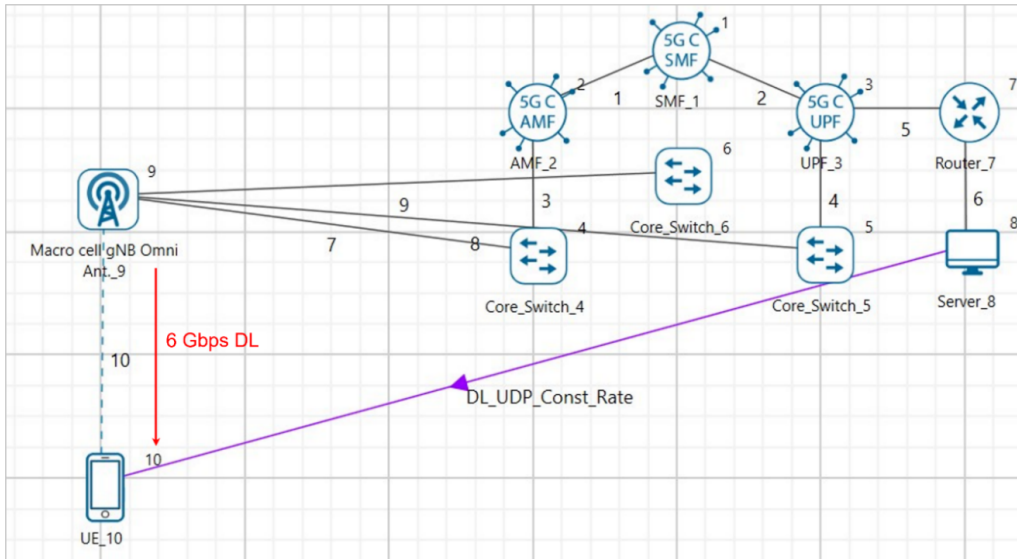


Figure 4-54: Network setup for studying the gNB cell radius for different data rates.

Setting done in example config file:

- Set the following property as shown in below Table.

Table 4-41: gNB > Interface (5G RAN) > Physical layer properties

gNB Properties → Interface (5G RAN)	
Property	Value
gNB Height	10 m
Tx Power	40
CA Type	Single Band
CA Configuration	n78
<i>Component Carrier 1</i>	
DL: UL	4:1
Numerology	2
Channel Bandwidth	50 MHz
<i>PDSCH and PUSCH Configuration</i>	
MCS Table	QAM256
<i>CSI Report Configuration</i>	
CQI Table	TABLE2
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS NLOS Selection	3GPP TR 38.901-Table7.4.2-1
Shadow Fading Model	None
Fast Fading Model	No Fading

- Set the Tx Antenna Count as 8 and Rx Antenna Count as 1 in gNB > Interface 5G RAN > Physical Layer.
- Set the Tx Antenna Count as 1 and Rx Antenna Count as 8 in UE > Interface 5G RAN > Physical Layer.
- Set the following application properties:

Table 4-42: *Application properties*

App_1_CBR	Value
Source Id	8
Destination Id	10
Packet Size	1460
IAT	1.94 μ s
Start time	1 s
Transport Protocol	UDP
Generation Rate	6 Gbps

- Run simulation for 1.1 sec. After simulation completes go to results window and note down throughput value from application metrics.

Go back to the Scenario and change distance between gNB and UE to 100 m, 130 m, 150 m, 170 m, 190 m, 200 m, 300 m, 330 m, and 350 m and run simulation for 1.1 sec.

Result:

Table 4-43: *Results Comparison*

Cell Radius (m)	Data Rate (Mbps). Downlink
<i>1500 Mbps Downlink</i>	
100	1597.47
130	1421.22
150	1278.02
<i>1000 Mbps Downlink</i>	
170	1167.76
190	969.44
200	925.40
<i>500 Mbps Downlink</i>	
300	506.79
330	418.61
350	374.57

4.10.2 26 GHz n258 urban gNB cell radius for different data rates

Setting done in example config file:

- Set the following property as shown in below given table:

Table 4-44: *gNB > Interface (5G RAN) > Physical layer properties*

gNB Properties → Interface (5G RAN)	
Property	Value
gNB Height	10 m
Tx Power	40
CA Type	Single Band
CA Configuration	n258
<i>Component Carrier 1</i>	
DL: UL	4:1
Numerology	2
Channel Bandwidth	200 MHz
<i>PDSCH and PUSCH Configuration</i>	
MCS Table	QAM256
<i>CSI Report Configuration</i>	
CQI Table	TABLE2
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS_NLOS Selection	3GPP TR 38.901-Table7.4.2-1
Shadow Fading Model	None
Fast Fading Model	No Fading

- Set the Tx Antenna Count as 8 and Rx Antenna Count as 1 in gNB > Interface 5G RAN > Physical Layer.
- Set the Tx Antenna Count as 1 and Rx Antenna Count as 8 in UE > Interface 5G RAN > Physical Layer.
- Set the following application properties:

Table 4-45: *Application properties*

App 1 CBR	Value
Source Id	8
Destination Id	10
Packet Size	1460
IAT	1.94 μ s
Start time	1 s
Transport Protocol	UDP
Generation Rate	6 Gbps

- Run simulation for 1.1 sec. After simulation completes go to results window and note down throughput value from application metrics.

Go back to the Scenario and change distance between gNB and UE to 20 m, 110 m, and 150 m and run simulation for 1.1 sec.

Result:

Table 4-46: Results Comparison

Cell Radius (m)	Data Rate (Mbps). Downlink
<i>6000 Mbps Downlink</i>	
20	5989.03
<i>1000 Mbps Downlink</i>	
110	735.48
<i>500 Mbps Downlink</i>	
150	302.86

4.11 Impact of numerology on a RAN with phones, sensors, and cameras

Open NetSim, Select **Examples** → 5G NR → Impact of numerology on a RAN with phones sensors and cameras then click on the tile in the middle panel to load the example as shown in below Figure.

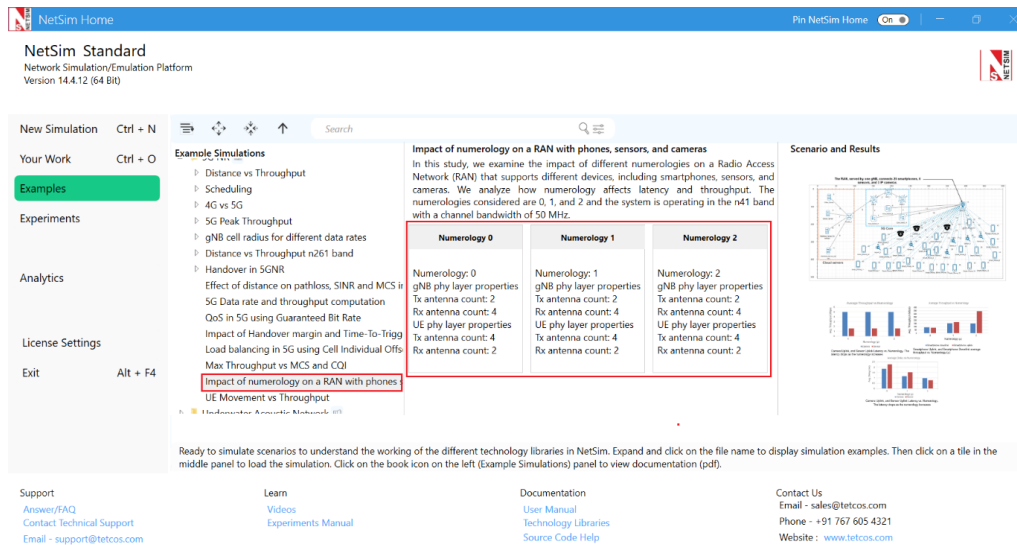


Figure 4-55: List of scenarios for the example of Impact of numerology on a RAN with phones sensors and cameras

Network Scenario: To model a real-world scenario, we base our simulation on the setup shown in the Figure below. The link between the gNB and the L2_Switches that represents the Core Network (CN) is made with a point-to-point 10 Gb/s link, without propagation delay. The Radio Area Network (RAN) is served by 1 gNB, in which different UEs share the connectivity. We have 25 smartphones, 6 sensors, 3 IP cameras. The bandwidth is 100 MHz and Round Robin MAC Scheduler. The position of the devices in the reference scenario depicted in the Figure is quasi-random.

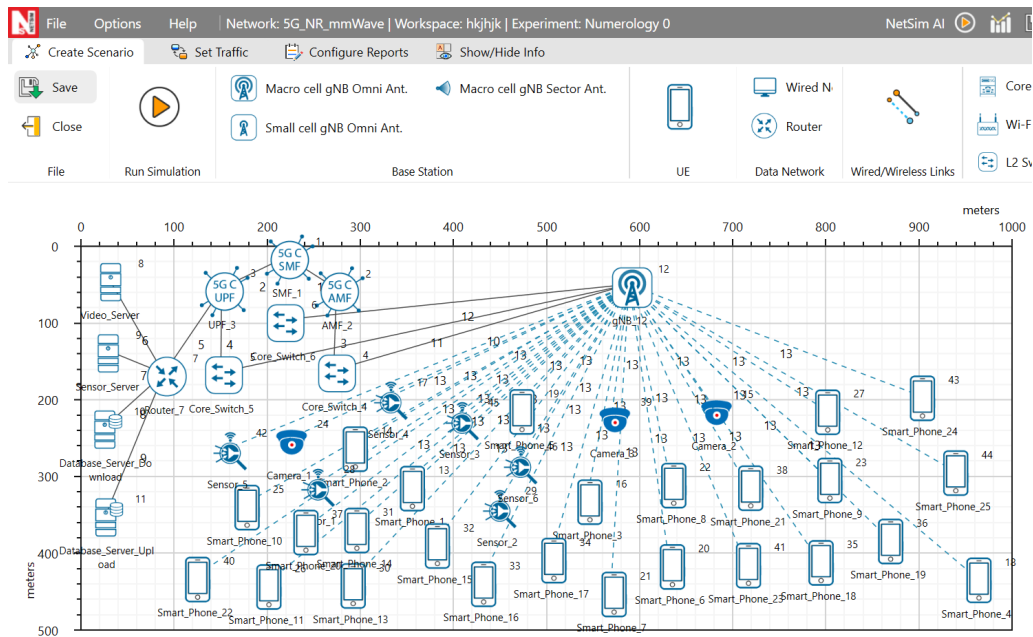


Figure 4-56: Network setup for studying with 25 smartphones, 6 sensors and 3 cameras communicating with respective cloud servers.

In terms of application data traffic, the camera (video) and sensor nodes have one UDP flow each, that goes in the UL towards a remote node on the Internet. These flows are fixed-rate flows: we have a continuous transmission of 5 Mb/s for the video nodes, to simulate a 720p24 HD video, and the sensors transmit a payload of 500 bytes each 2.5 ms, that gives a rate of 1.6 Mb/s. For smartphones, we use TCP as the transmission protocol. These connect to database servers. Each phone has to download a 25 MB file and to upload one file of 1.5 MB. These flows start at different times: the upload starts at a random time between the 25th and the 75th simulation seconds, while each download starts at a random time between the 1.5th and the 95th simulation seconds.

Table 4-47: Various parameters of the Traffic flow models for all the devices

	Flows (No of devices)	Traffic Rate (Mbps)	Segment / File Size (B)	RAN Dir.	TCP ACK Dir.
Camera (UDP)	3	5	500	UL	–
Sensor (UDP)	6	1.6	500	UL	–
Smartphone Upload (TCP)	25	–	1,500,000	UL	DL
Smartphone Download (TCP)	25	–	25,000,000	DL	UL

The numerology μ can take values from 0 to 3 and specifies an SCS of $15 \times 2^\mu$ kHz and a slot length of $\frac{1}{2^\mu}$ ms. FR1 support $\mu = 0, 1$ and 2 , while FR2 supports $\mu = 2, 3$. We study the impact of different numerologies, and how they affect the end-to-end performance. The metrics measured and analyzed are a) Throughput of TCP uploads & downloads, and b) Latency of the UDP uploads.

Settings done in example config file:

- For the above scenario set the following given properties:

Table 4-48: *gNB > Interface (5G RAN) > Physical layer properties*

Property	Value
Pathloss Model	None
CA Type	Inter Band CA
CA Configuration	CA_2DL_2UL_n40_n41
<i>CA1</i>	
DL UL Ratio	1:4
Frequency Range	FR1
Numerology	0, 1, and 2
Channel Bandwidth	50 MHz
<i>CA2</i>	
DL UL Ratio	1:4
Frequency Range	FR1
Numerology	0, 1, and 2
Channel Bandwidth	50 MHz
<i>PDSCH and PUSCH Configuration</i>	
MCS Table	QAM64
<i>CSI Report Configuration</i>	
CQI Table	TABLE1
<i>Channel Model</i>	
Pathloss Model	None

- The following Application properties set to the above scenario:

Table 4-49: *Sensor Application Properties for UL UDP*

Sensor UL UDP	Value
Generation Rate (Mbps)	1.6
Transport Protocol	UDP
Application Type	Custom
Packet Size (Bytes)	500
Inter Arrival Time (μ s)	2500

Table 4-50: *Camera Application Properties for UL UDP.*

Camera UL UDP	Value
Generation Rate (Mbps)	5
Transport Protocol	UDP
Application Type	Custom
Packet Size (Bytes)	500
Inter Arrival Time (μ s)	800

Table 4-51: *Phone Application Properties for DL TCP*

Phone DL TCP	Value
Transport Protocol	TCP
Start Time (s)	0, 1, 2, ..., 48
Stop Time (s)	95
File Size (Bytes)	25,000,000
Inter Arrival Time (s)	200 (Simulation ends at 110s and hence only one file is sent)
Application Type	FTP

Table 4-52: *Phone Application Properties for UL TCP*

Phone UL TCP	Value
Application Type	FTP
Transport Protocol	TCP
Start Time (s)	$4.5 + 4(i - 1)$ Where, $i = 1, 2, \dots, 25$
Stop Time (s)	100
File Size (Bytes)	1,500,000
Inter Arrival Time (s)	200 (Simulation ends at 110s and hence only one file is sent)

- The Tx Antenna Count was set to 2 and Rx Antenna Count was set to 4 in gNB > Interface 5G RAN > Physical Layer.
- The Tx Antenna Count was set to 4 and Rx Antenna Count was set to 2 in UE > Interface 5G RAN > Physical Layer.
- Run simulation for 110 sec. After simulation completes go to results window and note down throughput and delay value from application metrics.

Result and Analysis:

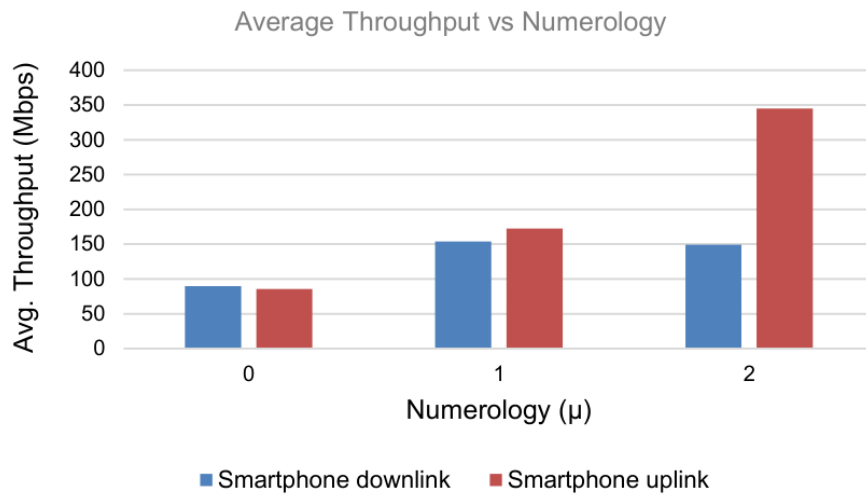


Figure 4-58: Smartphone Uplink, and Smartphone Downlink average throughput vs. Numerology (μ)

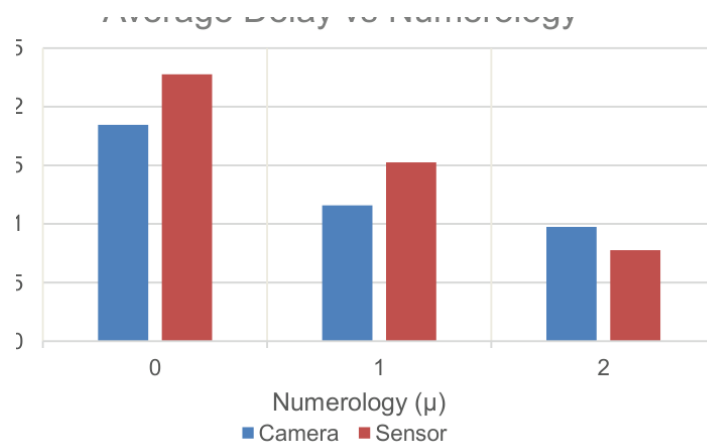


Figure 4-59: Camera Uplink, and Sensor Uplink Latency vs. Numerology. The latency drops as the numerology increases

For UDP applications the μ does not impact the throughput. This is because throughput of UDP over 5G only depends on the “capacity” of the OFDM time-frequency grid. Changing the numerology does not change the OFDM capacity, given the inverse relationship between subcarrier spacing and numerology. However, higher μ leads to an obviously lower delay. The variation of delay vs. μ is as follows:

Table 4-56: Variation of delay vs. numerology for Camera and Sensors

	Avg Delay (Camera)	Avg Delay (Sensor)
$\mu = 0$	1.838 ms	2.26 ms
$\mu = 1$	0.930 ms	1.51 ms
$\mu = 2$	0.476 ms	0.75 ms

The TCP throughput is inversely proportional to round trip time. Therefore, for applications running over TCP the throughput increases with higher numerology. This is because higher

Numerology leads to reduced round-trip (end-to-end) times.

4.12 Impact of UE movement on Throughput

Open NetSim, Select Examples → 5G NR → UE Movement vs Throughput then click on the tile in the middle panel to load the example as shown in below Figure.

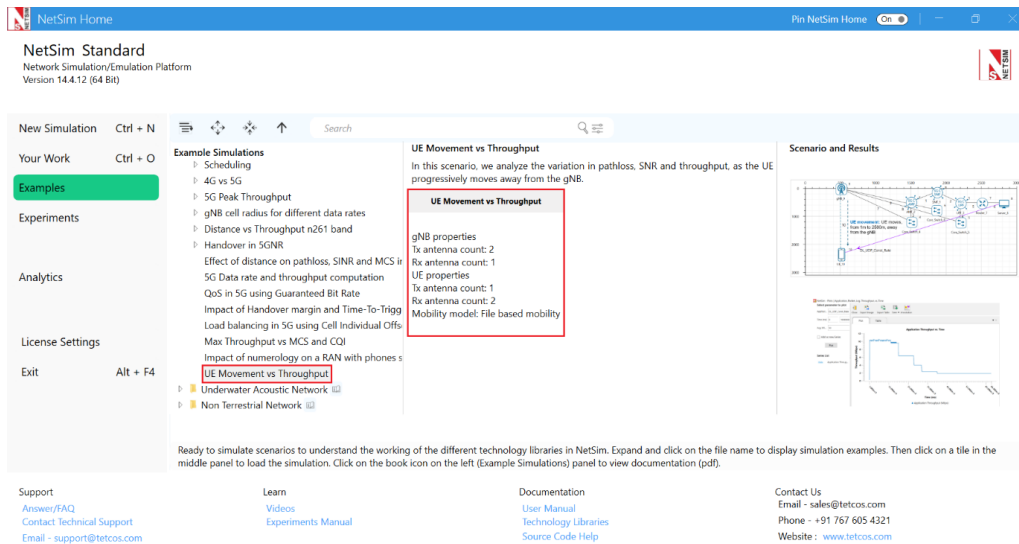


Figure 4-60: List of scenarios for the example of UE Movement vs Throughput

NetSim UI displays the configuration file corresponding to this experiment as shown below.

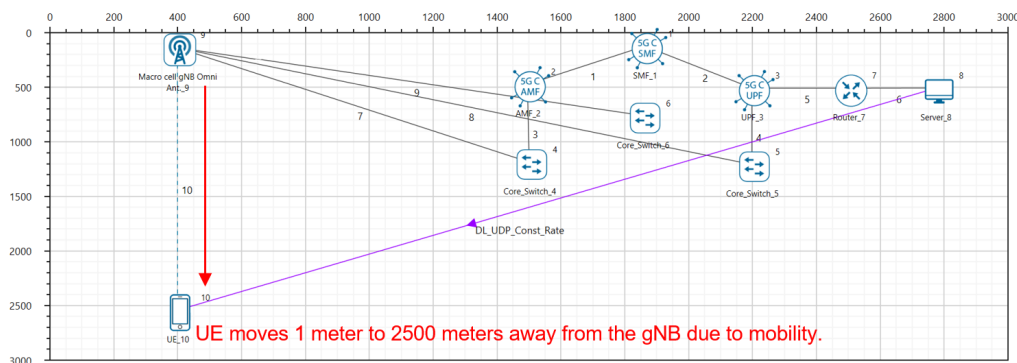


Figure 4-61: Network setup for studying Throughput vs. UE Movement

The following set of procedures were done to generate this sample:

Step 1: A network scenario is designed in NetSim GUI consisting of 1 gNB, 5G-Core, and 1 UE and 1 Wired Node in the “5G NR” Network Library.

Step 2: Grid Length was set to 7000 m × 3500 m.

Step 3: The device positions are set as per the table given below.

Table 4-57: *Device general properties*

Device	UE_10	gNB_9
x-axis	500	500
y-axis	600	0

Step 4: The following properties were set in Interface (5G RAN) of gNB

Table 4-58: *gNB > Interface (5G RAN) > Physical layer properties*

Parameter	Value
Tx Power	40
gNB Height	10 m
CA Type	Single Band
CA Configuration	n78
Component Carrier 1	Component Carrier 1
DL-UL Ratio	4:1
Numerology	0
Channel Bandwidth	10 MHz
<i>PDSCH and PUSCH Configuration</i>	
MCS Table	QAM64LOWSE
<i>CSI Report Configuration</i>	
CQI Table	TABLE3
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Propagation Model	Urban Macro
LOS NLOS Selection	User Defined
LOS Probability	0
Shadow Fading Model	None
Fast Fading Model	No Fading

Step 5: Set Tx Antenna Count and Rx Antenna Count as 2 and 1 in gNB properties > Interface(5G RAN) > Physical Layer.

Step 6: Set Tx Antenna Count and Rx Antenna Count as 1 and 2 in UE properties > Interface(5G RAN) > Physical Layer.

Step 7: In the Position Properties of UE 8, set Mobility Model as File Based Mobility

File Based Mobility: In File Based Mobility, users can write their own custom mobility models and define the movement of the mobile users. Create a mobility.csv file for UE's involved in mobility with each step equal to 4 sec with distance 100 m.

The NetSim Mobility File (mobility.csv) format is as follows:

#Time(s)	Device ID	X	Y	Z
0	10	500	601	0
4	10	500	701	0
8	10	500	801	0
12	10	500	901	0
16	10	500	1001	0
20	10	500	1101	0
24	10	500	1201	0
28	10	500	1301	0
32	10	500	1401	0
36	10	500	1501	0
40	10	500	1601	0
44	10	500	1701	0
48	10	500	1801	0
52	10	500	1901	0
56	10	500	2001	0
60	10	500	2101	0
64	10	500	2201	0
68	10	500	2301	0
72	10	500	2401	0
76	10	500	2501	0
80	10	500	2601	0
84	10	500	2701	0
88	10	500	2801	0
90	10	500	2901	0
92	10	500	3001	0
94	10	500	2601	0
96	10	500	2701	0
98	10	500	2801	0
100	10	500	2901	0
102	10	500	3001	0
104	10	500	3101	0

Figure 4-62: *mobility.csv* file.

Step 8: A CBR Application was generated from set traffic tab in top ribbon between Wired node and UE 10 (Source as Server and destination as UE) with Packet Size of 1460 Bytes and Inter Arrival Time of 1168 μ s.

Step 10: The Transport Protocol is set to UDP. Additionally, the “Start Time(s)” parameter is set to 1s. To configure it, click on created application, change the properties accordingly in the right-side property panel.

Step 11: Application throughput vs time plot under Application and Link performance is enabled from the configure reports tab in plots tab in the NetSim GUI. Additionally, LTE Radio measurements log is enabled for detailed analysis.

Step 12: Run simulation for 105 s.

Results:

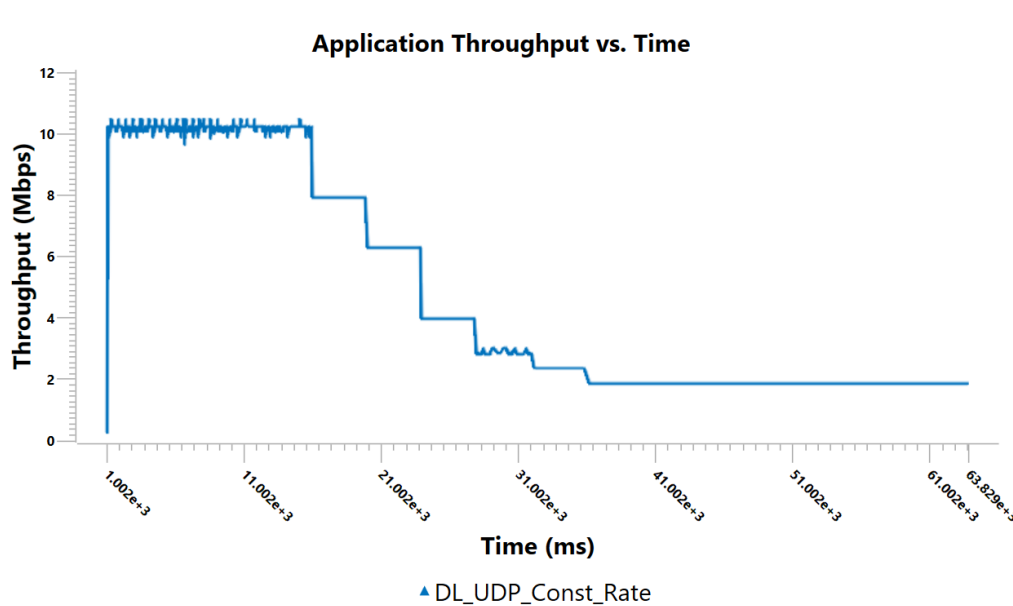


Figure 4-63: Plot of Throughput (Mbps) vs Time (sec).

Discussion

As the UE moves away from the gNB, the Application throughput starts reducing. The maximum throughput of 10 Mbps is obtained until 11.9 sec. At 16s the UE is 1000m away from the gNB, then the throughput drops to 6.30 Mbps and at time 36.6 sec (when UE is 1800m away from gNB), the throughput drops to 1.86 Mbps and subsequently keeps dropping as till the end of the simulation as the UE continues to move further away from the gNB.

4.13 Simulate and study the 5G Handover procedure

4.13.1 Introduction

The handover logic of NetSim 5G library is based on the Strongest Adjacent Cell Handover Algorithm (Ref: Handover within 3GPP LTE: Design Principles and Performance. Konstantinos Dimou. Ericsson Research). The algorithm enables each UE to connect to that gNB which provides the highest Reference Signal Received Power (RSRP). Therefore, a handover occurs the moment a better gNB (adjacent cell has offset stronger RSRP, measured as SNR in NetSim) is detected.

This algorithm is similar to 38.331, 5.5.4.4 Event A3 wherein Neighbor cell’s RSRP becomes Offset better than serving cell’s RSRP. Note that in NetSim report-type is periodical and not event Triggered since NetSim is a discrete event simulator and not a continuous time simulator.

This algorithm is susceptible to ping-pong handovers; continuous handovers between the serving and adjacent cells on account of changes in RSRP due mobility and shadow-fading. At one instant the adjacent cell’s RSRP could be higher and the very next it could be the original serving cell’s RSRP, and so on.

To solve this problem the algorithm uses:

1. Hysteresis (Hand-over-margin, HOM) which adds a RSRP threshold (Adjacent cell RSRP – Serving cell RSRP > Hand-over-margin or hysteresis), and
2. Time-to-trigger (TTT) which adds a time threshold.

This HOM is part of NetSim implementation while TTT can be implemented as a custom project in NetSim.

4.13.2 Network Setup

Open NetSim and click on Examples > 5G NR > Handover in 5G NR > Handover Algorithm then click on the tile in the middle panel to load the example as shown in below Figure.

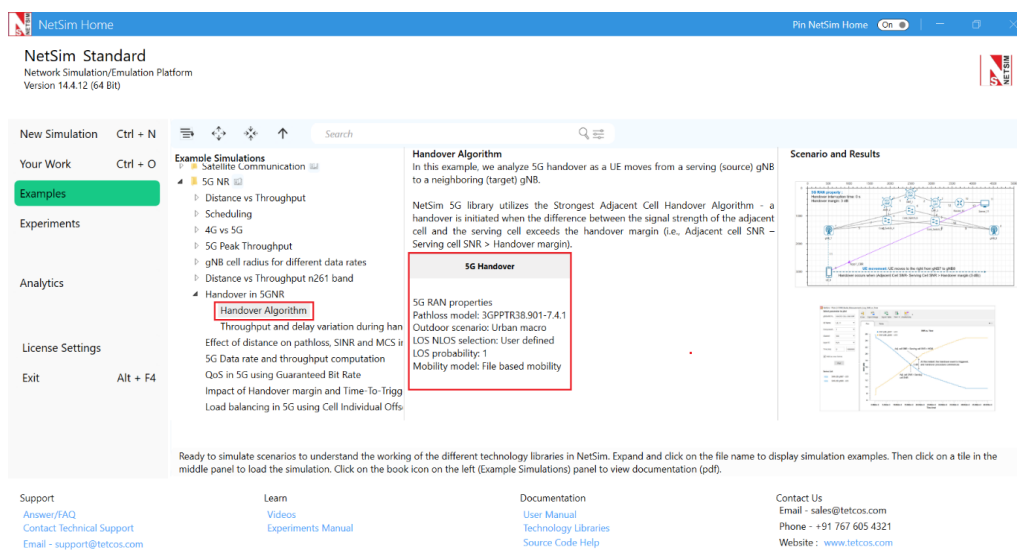


Figure 4-64: List of scenarios for the example of Handover in 5G NR

4.13.3 Handover Algorithm

NetSim UI displays the configuration file corresponding to this experiment as shown below.

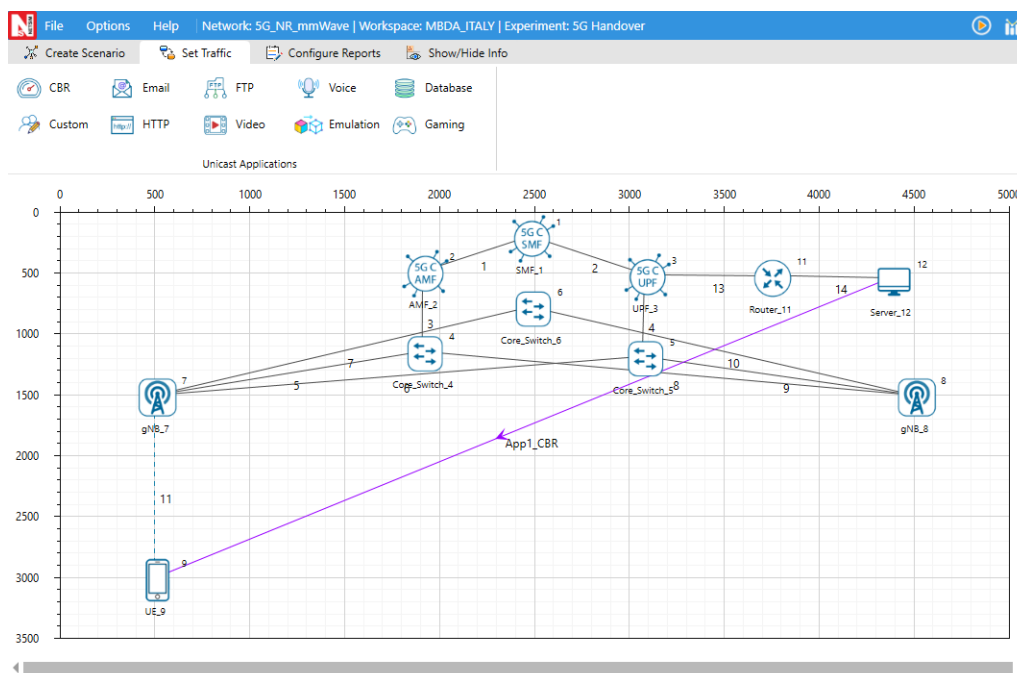


Figure 4-65: Network setup for studying the 5G handover

Procedure for 5G Handover

The following set of procedures were done to generate this sample:

Step 1: A network scenario is designed in NetSim GUI consisting of 5G-Core devices, 2 gNBs, and 1 UE in the “5G NR” Network Library.

Step 2: The device positions are set as per the table given below.

Table 4-59: Device positions

	gNB 7	gNB 8	UE 9
X Coordinate	500	4500	500
Y Coordinate	1500	1500	3000

Step 3: In the Position properties of UE 9, set Mobility Model as File Based Mobility.

File Based Mobility:

In File Based Mobility, users can write their own custom mobility models and define the movement of the mobile users. Create a mobility.csv file for UE’s involved in mobility with each step equal to 0.5 sec with distance 50 m.

The NetSim Mobility File (mobility.csv) format is as follows:

Table 4-60: mobility.csv file

#Time(s)	Device ID	X	Y	Z
0	9	550	2500	0
0.5	9	1000	2500	0
1	9	1050	2500	0

#Time(s)	Device ID	X	Y	Z
1.5	9	1100	2500	0
2	9	1150	2500	0
2.5	9	1200	2500	0
3	9	1250	2500	0
3.5	9	1300	2500	0
.
.
.
38	9	3900	2500	0
39	9	3950	2500	0
40	9	4000	2500	0

Step 4: Click on the gNB 7 and expand the right-side property panel and set as following Table.

Table 4-61: *gNB 7 > 5G RAN Interface Properties Window*

Interface 4 (5G RAN) Properties	Value
CA Type	Single Band
CA Configuration	n78
CA Count	1
<i>Component Carrier 1</i>	
DL UL Ratio	4:1
Numerology	0
Channel Bandwidth (MHz)	10
PRB Count	52
<i>PDSCH Configuration</i>	
MCS Table	QAM64LOWSE
X Overhead	XOH0
<i>PUSCH Configuration</i>	
MCS Table	QAM64LOWSE
<i>CSI Report Configuration</i>	
CQI Table	Table 3
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS NLOS Selection	User Defined
LOS Probability	1
Shadow Fading Model	None
Fast Fading Model	No Fading
O2I Building Penetration Model	None
Additional Loss Model	None

Similarly, it is set for gNB 8.

Step 5: The Tx Antenna Count was set to 2 and Rx Antenna Count was set to 1 in gNB > Interface (5G RAN) > Physical Layer.

Step 6: The Tx Antenna Count was set to 1 and Rx Antenna Count was set to 2 in UE > Interface (5G RAN) > Physical Layer.

Step 7: Configure CBR application from Server 12 to UE 9 by clicking on the set traffic tab in ribbon on the top. Then, click on the created application and expand the application property on the right and set the start time to 40 seconds, and QOS to UGS.

Step 8: Packet Trace is enabled by clicking on Configure reports tab. At the end of the simulation, a very large .csv file contains all the packet information and is available for the users to perform packet level analysis.

Step 9: LTENR Radio measurement, Handover log and SNR vs Time plot under LTENR Radio Measurements plots are enabled by clicking on plots/logs from right panel for detailed analysis.

Step 10: Run the Simulation for 50 Seconds.

Results and Discussion

Handover Signaling

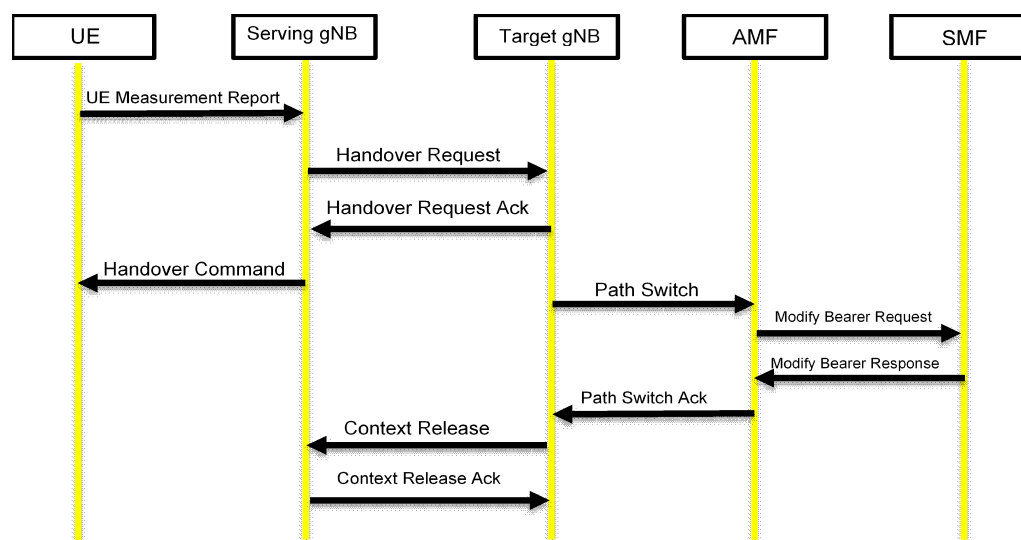


Figure 4-66: Control packet flow in the 5G handover process

The packet flow depicted above can be observed from the packet trace.

- UE will send the UE MEASUREMENT REPORT every 5 ms to the connected gNB
- The initial UE-gNB connection and UE association with the core takes place by transferring the RRC and Registration, session request response packets.
- As Per the configured file-based mobility, UE 9 moves towards gNB 8.
- After 18.5 s gNB 7 sends the HANDOVER REQUEST to gNB 8.
- gNB 8 sends back HANDOVER REQUEST ACK to gNB 7.
- After receiving HANDOVER REQUEST ACK from gNB 8, gNB 7 sends the HANDOVER COMMAND to UE 9

- After the HANOVER COMMAND packet is transferred to the UE, the target gNB will send the PATH SWITCH packet to the AMF via Switch 4.
- When the AMF receives the PATH SWITCH packet, it sends MODIFY BEARER REQUEST to the SMF
- The SMF on receiving the MODIFY BEARER REQUEST provides an acknowledgement to the AMF.
- On receiving the MODIFY BEARER RESPONSE from the SMF, AMF acknowledges the Path switch request sent by the target gNB by sending the PATH SWITCH ACK packet back to the target gNB via Switch 4.
- The target gNB sends CONTEXT RELEASE to source gNB, and the source gNB sends back CONTEXT RELEASE ACK to target gNB. The context release request and ack packets are sent between the source and target gNB via Switch 6.
- RRC Reconfiguration will take place between target gNB and UE 9.
- The UE 9 will start sending the UE (SS/PBCH) MEASUREMENT REPORT to gNB 8.

SEGMENT_ID	PACKET_TYPE	CONTROL_PACKET_TYPE/APP_NAME	SOURCE_ID	DESTINATION_ID	TRANSMITTER_ID	RECEIVER_ID	APP_LAYER_ARRIVAL_TIME(μS)	TRX_LAYER_ARRIVAL_T
4368	N/A	Control_Packet UE (SS/PBCH) Measurement Report	UE-9	GNB-7	UE-9	GNB-7	N/A	N/A
4369	N/A	Control_Packet RRC_MIB	GNB-7	Broadcast-0	GNB-7	UE-9	N/A	N/A
4370	N/A	Control_Packet RRC_MIB	GNB-8	Broadcast-0	GNB-8	UE-9	N/A	N/A
4371	N/A	Control_Packet UE (SS/PBCH) Measurement Report	UE-9	GNB-7	UE-9	GNB-7	N/A	N/A
4372	N/A	Control_Packet UE (SS/PBCH) Measurement Report	UE-9	GNB-7	UE-9	GNB-7	N/A	N/A
4373	N/A	Control_Packet UE (SS/PBCH) Measurement Report	UE-9	GNB-7	UE-9	GNB-7	N/A	N/A
4374	N/A	Control_Packet UE (SS/PBCH) Measurement Report	UE-9	GNB-7	UE-9	GNB-7	N/A	N/A
4375	N/A	Control_Packet HANOVER_REQUEST	GNB-7	GNB-8	GNB-7	SWITCH-6	N/A	N/A
4376	N/A	Control_Packet HANOVER_REQUEST_ACK	GNB-8	GNB-7	GNB-8	SWITCH-6	N/A	N/A
4377	N/A	Control_Packet HANOVER_REQUEST_ACK	GNB-8	GNB-7	GNB-8	SWITCH-6	N/A	N/A
4378	N/A	Control_Packet HANOVER_REQUEST_ACK	GNB-8	GNB-7	GNB-8	SWITCH-6	N/A	N/A
4379	N/A	Control_Packet HANOVER_COMMAND	GNB-7	UE-9	GNB-7	UE-9	N/A	N/A
4380	0	Control_Packet PATH_SWITCH	GNB-8	AMF-2	GNB-8	SWITCH-4	18501999	
4381	0	Control_Packet PATH_SWITCH	GNB-8	AMF-2	SWITCH-4	AMF-2	18501999	
4382	0	Control_Packet MODIFY_BEARER_REQUEST	AMF-2	SMF-1	AMF-2	SMF-1	18501999.36	1:
4383	0	Control_Packet MODIFY_BEARER_RESPONSE	SMF-1	AMF-2	SMF-1	AMF-2	18501999.51	1:
4384	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	AMF-2	SMF-1	18501999.67	1:
4385	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	AMF-2	SWITCH-4	18501999.67	1:
4386	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	AMF-2	SMF-1	18501999.67	1:
4387	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	SMF-1	UPF-3	18501999.67	1:
4388	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	SWITCH-4	GNB-8	18501999.67	1:
4389	N/A	Control_Packet UE_CONTEXT_RELEASE	GNB-8	GNB-7	GNB-8	SWITCH-6	N/A	N/A
4390	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	AMF-2	SMF-1	18501999.67	1:
4391	0	Control_Packet PATH_SWITCH_ACK	AMF-2	GNB-8	UPF-3	ROUTER-11	18501999.67	1:
4392	N/A	Control_Packet UE_CONTEXT_RELEASE	GNB-8	GNB-7	SWITCH-6	GNB-7	N/A	N/A

Figure 4-67: Screenshot of NetSim packet trace file showing the control packets involved in handover. Some columns have been hidden before the last column.

Plot of SNR vs. Time

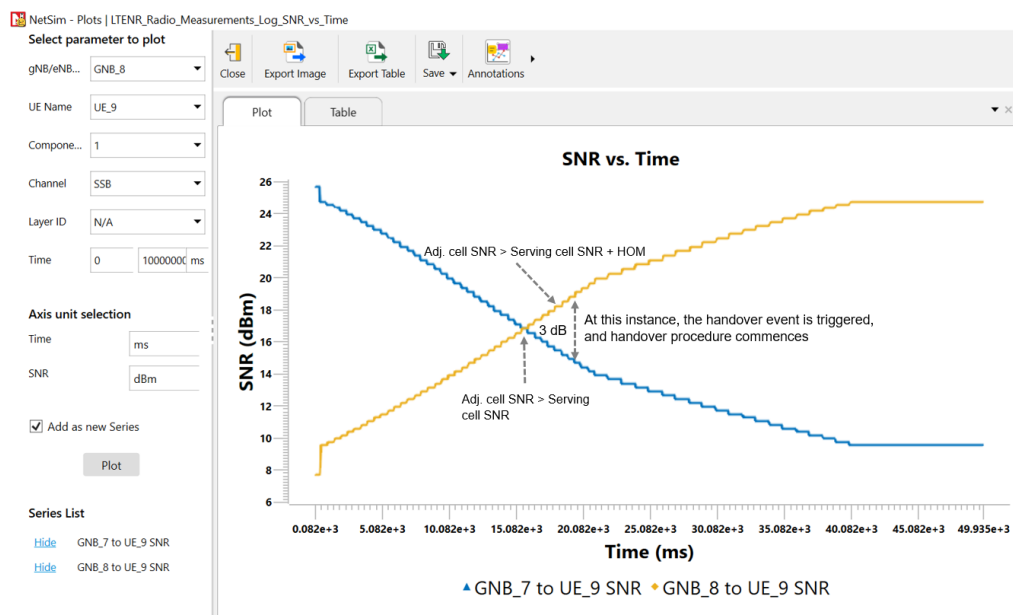


Figure 4-68: Plot of the DL SNR over time seen by the UE from the serving cell (gNB 7) and the target cell (gNB 8). The handover process does not commence with Adj. cell SNR is greater than Serving cell SNR but only commences with Adj. cell SNR is greater than Serving cell SNR by the Handover margin (3 dB in this case).

This chart can be obtained in NetSim by enabling the option to plot SNR vs. time prior to the simulation. First, plot the SNR curve for gNB7 and UE9 keeping the channel as SSB. Then select “Add as new series” and select the gNB/eNB as gNB8 and UE name as UE9. Click on plot, and you would then obtain the above “stacked” plot

- At 15.6 seconds, the signal-to-noise ratio (SNR) from both gNB7 and gNB8 is 16.84 dB. This is the point where the SNR curves for both gNBs intersect.
- At 18.6 seconds, the SNR from gNB7 is 15.21 dB and the SNR from gNB8 is 18.54 dB. This is the point where Adj cell RSRP from gNB8 exceeds the serving cell RSRP by the handover margin (HOM) of 3 dB.

4.13.4 Throughput and delay variation during handover

NetSim UI displays the configuration file corresponding to this experiment as shown below.

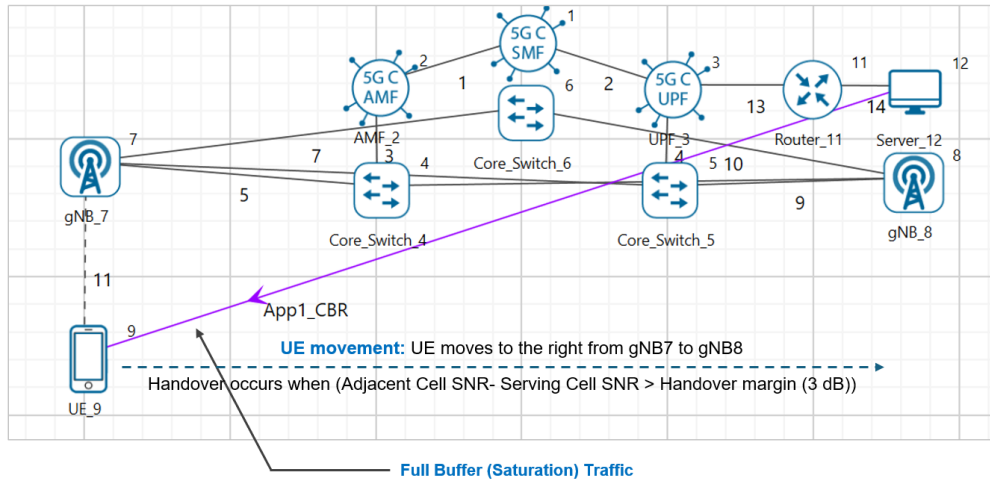


Figure 4-69: Network set up for studying the Throughput and delay variation during handover.

Procedure for Effect of Handover on Delay and Throughput

The following set of procedures were done to generate this sample:

Step 1: A network scenario is designed in NetSim GUI consisting of 2 gNBs, 5G Core, 1 Router, 1 Wired Node and 1 UE in the “5G NR” Network Library.

Step 2: The device positions are set as per the table given below.

Table 4-62: Device positions

	gNB 7	gNB 8	UE 9
X Coordinate	500	4500	500
Y Coordinate	500	500	1000

Sep 3: Click on the gNB 7 and expand the right-hand side properties, and set as following

Table 4-63: gNB 7 > Interface(5G RAN) Properties Setting

Interface (5G RAN) Properties	Value
CA Type	Single Band
CA Configuration	n78
CA Count	1
Component Carrier 1	Component Carrier 1
DL UL Ratio	4:1
Numerology	0
Channel Bandwidth (MHz)	10
PRB Count	52
<i>PDSCH Configuration</i>	
MCS Table	QAM64
X Overhead	XOH0
<i>PUSCH Configuration</i>	

Interface (5G RAN) Properties	Value
MCS Table	QAM64
<i>CSI Report Configuration</i>	
CQI Table	Table 1
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS_NLOS Selection	User Defined
LOS Probability	1
Shadow Fading Model	None
Fast Fading Model	No Fading
Additional Loss Model	None

Similarly, it is set for gNB 8.

Step 4: The Tx Antenna Count was set to 2 and Rx Antenna Count was set to 1 in gNB > Interface (5G RAN) > Physical Layer.

Step 5: The Tx Antenna Count was set to 1 and Rx Antenna Count was set to 2 in UE > Interface (5G RAN) > Physical Layer.

Step 6: In the position properties of UE 9, set Mobility Model as File Based Mobility.

Step 7: The BER and propagation delay was set to zero in all the wired links.

Step 8: Configure application between server and UE by selecting an application from Set Traffic Tab. Click on the application flow App1 CBR, expand the application property panel on the right and set the start time to 1s, QOS to UGS and Inter arrival time to 233.6 μ s by keeping the packet size as default.

Additionally, the “Start Time(s)” parameter is set to 1, while configuring the application.

File Based Mobility:

In File Based Mobility, users can write their own custom mobility models and define the movement of the mobile users. Create a mobility.csv file for UE’s involved in mobility with each step equal to 0.5 sec with distance 50 m.

The NetSim Mobility File (mobility.csv) format is as follows:

Table 4-64: *mobility.csv file*

#Time(s)	Device ID	X	Y	Z
0	9	500	1000	0
0.5	9	750	1250	0
1	9	1000	1500	0
1.5	9	1250	1750	0
2	9	1500	2000	0
2.5	9	1750	2250	0
3	9	2000	2500	0
3.5	9	2250	2750	0

#Time(s)	Device ID	X	Y	Z
4	9	2500	3000	0
4.5	9	2750	2750	0
5	9	3250	2250	0
5.5	9	3500	2000	0
6	9	3750	1750	0
6.5	9	4000	1500	0
7	9	4250	1250	0
7.5	9	4500	500	0

Step 9: The LTENR Radio measurement log file can be enabled per the information provided in Section 3.20 of 5G technology library document and enable the Latency vs. Time and Throughput vs. Time under application performance plots

Step 10: Run the Simulation for 20 Seconds.

Results and Discussion

UDP Throughput Plot

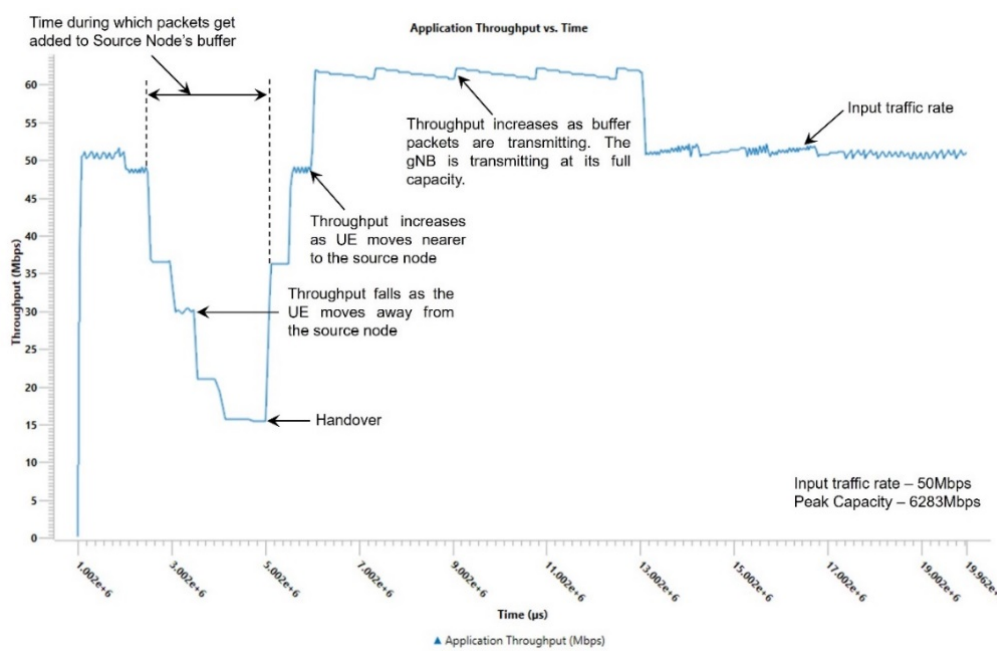


Figure 4-70: We see how throughput varies with time, and the reasons for this variation, as the UE moves from the source gNB to the target gNB.

The application starts at 1 s. The generation rate is 50 Mbps and we see the network is able to handle this load, and the throughput is equal to the generation rate. We then observe that the throughput starts dropping from 2.5s onwards because the UE is moving away from the gNB. As it moves as the SNR falls, and therefore a lower MCS is chosen leading to reduced throughput. At 3s there is a further drop in throughput and then a final dip at 3.9s. The time the handover occurs is 5.04 sec. At this point we see the throughput starts increasing once UE attaches to gNB8. The throughput for a short period of time is greater than 50 Mbps because of the transmission of queued packets in the s-gNB buffer which get transferred to the t-gNB buffer over the Xn interface.

UDP Delay Plot

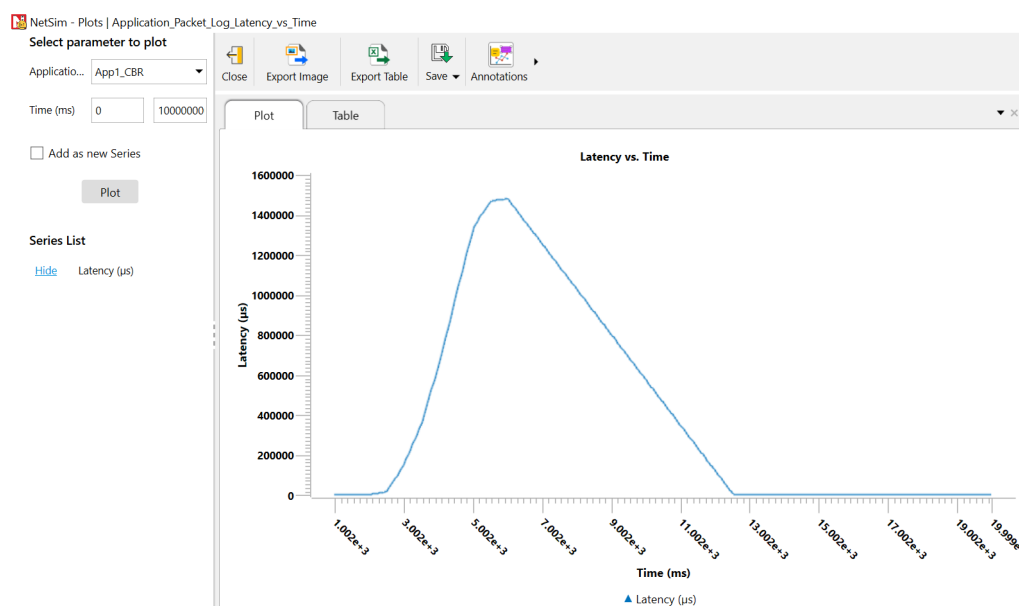


Figure 4-71: Plot of Delay vs. Time

Since the application starts at 1 s, the UDP plot begins at 1000 ms. The initial UDP delay is ≈ 1 ms, and hence the curve is seen as close to 0 on the Y axis. We then see that the packet delay starts increasing as the UE moves away from the gNB. This is because the link capacity drops as the CQI falls. The peak delay experienced shoots up to ≈ 1.1 s at ≈ 5.5 s when the handover occurs. Once the handover is complete the delay starts reducing and returns to ≈ 1 ms. The reason is that as the UE moves closer to the gNB its CQI increases and hence the 5G link can transmit at a higher rate.

4.14 Impact of Handover margin and Time-To-Trigger on the performance of a 5G heterogeneous network

In a 5G heterogeneous network we analyze how the handover margin and time-to-trigger parameters influence two performance metrics: the number of handovers and the sum throughput (aggregate throughput of all UEs).

Open NetSim, Select Examples \rightarrow 5G NR \rightarrow Impact of Handover margin and Time-To-Trigger on the performance of a 5G heterogeneous network, then click on the tile in the middle panel to load the example as shown in below screenshot.



Figure 4-72: List of scenarios for the example of a 5G heterogeneous network

The following network diagram illustrates what the NetSim UI displays while opening the example configuration file.

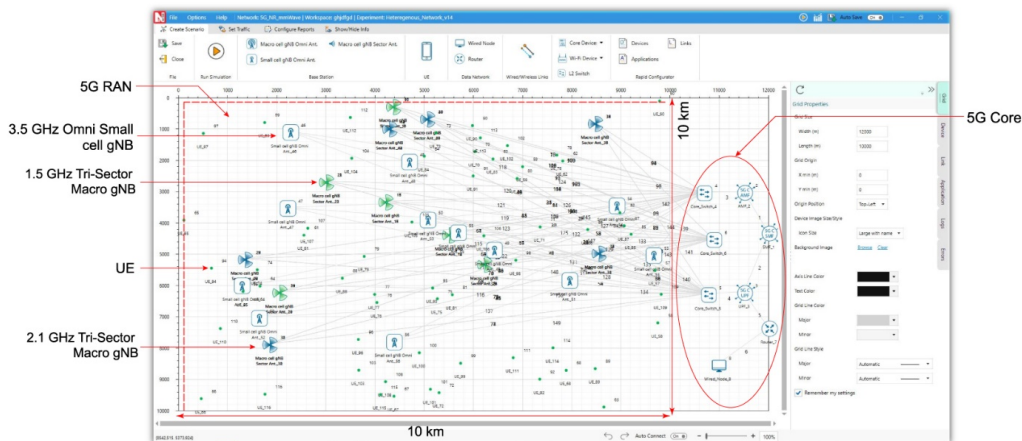


Figure 4-73: Network setup for studying 5G heterogeneous network.

System model

The study is based on a 3-tier 5G HetNet simulation. The network comprises gNB tiers at 1.5 GHz, 2.1 GHz, and 3.5 GHz.

Table 4-65: System parameters for the gNBs in the three different tiers

gNB tiers	Frequency (GHz)	Pathloss Exponent (-)	Transmit Power (dBm)	Antenna Type	Antenna Height (m)	Channel Bandwidth (MHz)
Tier 1 gNBs	1.5	2.9	37	Sector (3 Nos)	30	10
Tier 2 gNBs	2.1	2.9	37	Sector (3 Nos)	30	15
Tier 3 gNBs	3.5	3.9	30	Omni-Directional	20	50

Each tier has a specific pathloss exponent influencing signal attenuation. The transmit power, antenna types (sector and omni-directional), and antenna heights vary across tiers. The simulation area is 10 km², with 60 User equipments (UEs) distributed randomly and 18 tier-I gNBs, 18 tier-II gNBs, and 12 tier-III gNBs distributed randomly. The gNBs across tiers will not interfere since they operate at different frequencies.

Simulation parameters include gNB and UE antenna configurations, pathloss models, interference models, and mobility settings. Shadowing effects are modeled using a lognormal distribution with a standard deviation of 5 dB.

Table 4-66: *System parameters for the scenario being simulated*

Parameter	Value
Simulation Area	10 km × 10 km
Number of UEs	60 (distributed randomly)
Number of Tier 1 gNBs	18 (distributed randomly)
Number of Tier 2 gNBs	18 (distributed randomly)
Number of Tier 3 gNBs	12 (distributed randomly)
gNB Tx×Rx Antenna Count	1×1
UE Tx×Rx Antenna Count	1×1
gNB Pathloss Model	Log Distance
Downlink Interference Model	Exact Geometric Model
Mobility Model	Random Walk
Velocity	33 m/s
Calculation (update) interval for mobility	0.12 s (120 ms)
Measurement Interval (ms)	160
Shadowing	Lognormal. Std. dev. = 5 dB
Time to trigger (ms)	Varies; 128, 256, 512, 1024
Handover Margin (dB)	Varies; 0, 1, 2, 3, 4, 5, 6
Handover model	A3 event based
Simulation Time	30 s
Traffic model	Saturated (full buffer) DL

The Time to Trigger (TTT) and Handover Margin (HO Margin) are variables in the study. An A3 event-based handover model is used. An Event A3-based HO is triggered when,

- The SINR of a user from target gNB becomes higher than the SINR of the user from the serving gNB by an offset. This offset is termed as handover margin.
- And this condition (C1) is maintained for a duration known as the time to trigger.

The model focuses on the interaction of these parameters and their effect on network performance, measured in terms of handover count and sum throughput.

Procedure to simulate the scenario using Multiparameter Sweeper

- Click on the first experiment tile to open the scenario in NetSim. Save this scenario and open the experiment in the file explorer and open Configuration.netsim in Visual Studios.

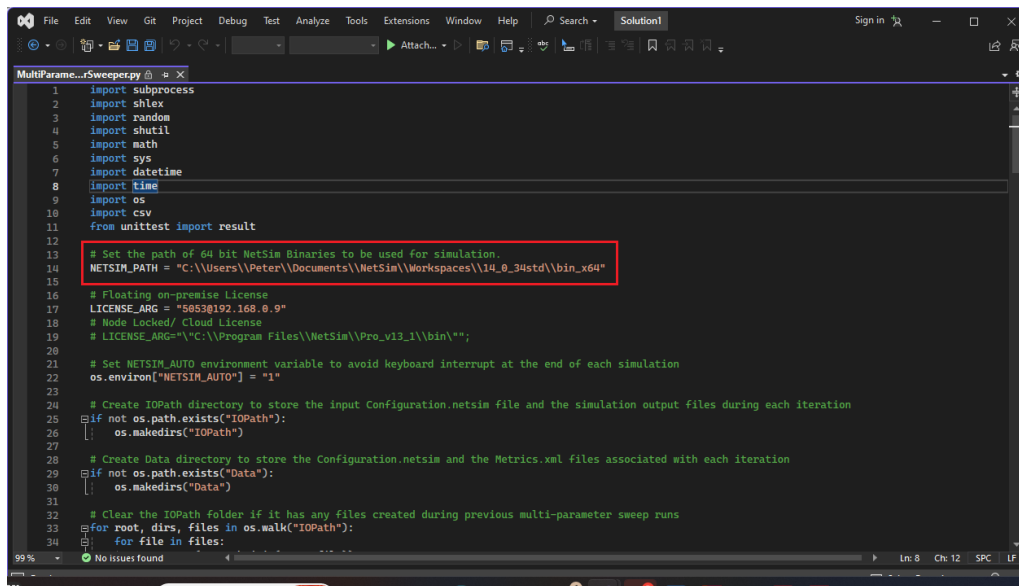


Figure 4-76: Changing the NETSIM_PATH in multi-parameter-sweeper.py

- Run via CLI from 5g-Heterogeneous-Networkv14.3 folder as shown below.

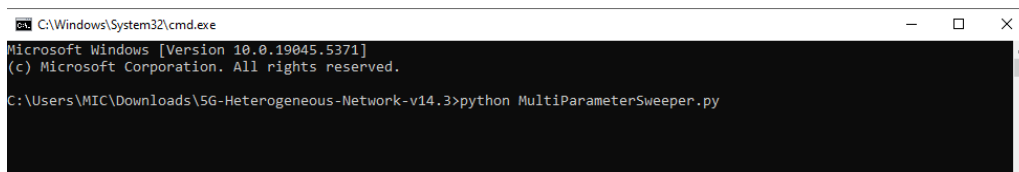


Figure 4-77: Running the multi-parameter sweeper via CLI

- The multi-parameter sweeper runs a total of 28 simulations, varying handover margin from 0 to 6 dB and time to trigger from 128, 256, 512, 1024 for all gNB’s. It generates an output file named “result.csv” which stores sum throughputs of all applications and the handover count. (It took us approximately 4 hours to complete all 28 simulations; we used a machine with a i5 processor and with 8 GB RAM).

Results and discussion

We tabulate below the handover count and sum throughput for various values of time to trigger (ms) and Handover margin (dB) which is obtained in results.csv file in multiparameter sweeper folder.

Table 4-67: Table demonstrates Sum Throughput and Handover Count variation with changes in Handover Margin and Time to Trigger (TTT).

Time-to-trigger (ms)	Handover margin (dB)	Sum throughput (Mbps)	Handover count
128	0	215.79	388
128	1	225.67	398
128	2	213.57	417
128	3	203.35	296
128	4	219.49	254
128	5	212.31	197

(continued)

Time-to-trigger (ms)	Handover margin (dB)	Sum throughput (Mbps)	Handover count
128	6	215.51	213
256	0	215.13	226
256	1	205.74	199
256	2	212.15	164
256	3	207.26	140
256	4	210.16	101
256	5	215.91	94
256	6	216.96	86
512	0	210.15	67
512	1	215.89	76
512	2	219.47	44
512	3	207.39	38
512	4	216.99	31
512	5	213.75	21
512	6	208.79	20
1024	0	217.39	23
1024	1	204.60	21
1024	2	207.97	18
1024	3	212.28	14
1024	4	213.46	15
1024	5	200.06	11
1024	6	200.10	8

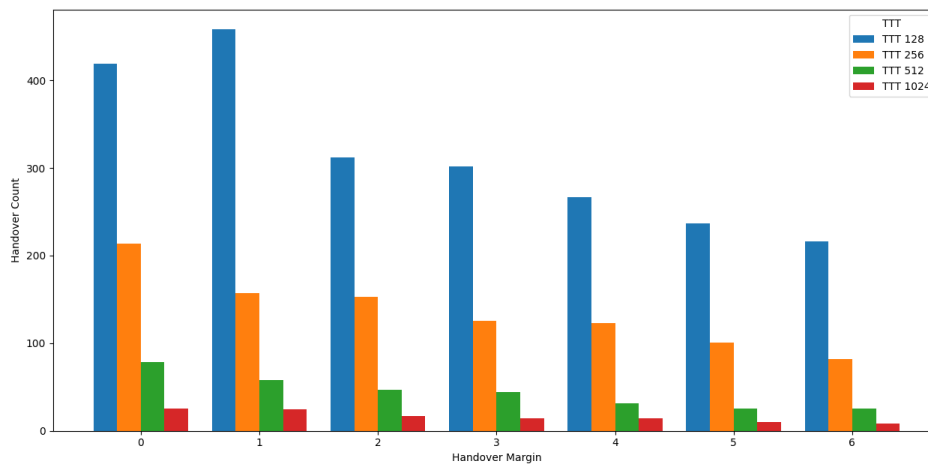


Figure 4-78: Plot representing Handover Count vs Handover Margin for different TTTs.

It is evident from the plot that the handover count decreases as the handover margin increases. This trend is consistent across different TTT values, suggesting that a higher handover margin generally results in fewer handovers. The rationale behind this trend is that increased handover margin leads to more stringent conditions for handover and thereby reduces the frequency of handover occurrences.

We also observe that the handover count decreases as TTT increases. Shorter TTT values lead

to quicker responses to signal changes, resulting in more frequent handovers, while longer TTT values delay the handover process, thereby reducing the handover count. The plot highlights the effects of both the handover margin and the TTT on handover count.

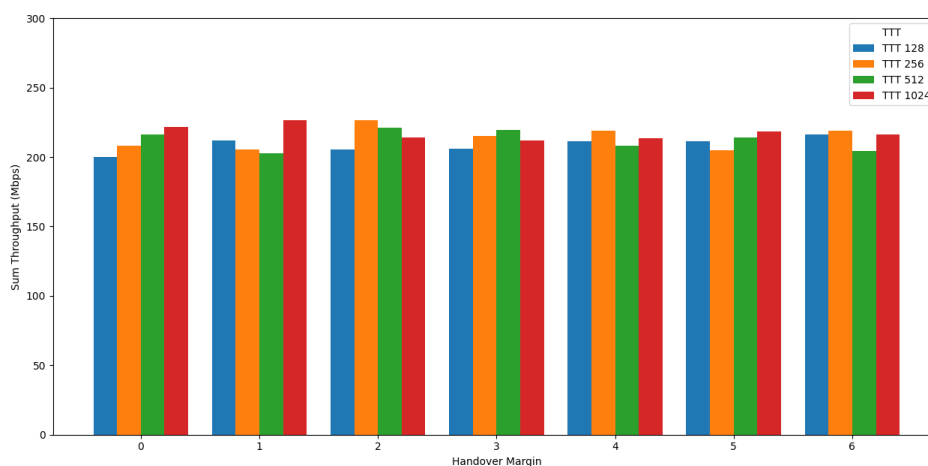


Figure 4-79: Plot representing Sum Throughput vs Handover Margin for Different TTTs

In the second chart we see that sum throughput generally rises and then falls with the increasing handover margin. For each handover margin we see the throughput again roughly increases and then drops as TTT increases. Initially, with a higher handover margin and/or higher TTT unnecessary and frequent handovers between cells are avoided. This leads to better throughput, but only to a certain extent. Beyond a point, a high handover margin and/or high TTT causes delayed handovers. Users stay connected to a weaker cell longer, despite being closer to a stronger cell, leading to poorer signal quality and thus lowering throughput.

4.15 QoS in 5G using GBR

4.15.1 Introduction

This experiment explores a new approach to providing Quality of Service (QoS) guarantees in 5G networks by modifying the traditional Proportional Fair Scheduling (PFS) algorithm. The study focuses on implementing Guaranteed Bit Rate (GBR) requirements using index bias (Lagrange multiplier) in the scheduler, and understanding how this modification impacts network performance under various scenarios.

The experiment investigates three cases: First, a baseline scenario using standard PFS where all User Equipment (UEs) are static but at different distances from the gNB (base station). Second, the same setup but with the modified PFS algorithm incorporating GBR guarantees for one UE. Finally, the study examines how the GBR mechanism performs when one UE is mobile. In all cases, we simulate Rayleigh fading channels between the gNB and UEs, creating dynamic channel conditions that reflect real-world wireless propagation.

Through these scenarios, the experiment demonstrates how the scheduler dynamically adjusts resource allocation to maintain throughput guarantees for specific UEs, at the expense of reducing resources to other users. The study is particularly useful for understanding how modern 5G networks can provide differentiated services and maintain quality guarantees in real-world conditions, where users may be at varying distances from the base station and potentially mobile.

4.15.2 Methodology

Open NetSim and click on Examples > 5G NR > QoS in 5G using GBR then click on the tile in the middle panel to load the example as shown below

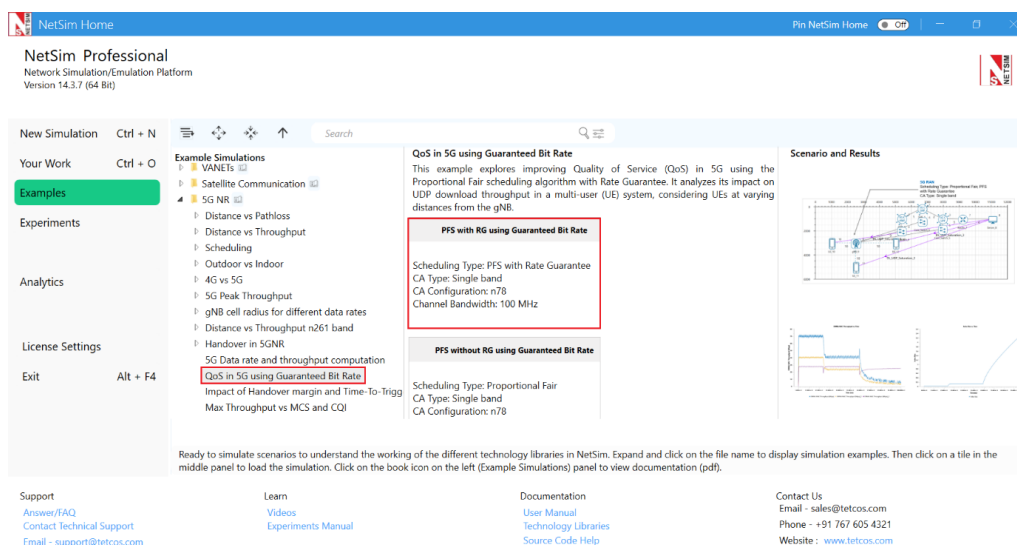


Figure 4-80: List scenarios for the example of a QoS in 5G using GBR network

4.15.3 Case 1: Proportional Fair Scheduling (PFS). All UEs are static

NetSim UI displays the configuration file corresponding to this experiment as shown below

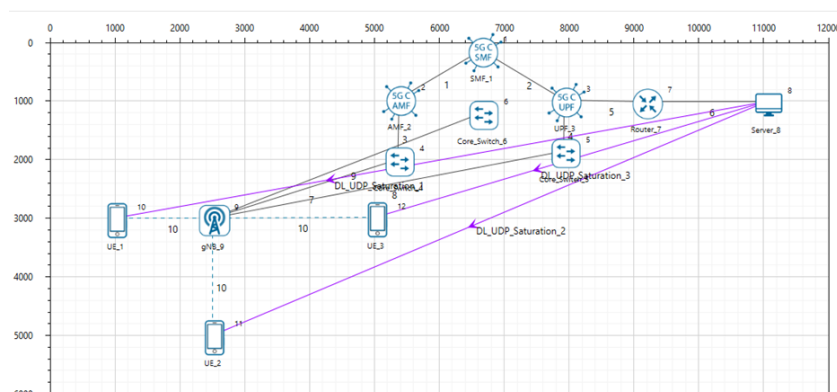


Figure 4-81: Network scenario

- Set grid length as 6000 m and width as 12000 m from grid property panel on the right.
- Set distance as follows:
 - gNB 9 to UE 10 = 1500 m
 - gNB 9 to UE 11 = 2000 m, and
 - gNB 9 to UE 12 = 2500 m
- Go to gNB properties → Interface (5G RAN), set the following properties as shown below Table. In the first case the scheduling type is set to PFS.

Table 4-68: *gNB > Interface (5G RAN) > Datalink and Physical layer properties*

Properties	Value
<i>Datalink Layer Properties</i>	
Scheduling Type	PFS, PFS with RG
<i>Physical Layer Properties</i>	
CA Type	Single band
CA Configuration	n78
<i>CA1</i>	
Numerology	1
Channel Bandwidth	100 MHz
<i>Channel Model</i>	
Pathloss Model	3GPP TR 38.901-7.4.1
Outdoor Scenario	Urban Macro
LOS NLOS Selection	User defined
LOS Probability	1
Shadow Fading Model	None
Fast Fading Model	No fading

- Set Tx Antenna Count as 1 and Rx Antenna Count as 1 in gNB properties.
- Set Tx Antenna Count as 1 and Rx Antenna Count as 1 in all the UEs.
- Go to the Set Traffic tab in the top ribbon and create a CBR application as shown in the table below. To change the transport protocol, QoS, and IAT click on the application and change the properties in the right-side property panel.

Table 4-69: *Application properties*

Application Properties	Application 1	Application 2	Application 3
Application Type	CBR	CBR	CBR
Source ID	8	8	8
Destination ID	10	11	12
QoS	UGS	UGS	UGS
Transport Protocol	UDP	UDP	UDP
Packet Size	1460 Bytes	1460 Bytes	1460 Bytes
Inter-arrival time	58.4 μ s	58.4 μ s	58.4 μ s
Start Time	1 s	1 s	1 s

- Make sure you enable these two plots under plots section as shown in figure

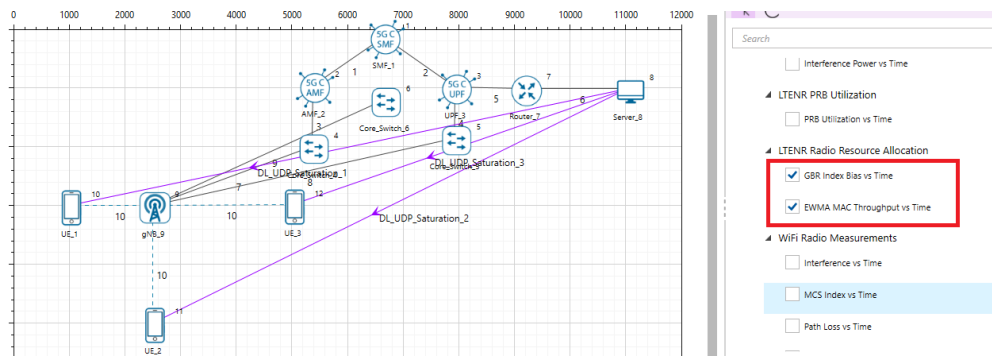


Figure 4-82: Enabling the plots

- Run Simulation for 100 s and note down throughput value in the results window for each UE.
- Here, we can see the resulting plots of the case:

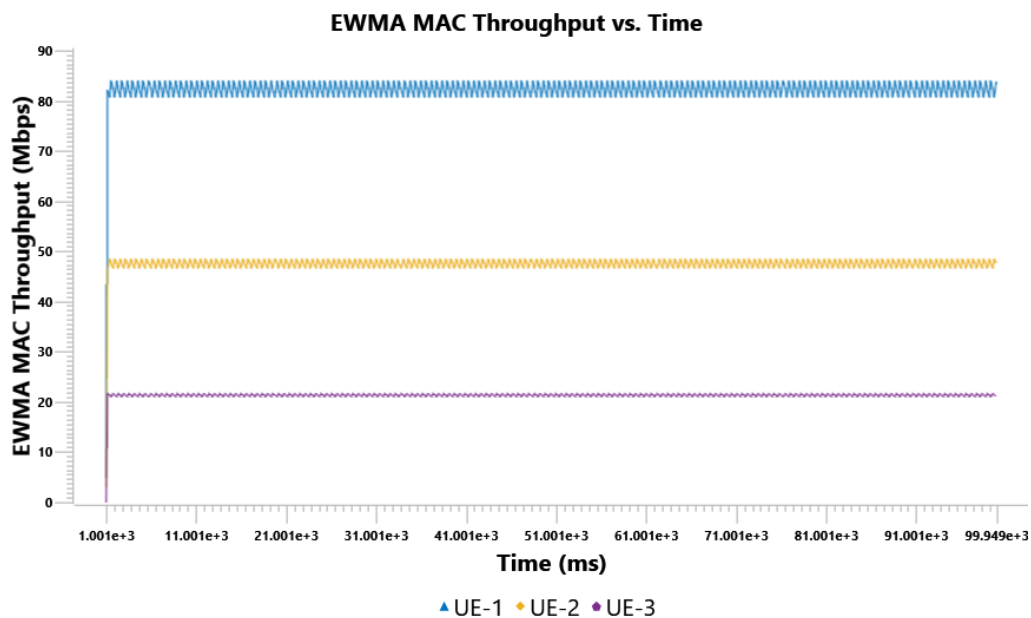


Figure 4-83: EWMA MAC Throughput vs Time

4.15.4 Case 2: PFS with RG using Guaranteed Bit Rate (GBR). All UEs are static.

- Now, for the same scenario above we just need to disable the GBR Configuration.
- For doing that we need to change the Scheduling algorithm from Proportional Fair to PFS with RG as shown below.

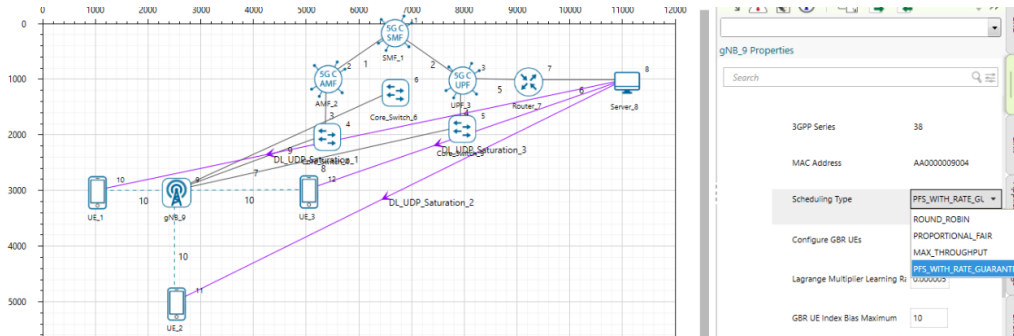


Figure 4-84: Changing the Scheduling Algorithm

- Then, Configure GBR UEs via GUI as shown below. Change the Downlink of UE12 to 27.57Mbps and click on update.

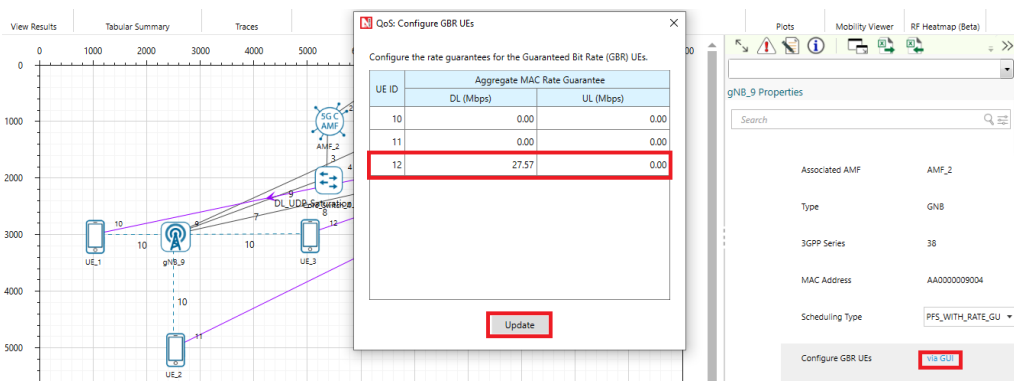


Figure 4-85: Adding GBR DL to UE

- Now, run the scenario for 100 s.
- Now plot the values using plots section in Results dashboard.

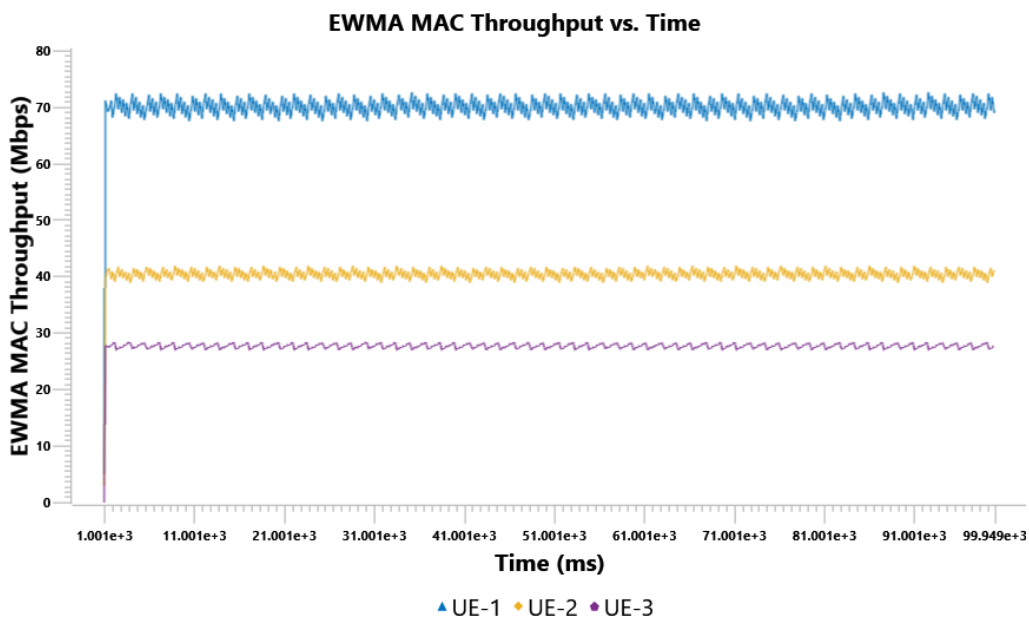


Figure 4-86: EWMA MAC Throughput vs Time

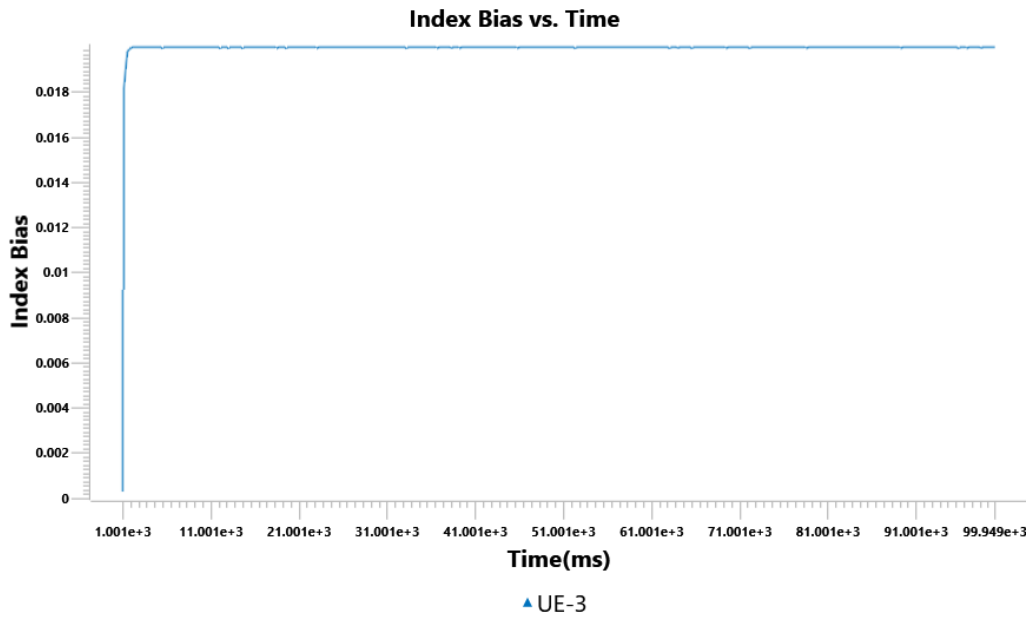


Figure 4-87: Index Bias vs Time

4.15.5 Case 3: PFS with RG using GBR. One of the UE’s is mobile.

- In this case we are working with GBR again.
- Now we need to add Mobility for UE-12, click on UE-12 then select Position → Mobility Model → File Based Mobility → via File.

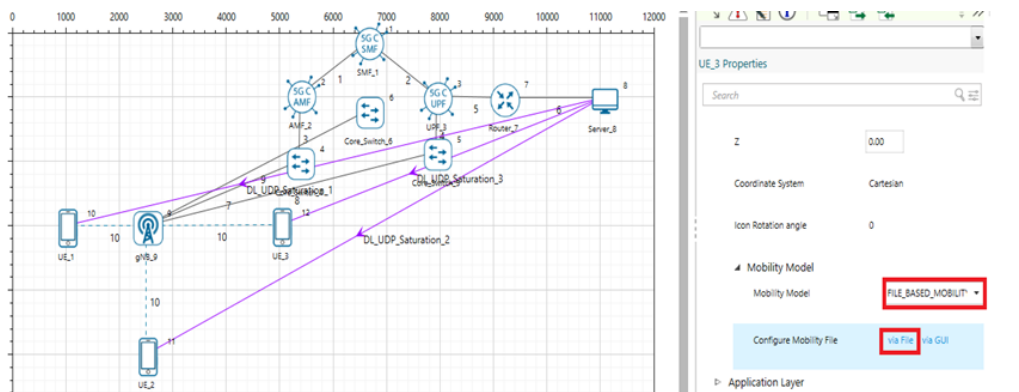


Figure 4-88: Adding file-based mobility to UE

- Now add Mobility as shown below:

1	#Time(s)	Device ID	X	Y	Z
2	0	12	5000	3000	0
3	1	12	5010	3000	0
4	2	12	5020	3000	0
5	3	12	5030	3000	0
6	4	12	5040	3000	0
7	5	12	5050	3000	0
8	6	12	5060	3000	0
9	7	12	5070	3000	0
10	8	12	5080	3000	0
11	9	12	5090	3000	0
12	10	12	5100	3000	0

Figure 4-89: *Mobility.csv file*

- In this way, you can add mobility by increasing 10 m of distance in the interval of 1 s and keep adding up to 100 s then save the file.
- Now, run the simulation for 100 s.
- The plots are obtained from results dashboard:
- So, we can see a lot of spike variations in plots due to mobility in UE 3.

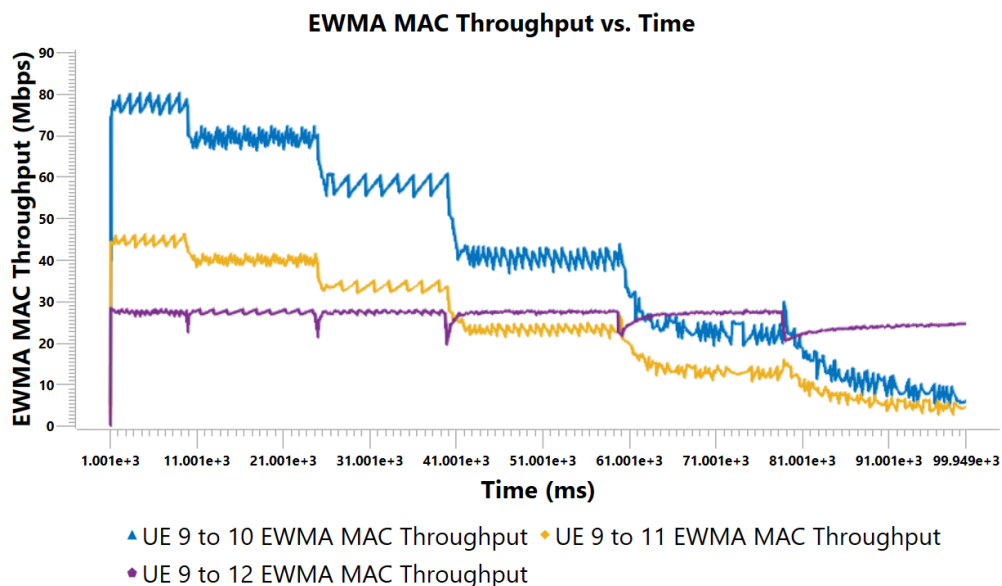


Figure 4-90: *EWMA MAC Throughput vs Time*

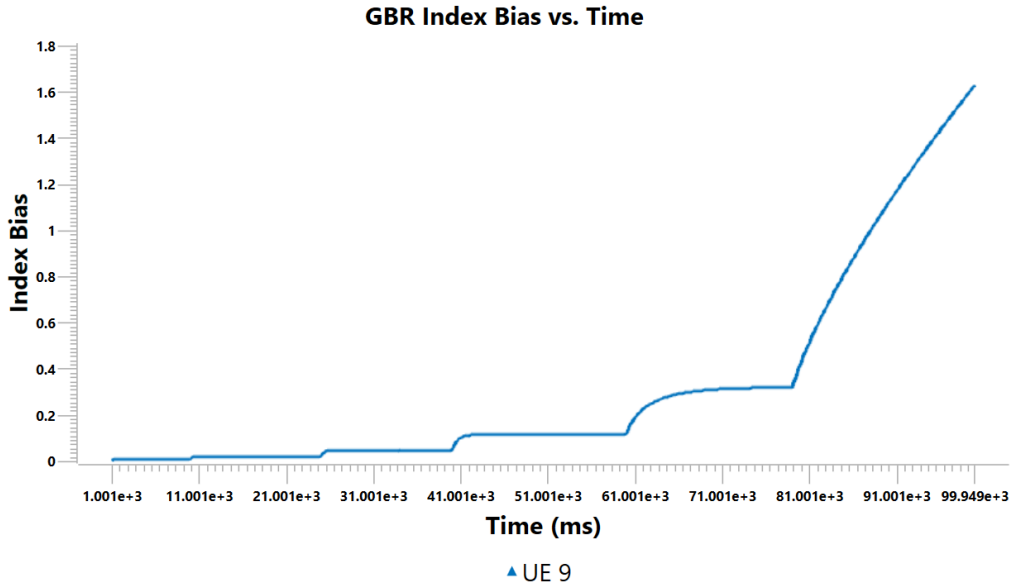


Figure 4-91: Index Bias vs Time

4.15.6 Obtaining the EWMA MAC Throughput and Resource share

Now, let’s see the MAC Throughputs, to obtain them follow the steps:

- Select the Logs section in Result Metrics, then click on LTENR Radio Resource Allocation.csv file as shown below.

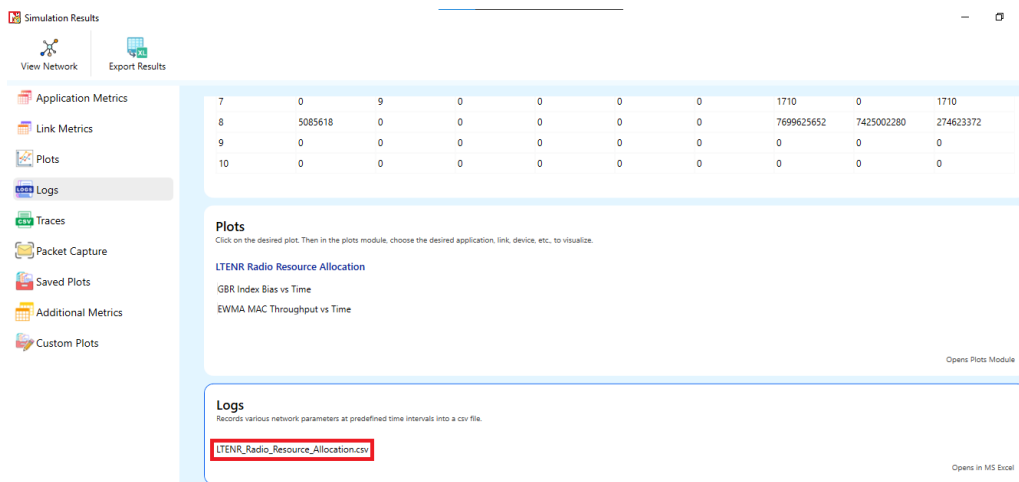


Figure 4-92: Results dashboard window

- After the log file is loaded into the excel sheet, select on the pivot table section below and select the checkboxes of UE ID and EWMA MAC throughput on the right side.
- Now drag the UE ID to the rows and EWMA MAC throughput to the values of the table and change the values from sum to average by right clicking on that column head as shown below.

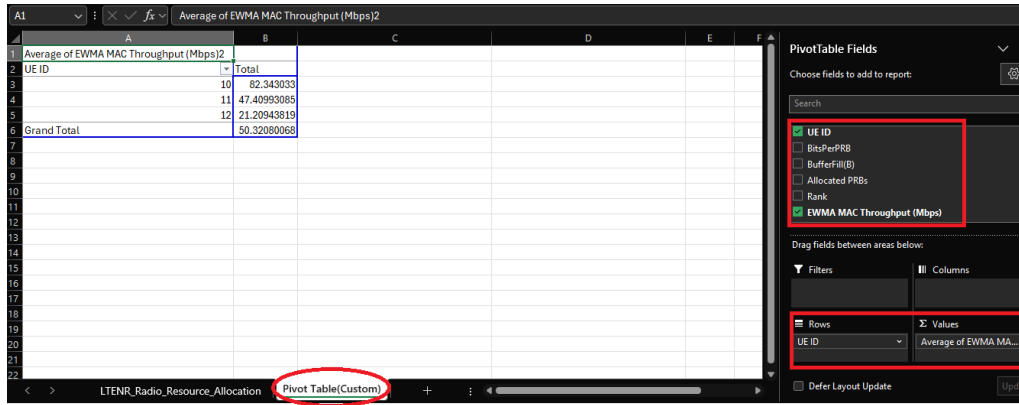


Figure 4-93: Average of EWMA Throughput

- Now in the sheet table, you can see the MAC Throughput values of respective UEs to the right side of them under the ‘Total’ named column.
- In this way, you can obtain the MAC Throughput values of 3 UEs in all the three cases using the LTENR Radio Resource Allocation.csv log file.
- The values obtained from all the cases are tabulated in Results.

Now, to obtain Allocated PRBs percentage:

- Follow step 1, and then instead of adding EWMA MAC Throughput add Allocated PRBs to Values section.
- Now, right click on the values and select ‘show values as’ section then select ‘% of Grand Total’ and click on OK as shown below.

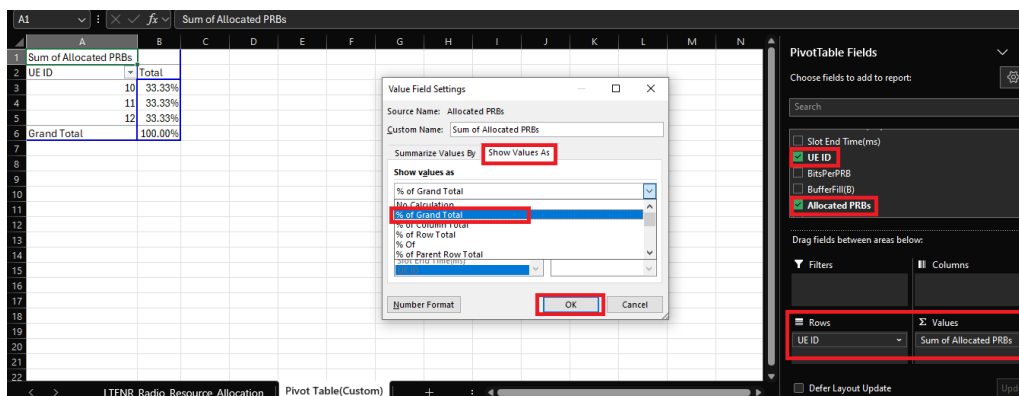


Figure 4-94: Obtaining Resource Utilization

- On the left side table, you can see the values.
- The values obtained from all the cases are tabulated in Results.

4.15.7 Results and Discussion

Let’s analyze the Application Throughputs and MAC Throughputs obtained by 3 UEs in results dashboards in all the three different cases discussed above:

Table 4-70: *Application Throughputs*

Case #	Description	UE1 (Mbps)	UE2 (Mbps)	UE3 (Mbps)
1	Proportional Fair Scheduling (PFS). All UEs static.	64.65	37.22	19.59
2	PFS with RG using Guaranteed Bit Rate (GBR). All UEs static.	61.26	35.27	21.64
3	PFS with RG using GBR. UE 3 is mobile.	33.23	19.13	20.83

Table 4-71: *MAC Throughputs*

Case #	Description	UE1 (Mbps)	UE2 (Mbps)	UE3 (Mbps)
1	Proportional Fair Scheduling (PFS). All UEs static.	82.34	47.40	24.59
2	PFS with RG using GBR. All UEs static.	78.03	44.92	27.56
3	PFS with RG using GBR. UE 3 is mobile.	42.34	24.38	26.53

Table 4-72: *Resource allocation*

Case #	Description	UE1 (%)	UE2 (%)	UE3 (%)
1	Proportional Fair Scheduling (PFS). All UEs static.	33.33	33.33	33.33
2	PFS with RG using GBR. All UEs static.	31.59	31.59	36.83
3	PFS with RG using GBR. UE 3 is mobile.	17.14	17.14	65.73

Case-1: Proportional Fair (PF) Algorithm

- Under standard PFS, the algorithm distributes Physical Resource Blocks (PRBs) uniformly among the three UEs, with each receiving approximately 33.33% of the resources. This results in decreasing throughputs as distance from the gNB increases – UE1 achieves 64.65 Mbps, UE2 gets 37.22 Mbps, and UE3 receives 19.59 Mbps at the application layer.

Case-2: GBR with Static UEs

- When GBR is enabled for UE3 with a target rate of 27.57 Mbps, we observe the index bias mechanism actively working to guarantee this rate. The scheduler increases the bias factor for UE3, resulting in its PRB allocation increasing from 33.33% to 36.83%.
- This resource reallocation successfully raises UE3's throughput from 19.59 Mbps to 21.64 Mbps at the application layer, achieving the target MAC layer throughput of 27.56 Mbps.
- However, this comes at the cost of reduced resources for other UEs – UE1's throughput drops from 64.65 Mbps to 61.26 Mbps, and UE2's decreases from 37.22 Mbps to 35.27 Mbps.

Case-3: GBR with Mobile UE

- As UE3 begins moving away from the gNB, we observe a complex interplay between distance, channel conditions, and the index bias mechanism.
- Initially, as UE3's throughput starts dropping due to increased distance, the index bias increases to compensate, pulling more resources from UE1 and UE2. Their throughputs drop significantly – UE1 falls to 33.23 Mbps and UE2 to 19.13 Mbps.
- As UE3 moves even further away, the scheduler dramatically increases the index bias in an attempt to maintain the GBR. This results in UE3 being allocated nearly 65.73% of all PRBs, leaving only about 17.14% each for UE1 and UE2.
- Despite this extreme resource reallocation, UE3's throughput still falls to 20.83 Mbps, unable to meet the GBR target due to poor channel conditions at the increased distance. Meanwhile, the throughputs of UE1 and UE2 are severely impacted due to their minimal resource allocation.

This behavior demonstrates both the power and limitations of the index bias mechanism in GBR implementation – while it can effectively guarantee bit rates under most conditions by redistributing resources, there are physical limitations that cannot be overcome simply by increasing resource allocation when channel conditions become too poor.

5 Omitted Features

- The omitted features in the PHY layer are mentioned in 3.9.1.
- Wireshark packet capture for 5G MAC
- Broadcast transmissions
- Implementation of ROHC ([rfc 5795](#)) for header compression and decompression of IP data flow
- Application
 - Different resource type and priority levels for applications
- RRC
 - Modification and release of RRC connection
- PDCP
 - ciphering and deciphering
 - integrity protection
 - for split bearers, routing
- MAC
 - Random access procedure
 - PCH
 - BCH

- DRx
 - S-cells
 - BWP operation
 - SUL operation
 - Beam failure detection
 - MAC CE
 - RNTI
 - MAC header
- Miscellaneous
 - In-sequence delivery of upper layer PDUs at re-establishment of lower layers
 - Duplicate elimination of lower layer SDUs at re-establishment of lower layers for radio bearers mapped on RLC AM.
 - Timer based discard and Duplicate discarding.

6 References

- [1] A. Goldsmith, *Wireless Communications*. Stanford University. [Online]. Available: https://web.stanford.edu/class/archive/ee/ee359/ee359.1062/cup_mimo.pdf [Accessed: Nov. 20, 2020.]
- [2] M. Viswanathan, “Ricean flat-fading channel,” in *Wireless Communication Systems in MATLAB, Gaussian Waves*, 2020, pp. 172–173.
- [3] E. Telatar, “Capacity of Multi-antenna Gaussian Channels,” [Online]. Available: http://web.mit.edu/18.325/www/telatar_capacity.pdf. [Accessed 08 11 2020].
- [4] N. Patriciello, S. Lagen, L. Giupponi and B. Bojovic, “5G New Radio Numerologies and their Impact on the End-To-End Latency,” *IEEE 23rd International Workshop on Computer Aided Modeling and Design of Communication Links and Networks (CAMAD)*, 2018.
- [5] M. Mezzavilla, M. Zhang, M. Polese, R. Ford, S. Dutta, S. Rangan and M. Zorzi, “End-to-End Simulation of 5G mmWave Networks,” *IEEE Communication Surveys & Tutorials*, Vol 20, No. 3, Third Quarter, 2018.
- [6] A. Duran, M. Toril, F. Ruiz and A. Mendo, “Self-Optimization Algorithm for Outer Loop Link Adaptation in LTE,” *IEEE Communications Letters*, 2015.
- [7] E. Makridis, “Reinforcement Learning for Link Adaptation in 5G-NR Networks,” *KTH Royal Institute of Technology, Sweden*, 2020.